Resona I8W/Resona I8/Resona I8 Exp/ Resona I8S/Resona I8T/Resona IY/ Resona I8 Easi/Eagus I8 Easi/Nuewa I8W/ Nuewa I8/Nuewa I8 Exp/Nuewa I8S/ Nuewa I8T/Imagyn I8/Imagyn I8S/Imagyn I8T/Imagyn I8 Exp/Nuewa IY

Diagnostic Ultrasound System

Operator's Manual

[Basic Volume]

©2025 Shenzhen Mindray Bio-Medical Electronics Co., Ltd. All Rights Reserved. For this Operator's Manual, the issue date is 2025-01.

Intellectual Property Statement

SHENZHEN MINDRAY BIO-MEDICAL ELECTRONICS CO., LTD. (hereinafter called Mindray) owns the intellectual property rights to this Mindray product and this manual. This manual may refer to information protected by copyright or patents and does not convey any license under the patent rights or copyright of Mindray, or of others.

Mindray intends to maintain the contents of this manual as confidential information. Disclosure of the information in this manual in any manner whatsoever without the written permission of Mindray is strictly forbidden.

Release, amendment, reproduction, distribution, rental, adaptation, translation or any other derivative work of this manual in any manner whatsoever without the written permission of Mindray is strictly forbidden.

mind/ay is the trademark, registered or otherwise, of Mindray in China and other countries. All other trademarks that appear in this manual are used only for informational or editorial purposes. They are the property of their respective owners.

This posting serves as notice under 35 U.S.C.§287(a) for Mindray patents:

http://www.mindrayna.com/patents.

Responsibility on the Manufacturer Party

Contents of this manual are subject to change without prior notice.

All information contained in this manual is believed to be correct. Mindray shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.

Mindray is responsible for the effects on safety, reliability and performance of this product, only if:

- all installation operations, expansions, changes, modifications and repairs of this product are conducted by Mindray authorized personnel;
- the electrical installation of the relevant room complies with the applicable national and local requirements; and
- the product is used in accordance with the instructions for use.

NOTE:

This equipment must be operated by skilled/trained clinical professionals.

MARNING

It is important for the hospital or organization that employs this equipment to carry out a reasonable service/maintenance plan. Neglect of this may result in machine breakdown or personal injury.

Warranty

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

Exemptions

Mindray's obligation or liability under this warranty does not include any transportation or other charges or liability for direct, indirect or consequential damages or delay resulting from the improper use or application of the product or the use of parts or accessories not approved by Mindray or repairs by people other than Mindray authorized personnel.

This warranty shall not extend to:

- Malfunction or damage caused by improper use or man-made failure.
- Malfunction or damage caused by unstable or out-of-range power input.
- Malfunction or damage caused by force majeure such as fire and earthquake.
- Malfunction or damage caused by improper operation or repair by unqualified or unauthorized service people.
- Malfunction of the instrument or part whose serial number is not legible enough.
- Others not caused by instrument or part itself.

Customer Service Department

Manufacturer:	Shenzhen Mindray Bio-Medical Electronics Co., Ltd.
Address:	Mindray Building, Keji 12th Road South, High-Tech Industrial Park, Nanshan, Shenzhen, 518057, P. R. China
Website:	www.mindray.com
E-mail Address:	service@mindray.com
Tel:	+86 755 81888998
Fax:	+86 755 26582680

Manufacturer:	Mindray DS USA, Inc.	
Address:	800 MacArthur Blvd.	
	Mahwah, NJ 07430-0619 USA	
Tel:	+1(201) 995-8000	
Toll Free:	+1 (800) 288-2121	
Fax:	+1 (800) 926-4275	

Important Information

- It is the customer's responsibility to maintain and manage the system after delivery.
- The warranty does not cover the following items, even during the warranty period:
 - Damage or loss due to misuse or abuse.
 - Damage or loss caused by Acts of God such as fires, earthquakes, floods, lightning, etc.
 - Damage or loss caused by failure to meet the specified conditions for this system, such as inadequate power supply, improper installation or environmental conditions.

- Damage or loss due to use of the system outside the region where the system was originally sold.
- Damage or loss involving the system purchased from a source other than Mindray or its authorized agents.
- This system shall not be used by persons other than fully qualified and certified medical personnel.
- DO NOT make changes or modifications to the software or hardware of this system.
- In no event shall Mindray be liable for problems, damage, or loss caused by relocation, modification, or repair performed by personnel other than those designated by Mindray.
- The purpose of this system is to provide physicians with data for clinical diagnosis. The physician is responsible for the results of diagnostic procedures. Mindray shall not be liable for the results of diagnostic procedures.
- Important data must be backed up on external memory media.
- Mindray shall not be liable for loss of data stored in the memory of this system caused by operator error or accidents.
- This manual contains warnings regarding foreseeable potential dangers, but you shall also be
 continuously alert to dangers other than those indicated. Mindray shall not be liable for
 damage or loss resulting from negligence or ignorance of the precautions and operating
 instructions described in this operator's manual.
- If a new manager takes over this system, be sure to hand over this operator's manual to the new manager.

About This Manual

This operator's manual describes the operating procedures for this diagnostic ultrasound system and the compatible probes. To ensure safe and correct operation, carefully read and understand the manual before operating the system.

Meaning of Signal Words

In this manual, the signal words **DANGER**, **WARNING**, **CAUTION**, **NOTE** and **TIP** are used regarding safety and other important instructions. The signal words and their meanings are defined as follows. Please understand their meanings clearly before reading this manual.

Signal word	Meaning
⚠ DANGER	Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.
⚠ WARNING	Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.
A CAUTION	Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury.
NOTE	Indicates a potentially hazardous situation that, if not avoided, may result in property damage.
TIP	Important information that helps you to use the system more effectively.

Operator's Manuals

You may receive multi-language manuals on compact disc or paper. Please refer to the English manual for the latest information and registration information.

The content of the operator manual, such as screens, menus or descriptions, may be different from what you see in your system. The content varies depending on the software version, options and configuration of the system.

Hardcopy Manuals

- Operator's Manual [Basic Volume]
 - Describes the basic functions and operations of the system, safety precautions, exam modes, imaging modes, preset, maintenance and acoustic output, etc.
- Operator's Manual [Advanced Volume]
- Operator's Manual [Acoustic Power Data and Surface Temperature Data]
 Contains data tables of acoustic output for transducers.
- Quick Reference Guide
 Contains a quick reference guide for basic system operations.

NOTE

- Manuals on CD are the manuals translated into languages other than English, according to the English manuals.
- If you find that the contents of the manuals on CD are NOT consistent with the system or the English manuals, refer ONLY to the corresponding English manuals.
- The accompanying manuals may vary depending on the specific system you purchased. Please refer to the packing list.

Software Interfaces in this Manual

Depending on the software version, preset settings and optional configuration, the actual interfaces may be different from those in this manual.

Conventions

In this manual, the following conventions are used to describe the buttons on the control panel, items in the menus, buttons in the dialog boxes and some basic operations:

- < Keys>: angular brackets indicate keys, knobs and other controls on the control panel or on the keyboard.
- [Items in menu or buttons in dialog box]: square brackets indicate items in menus, on the soft menu or buttons in dialog boxes.
- Click [Items or Buttons]: move the cursor to the item or button and press <Set> or use the soft key corresponding to the soft menu.
- [Items in menu] > [Items in submenu]: select a submenu item following the path.

Notification of Adverse Events

As a health care provider, you may report the occurrence of certain events to SHENZHEN MINDRAY BIO-MEDICAL ELECTRONICS CO., LTD., and possibly to the competent authority of the Member state in which the user and / or patient is established.

These events, include device-related death and serious injury or illness. In addition, as part of our Quality Assurance Program, SHENZHEN MINDRAY BIO-MEDICAL ELECTRONICS CO.,

LTD. requests to be notified of device failures or malfunctions. This information is required to ensure that SHENZHEN MINDRAY BIO-MEDICAL ELECTRONICS CO., LTD. provides only the highest quality products.

This page intentionally left blank.

Contents

	Intellectual Property Statement	I
	Responsibility on the Manufacturer Party	I
	Warranty	I
	Important Information	II
	About This Manual	III
1	Safety Precautions	1 - 1
	1.1 Meaning of Safety Symbols	1 - 1
	1.2 Safety Precautions	1 - 1
	1.3 Latex Alert	1 - 8
2 :	System Overview	2 - 1
	2.1 Intended Use	2 - 1
	2.2 Contraindication	2 - 1
	2.3 Safety Classifications	2 - 1
	2.4 Product Specifications	2 - 2
	2.4.1 Power supply	2 - 2
	2.4.2 Environmental Conditions	2 - 2
	2.4.3 Dimensions and Weight	2 - 3
	2.5 Product Differences	2 - 3
	2.6 System Configuration	2 - 3
	2.6.1 Standard Configuration	2 - 3
	2.6.2 Probes and Needle-guided Brackets Available	2 - 4
	2.6.3 Options	
	2.6.4 Peripherals Supported	
	2.6.5 Parts that can be used within patient environment	
	2.7 Introduction of Each Unit	
	2.7.1 Power Supply Panel	
	2.7.2 I/O Panel	
	2.7.3 Control Panel	
	2.7.4 Keyboard	
	2.8 Basic Screen & Operation	
	2.8.1 Monitor Display	
	2.8.2 Dialog Box	
	2.8.3 Menu Operation	
	2.8.4 Touch Screen	
	2.10 Sambala	
_	2.10 Symbols	
3	System Preparation	
	3.1 Move/Position the System	
	3.2 Connecting the Power Cord	
	3.2.1 Connecting Power	
	3.2.2 Powered by Batteries	3 - 2

3.2.3 Equipotential Terminal	3 - 3
3.3 Power ON/OFF	3 - 4
3.3.1 Check before Powering ON	3 - 4
3.3.2 Power the System ON	
3.3.3 Checking After Powering On	3 - 5
3.3.4 Power the System Off	3 - 6
3.3.5 Standby	3 - 6
3.4 Monitor Position Adjustment	3 - 6
3.4.1 Height and Displacement Adjustment	3 - 7
3.4.2 Rotate the Monitor	3 - 8
3.4.3 Tilt the Monitor	3 - 8
3.4.4 Lock the Monitor	3 - 8
3.5 Monitor Brightness/Contrast Adjustment	3 - 9
3.6 Control Panel Position Adjustment	3 - 9
3.7 Connecting/Disconnecting a Probe	3 - 10
3.7.1 Connecting a Probe	
3.7.2 Disconnecting a Probe	
3.7.3 Probe Adapter Installation	3 - 12
3.8 Connecting Peripheral Devices	
3.8.1 Connecting USB Devices	
3.8.2 Connecting the Footswitch	
3.8.3 Connecting a Graph/Text Printer	
3.8.4 Connecting a Video Printer	
3.8.5 Connecting a Wireless Printer	
3.8.6 iVocal	3 - 15
4 Setup	<i>l</i> 1
•	
4.1 System Preset	
4.1.1 Region	
4.1.2 General	
4.1.4 Application	
4.1.5 OB	
4.1.6 Key Probe Preset	
4.1.7 Console&Footswitch	
4.1.8 Key Board	
4.1.9 Gesture	
4.1.10 Output	
4.1.11 Access Control	
4.1.12 Scan Code Preset	
4.1.13 WorkStation	
4.1.14 Biopsy	
4.2 Exam Mode Preset	
4.3 Measurement Preset	
4.3.1 General Measurement Preset	
4.3.2 Application Measurement Preset	
4.3.2 Application Measurement Preset	4 - 19
4.3.2 Application Measurement Preset 4.3.3 Report Preset 4.4 Comment Preset	4 - 19 4 - 25
4.3.3 Report Preset	4 - 19 4 - 25 4 - 26

4.4.2 Comment Group Define	4 - 2	27
4.5 iWorks Preset	4 - 2	28
4.5.1 Protocol Management	4 - 2	28
4.5.2 View Management		
4.5.3 Create a New Protocol		
4.6 Stress Echo Preset	4 - 2	29
4.6.1 Protocol Edit	4 - 2	29
4.6.2 Maintenance	4 - 3	30
4.7 DICOM/HL7	4 - 3	30
4.7.1 DICOM Local Preset	4 - 3	30
4.7.2 DICOM Service Preset	4 - 3	32
4.8 Network Preset	4 - 3	38
4.8.1 Network Settings	4 - 3	38
4.8.2 iStorage Preset		
4.8.3 MedSight Preset	4 - 3	39
4.8.4 Q-Path Preset	4 - 4	10
4.8.5 MIOT Preset	4 - 4	11
4.9 Print Preset	4 - 4	11
4.9.1 Print Setting	4 - 4	11
4.9.2 Image Settings	4 - 4	11
4.10 Maintenance	4 - 4	12
4.10.1 Option	4 - 4	12
4.10.2 Exporting Setup Data	4 - 4	12
4.10.3 Importing Setup Data	4 - 4	12
4.10.4 Load Factory	4 - 4	12
4.10.5 Probe Check	4 - 4	12
4.10.6 Other Settings	4 - 4	13
4.11 Security	4 - 4	14
4.11.1 Drive Encryption/Secure Data Wipe	4 - 4	14
4.11.2 Anti-Virus	4 - 4	14
4.12 System Information	4 - 4	15
5 Exam Preparation	.5 -	1
5.1 Patient Information		
5.1.1 New Patient Information		
5.1.2 Retrieve Patient Information		
5.2 Select Exam Mode and Probe	. 5 -	3
5.2.1 Dual-probe Switch	. 5 -	4
5.2.2 Bi-plane Probe Switch		
5.2.3 Selecting Imaging Mode	. 5 -	4
5.3 Activate& Continue an Exam	. 5 -	5
5.3.1 Activate an Exam	. 5 -	5
5.3.2 Continue an Exam	. 5 -	5
5.4 Pause & End an Exam	. 5 -	5
5.4.1 Pause an Exam	. 5 -	5
5.4.2 End an Exam	. 5 -	5
6 Image Acquisition		

6.1.1 Image Adjustment	
6.1.2 Quickly Saving Image Settings	6 - 3
6.2 B Mode	6 - 4
6.2.1 B-mode Image Scanning	6 - 4
6.2.2 B-mode Image Parameters	6 - 4
6.3 Color Mode	6 - 11
6.3.1 Color Mode Image Scanning	6 - 11
6.3.2 Color Mode Image Parameters	6 - 11
6.4 Power Mode	
6.4.1 Power Mode Image Scanning	
6.4.2 Power Mode Image Parameters	
6.5 V Flow	
6.5.1 Basic Operations	
6.5.2 Image Optimization	
6.6 M Mode	
6.6.1 M Mode Image Scanning	
6.6.2 M Mode Image Parameters	
6.7 Color M Mode (CM)	
6.7.1 CM Image Scanning	
6.7.2 CM Image Parameters	
6.8 Anatomical M Mode	
6.8.1 Free Xros M	
6.8.2 Free Xros CM (Curved Anatomical M-Mode)	
6.8.3 Anatomical M Mode Parameters	
6.9 PW/CW Mode	
6.9.1 PW/CW Mode Image Scanning	
6.9.2 PW/CW Mode Image Parameters	
6.10 TDI	
6.10.1 TDI Mode Image Scanning	6 - 29
6.10.2 TDI Mode Image Parameters	
6.10.3 TDI Quantitative Analysis	6 - 30
6.11 iScape View	6 - 33
6.11.1 Basic Procedures	6 - 33
6.11.2 Image Review	6 - 34
6.11.3 Evaluate image quality	
6.11.4 Cine Review	6 - 35
6.12 R-VQS	6 - 36
6.13 Smart B-line	6 - 37
6.13.1 Basic Procedures for Smart B-line	6 - 38
6.13.2 Overview	6 - 39
6.14 RIMT (Real-time Intima-Media Thickness)	6 - 39
6.15 Tissue Tracking Quantitative Analysis	
6.15.1 Basic Procedures for Tissue Tracking QA	
6.15.2 Screen Display of Tissue Tracking QA	
6.15.3 Select Image and Cardiac Cycle	
6.15.4 Myocardial Boundary Tracing	
6.15.5 Basic Operations of TTQA	
6.15.6 Bulleye	

6.15.7 Measurement/Comment	46
6.15.8 Data Export	46
6.15.9 FH Tissue Tracking QA6	46
6.16 Fusion Imaging6	47
6.16.1 Overview6	47
6.16.2 Magnetic Positioning System	48
6.16.3 Screen Description6	53
6.16.4 Basic Procedures6	54
6.16.5 Acquiring/Importing Volume Data6	58
6.16.6 Marks 6 -	60
6.16.7 Respiratory Compensation	63
6.16.8 Freehand 3D6	66
6.16.9 Parameter Settings6	66
6.16.10 Rotating/Scrolling CT/MR/PET/Freehand Image	68
6.16.11 Measuring 6 -	69
6.16.12 Comment and Body Mark6	69
6.17 Smart Fetal HR (Heart Rate)	69
6.18 Smart VTI	70
6.19 Smart IVC6 -	
6.20 IOTA (International Ovarian Tumor Analysis)	
6.21 iWorks (Auto Workflow Protocol)	
6.21.1 Screen Display	
6.21.2 View Operation 6	
•	
h / L i Manijai Evamination	15
6.21.3 Manual Examination 6.	75
6.21.4 Insert	
6.21.4 Insert	75
6.21.4 Insert	75 - 1
6.21.4 Insert	75 - 1
6.21.4 Insert	75 - 1 - 1
6.21.4 Insert 6 - 6.21.5 Create 6 - D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7	75 - 1 - 1 - 1 - 2
6.21.4 Insert 6-6.21.5 Create 6-7.1 Overview 7.1.1 Terms 7	75 - 1 - 1 - 1 - 2
6.21.4 Insert 6 - 6.21.5 Create 6 - D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7	75 - 1 - 1 - 1 - 2 - 3
6.21.4 Insert 6- 6.21.5 Create 6- D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7	- 75 - 1 - 1 - 2 - 3 - 3
6.21.4 Insert 6- 6.21.5 Create 6- D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7	75 - 1 - 1 - 2 - 3 - 3 - 4 - 4
6.21.4 Insert 6- 6.21.5 Create 6- D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7	75 - 1 - 1 - 2 - 3 - 3 - 4 - 4
6.21.4 Insert 6- 6.21.5 Create 6- D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7	- 75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 4
6.21.4 Insert 6- 6.21.5 Create 6- D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7 7.2 Note before Use 7	- 75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 4 - 6
6.21.4 Insert 6- 6.21.5 Create 6- O/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7 7.2 Note before Use 7 7.3 Static 3D 7	- 75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 6 - 6
6.21.4 Insert 6- 6.21.5 Create 6- D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7 7.2 Note before Use 7 7.3 Static 3D 7 7.3.1 Basic Procedures for Static 3D Imaging 7	- 75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 6 - 6 - 8
6.21.4 Insert 6- 6.21.5 Create 6- D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7 7.2 Note before Use 7 7.3 Static 3D 7 7.3.1 Basic Procedures for Static 3D Imaging 7 7.3.2 Static 3D Acquisition Preparation 7	- 75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 6 - 6 - 8 - 8
6.21.4 Insert 6- 6.21.5 Create 6- D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7 7.2 Note before Use 7 7.3 Static 3D 7 7.3.1 Basic Procedures for Static 3D Imaging 7 7.3.2 Static 3D Acquisition Preparation 7 7.3.3 Static 3D Image Viewing 7	75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 6 - 8 - 8 15
6.21.4 Insert 6- 6.21.5 Create 6- D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7 7.2 Note before Use 7 7.3 Static 3D 7 7.3.1 Basic Procedures for Static 3D Imaging 7 7.3.2 Static 3D Acquisition Preparation 7 7.3.3 Static 3D Image Viewing 7 7.4 Color 3D 7	75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 6 - 8 - 8 15
6.21.4 Insert 6. 6.21.5 Create 6. D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7 7.2 Note before Use 7 7.3 Static 3D 7 7.3.1 Basic Procedures for Static 3D Imaging 7 7.3.2 Static 3D Acquisition Preparation 7 7.3.3 Static 3D Image Viewing 7 7.4 Color 3D 7 7.4.1 Basic Procedures for Color 3D 7	75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 6 - 6 - 8 - 8 15 16
6.21.4 Insert 6 - 6.21.5 Create 6 - D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7 7.2 Note before Use 7 7.3 Static 3D 7 7.3.1 Basic Procedures for Static 3D Imaging 7 7.3.2 Static 3D Acquisition Preparation 7 7.3.3 Static 3D Image Viewing 7 7.4 Color 3D 7 7.4.1 Basic Procedures for Color 3D 7 7.4.2 Operation Controls 7	75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 6 - 8 - 8 15 16
6.21.4 Insert 6 6.21.5 Create 6 D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7 7.2 Note before Use 7 7.3 Static 3D 7 7.3.1 Basic Procedures for Static 3D Imaging 7 7.3.2 Static 3D Acquisition Preparation 7 7.3.3 Static 3D Image Viewing 7 7.4 Color 3D 7 7.4.1 Basic Procedures for Color 3D 7 7.4.2 Operation Controls 7 7.5 4D 7	75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 6 - 8 - 8 15 16 16
6.21.4 Insert 6 - 6.21.5 Create 6 - D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7 7.2 Note before Use 7 7.3 Static 3D 7 7.3.1 Basic Procedures for Static 3D Imaging 7 7.3.2 Static 3D Acquisition Preparation 7 7.3.3 Static 3D Image Viewing 7 7.4 Color 3D 7 7.4.1 Basic Procedures for Color 3D 7 7.4.2 Operation Controls 7 7.5.1 4D Procedures 7	75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 6 - 8 - 8 15 16 16 17
6.21.4 Insert 6 6.21.5 Create 6 D/4D 7 7.1 Overview 7 7.1.1 Terms 7 7.1.2 ROI and VOI 7 7.1.3 About the probes 7 7.1.4 MPR 7 7.1.5 Free View 7 7.1.6 Wire cage 7 7.3 Static 3D 7 7.3.1 Basic Procedures for Static 3D Imaging 7 7.3.2 Static 3D Acquisition Preparation 7 7.3.3 Static 3D Image Viewing 7 7.4 Color 3D 7 7.4.1 Basic Procedures for Color 3D 7 7.4.2 Operation Controls 7 7.5.1 4D Procedures 7 7.5.2 4D Acquisition Preparation 7	75 - 1 - 1 - 2 - 3 - 3 - 4 - 4 - 6 - 8 - 8 15 16 16 17 17

8

7.6.2 Smart 3D Acquisition Preparation	7 - 18
7.7 STIC (Spatio-Temporal Image Correlation)	7 - 19
7.8 iLive	7 - 20
7.9 3D Layout	7 - 22
7.10 3D Reference Point	7 - 23
7.11 3D-Print Format	7 - 23
7.12 Smart Volume	7 - 24
7.12.1 Basic Procedure	
7.12.2 Result Display	
7.12.3 Operation Controls	
7.13 iPage+	7 - 28
7.13.1 Operating Procedures	
7.13.2 Basic Screen & Operation	
7.14 SCV+	
7.14.1 Basic Procedures	
7.14.2 Operation Controls	
7.15 Smart Planes CNS	
7.15.1 Basic Procedures for Smart Planes CNS	
7.15.2 Smart ICV	
7.15.3 Other Operations	
7.16 Smart FLC (Smart Follicles Calculation)	
7.16.1 Basic Procedures	
7.16.2 Operation Controls	
7.17 Smart Planes FH (Smart Planes on Fetal Heart)	
7.17.1 Basic Procedures	
7.17.2 Operation Controls	
7.18 Smart Face	
7.18.1 Parameter adjusting	
7.19 Volume CEUS	
7.20 Smart Scene 3D	
7.21 Smart ERA	
7.21 Shiart ERA	
7.21.2 Operation Controls	
7.21.3 Result Display	
lastography	8 - 1
8.1 Strain Elastography	8 - 1
8.1.1 Basic Procedure for Strain Elastography	8 - 1
8.1.2 Image Parameters	8 - 1
8.1.3 Mass Measurement	8 - 3
8.1.4 Cine Review	8 - 3
8.2 STE Imaging (Sound Touch Elastography)	8 - 3
8.2.1 Basic Procedures for STE Imaging	8 - 3
8.2.2 Image Parameters	8 - 4
8.2.3 Measuring	
8.2.4 Cine Review	
8.3 STQ Imaging (Sound Touch Quantification)	8 - 7
8.3.1 Basic Procedures for the STO Imaging	8 - 7

8.3.2 Image Parameters	8 - 8
8.4 Fatty Liver Lab	8 - 10
8.4.1 USAT	8 - 10
8.4.2 HRI+	8 - 12
8.4.3 Image Parameters	8 - 13
9 Contrast Imaging	9 - 1
9.1 Basic Procedures for Contrast Imaging	
9.2 Left Ventricular Opacification	
9.3 CEUS Chrono-Parametric Mode	
9.3.1 2D	
9.3.2 4D	
9.4 TCMR (Tissue-Contrast Mix Rendering)	
9.5 Image Parameters	
9.5.1 Micro Flow Enhancement	
9.6 Contrast Imaging QA	9 - 8
10 Physiological Unit Signal	10 - 1
10.1 ECG	10 - 2
10.1.1 ECG Triggering	10 - 2
10.1.2 ECG Review	10 - 3
10.2 Respiratory Wave	10 - 3
10.3 PCG	10 - 4
10.3.1 PCG Operation Basic Procedures	10 - 4
10.3.2 PCG Sensor Cleaning	10 - 5
10.4 Parameter Description	10 - 6
11 Stress Echo	11 - 1
11.1 Stress Echo Acquisition Procedure	11 - 1
11.2 Selecting Preferred Stress Echo Loops (Select Mode)	11 - 2
11.3 Review/WMS Mode	11 - 4
11.3.1 Enter review mode	11 - 4
11.3.2 Wall Motion Scoring	11 - 5
11.4 Saving Stress Echo Data	11 - 6
11.5 Exiting the Stress Echo Feature	11 - 6
11.6 Measurement and Report	11 - 6
12 Smart Pelvic	12 - 1
12.1 Two Dimensional Image	12 - 1
12.2 3D/4D image data	12 - 2
13 Display & Cine Review	13 - 1
13.1 Splitting Display	
13.2 Image Magnification	
13.2.1 Res Zoom	
13.2.2 Pan Zoom	
13.2.3 Spot Zoom	
13.2.4 iZoom (Full-screen Zooming)	
13.3 Freeze/Unfreeze the Image	
13 / Cine Review	12 2

13.4.1 Entering/Exiting Cine Review	13 - 3
13.4.2 2D Cine Review	13 - 3
13.4.3 Cine Review in M/PW/CW/TVD Mode	13 - 5
13.4.4 Linked Cine Review	13 - 5
13.5 Image Compare	13 - 6
13.5.1 Image Compare in Review Mode	13 - 6
13.5.2 Frame Compare	13 - 6
13.5.3 iCompare	13 - 7
13.6 Cine Saving	13 - 7
13.7 Setting Cine Length	
13.7.1 Live capture	
13.7.2 Freeze Storage Setting	
14 Measurement, Comments and Body Mark	
14.1 Measurement	
14.2 Comments	
14.2.1 Comments Basic Procedures	
14.2.2 Touch Screen Displaying	
14.2.3 Adding Comments	
14.2.4 Moving Comments	
14.2.5 Editing Comments	
14.2.6 Deleting Comments	
14.3 Voice Comments	
14.3.1 Voice Comment Panel	
14.3.2 Adding Voice Comments	
14.3.3 Voice Comment Review	
14.4 Body Mark	
14.4.1 Touch Screen Display in Body Mark	
14.4.2 Adding Body Mark	
14.4.3 Moving Body Marks	
14.4.4 Deleting Body Marks	14 - 10
15 DICOM/HL7	15 - 1
15.1 DICOM Storage	15 - 2
15.1.1 Send images on iStation/Review/Main screens	
15.1.2 To send images using a shortcut key	
15.1.3 To send images to storage after an exam ends	
15.1.4 Structured Report (SR)	
15.1.5 Encapsulate PDF	
15.1.6 Unload DCM file	15 - 3
15.2 DICOM Print	15 - 3
15.3 Worklist	15 - 4
15.4 MPPS	
15.5 Storage Commitment	
15.5.1 Storage commitment after sending images on the iStation screen	
15.5.2 To send storage commitment automatically after an exam ends	
15.6 Query/Retrieve	
15.7 DICOM Media Storage (DICOMDIR Review)	
15.7 1 Media Storage	

15.7.2 Media review	15 - 7
15.7.3 Data Restore	15 - 7
15.8 Showcase Recording	15 - 8
16 Patient Data Management	16 - 1
16.1 Image File Management	16 - 1
16.1.1 Storage Media	16 - 1
16.1.2 Image File Formats	16 - 1
16.1.3 Image Storage Setting	16 - 2
16.1.4 Saving Images to the System	16 - 2
16.1.5 Saving Images/Cines File to USB Flash Drive	16 - 2
16.1.6 Auxiliary Output Function	16 - 2
16.1.7 Thumbnails	16 - 3
16.1.8 Image Review	16 - 3
16.1.9 Image Analysis	16 - 4
16.1.10 Sending Image File	16 - 5
16.2 Report Management	16 - 6
16.2.1 Report storage	16 - 6
16.2.2 Importing, exporting and sending a report	16 - 6
16.3 Patient Data Management (iStation)	16 - 7
16.3.1 Searching a Patient	16 - 7
16.3.2 Patient Data View & Management	16 - 7
16.4 Recycle bin	16 - 8
16.5 iStorage	16 - 9
16.6 u-Link	16 - 9
16.7 Print	16 - 9
16.7.1 Image Print	
16.7.2 Report Printing	
16.8 Back up Files using the DVD Drive	
16.9 Patient Task Management	
16.10 Q-Path	
16.11 V-Access	
17 Probes and Biopsy	17 - 1
17.1 Probes	17 - 1
17.1.1 Probe Functions by Part	17 - 3
17.1.2 Orientation of the Ultrasound Image and the Probe	17 - 4
17.1.3 Procedures for Operating	17 - 5
17.1.4 Wearing the Probe Sheath	17 - 7
17.1.5 Probes Cleaning and Disinfection/Sterilization	
17.1.6 Probe Environmental Conditions	17 - 9
17.1.7 Storage and Transportation	
17.1.8 Sensor (Fusion Imaging) Support Cleaning and Disinfection	
17.1.9 Storage and Transportation for Sensor Support (Fusion)	
17.1.10 Sensor (Fusion Imaging) Cleaning and Disinfection	
17.2 Biopsy Guide	
17.2.1 Needle-guided Brackets Available	
17.2.2 Needle-Guided Bracket Installation and Removal	
17.2.3 Verifying the Biopsy Guide Line	17 - 56

Operator's Manual ix

17.2.4 Starting the biopsy procedure	17 - 57
17.2.5 iNeedle (Needle Visualization Enhancement)	
17.2.6 Clean and Sterilize the Needle-Guided Bracket	
17.2.7 Storage and Transportation	17 - 60
17.2.8 Disposal	17 - 60
17.3 Needle Navigation Guiding	17 - 60
17.3.1 Basic Procedures for Needle Navigation Guiding	17 - 62
17.3.2 Installation	17 - 63
17.3.3 Accuracy Verification	17 - 69
17.3.4 Mark	17 - 70
17.3.5 Screen Display in the Guiding	17 - 71
17.3.6 Disposal	17 - 73
17.4 Middle Line	17 - 73
18 DVR Recording	18 - 1
18.1 Start Recording	18 - 1
18.2 Send Image	18 - 1
18.3 DVR Video Replay	
18.3.1 Replay on PC	
18.3.2 Replay on the ultrasound system	
19 System Maintenance	10 _ 1
19.1 Daily Maintenance	
19.1.1 Cleaning the System	
19.1.2 Cleaning the peripherals	
19.1.3 Common inspections	
19.1.4 Inspection of Peripherals and Optional Functions	
19.1.5 System Hard Drive Backup	
19.2 System Function Inspection	
19.3 Troubleshooting	19 - 9
A Barcode Reader	A - 1
A.1 1-D Barcode Reader	
A.1.1 Setting Up the Reader (Take LS2208 as an example)	
A.1.2 Setting	
A.1.3 Scanning in Hand-Held Mode	
A.1.4 Scanning in Hands-Free Mode	
A.2 2D Barcode Reader (Take DS4308 as an example)	
A.2.1 Overview	
A.2.2 Setting Up the Digital Imager Reader	A - 7
A.2.3 Setting	A - 8
A.2.4 Scanning in Hand-Held Mode	
A.3 Parameter Defaults	A - 11
B Wireless LAN	B - 1
B.1 Use the Wireless Feature	
B.2 IP Configure	
B.3 EAP Network	
C ScanHalnon	

	C.1 Use iScanHelper for Reference	C - 1
	C.2 Use iScanHelper for Learning or Training	C - 1
	C.3 Basic Screen and Operation	С - 2
	C.4 Single/quad-window Display	С - 2
	C.5 Measurement, Comments, and Body Mark	C - 2
D i	iVision	D - 1
	Acoustic Output	
	E.1 Concerns with Bioeffects	
	E.2 Prudent Use Statement	E - 1
	E.3 ALARA Principle (As Low As Reasonably Achievable)	E - 1
	E.4 MI/TI Explanation	E - 2
	E.4.1 Basic Knowledge of MI and TI	E - 2
	E.4.2 MI/TI Display	E - 3
	E.5 Acoustic Power Setting	
	E.6 Acoustic Power Control	
	E.7 Acoustic Output	
	E.7.1 Derated Ultrasonic Output Parameters	
	E.7.2 Limits of Acoustic Output	
	E.7.3 Differences between Actual and Displayed MI and TI	
	E.8 Measurement Uncertainty	
	E.9 References for Acoustic Power and Safety	
F I	Electrical Safety Inspection	
	F.1 Power Cord Plug	
	F.2 Device Enclosure and Accessories	F - 2
	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection	F - 2
	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection	F - 2 F - 2 F - 2
	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling	F - 2 F - 2 F - 2
	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance	F - 2F - 2F - 2F - 2F - 2
	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test	F - 2F - 2F - 2F - 2F - 2F - 2
	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test	F - 2 F - 2 F - 2 F - 2 F - 2 F - 2 F - 2 F - 2 F - 2 F - 2
	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current	F - 2F - 2F - 2F - 2F - 2F - 2F - 3
	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current F.8 Mains on Applied Part Leakage	F - 2 F - 2 F - 2 F - 2 F - 2 F - 2 F - 2 F - 3 F - 3 F - 3
	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current F.8 Mains on Applied Part Leakage F.9 Patient Auxiliary Current	F - 2 F - 2 F - 2 F - 2 F - 2 F - 2 F - 2 F - 3 F - 3 F - 3 F - 4
	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current F.8 Mains on Applied Part Leakage F.9 Patient Auxiliary Current EMC Guidance and Manufacturer's Declaration	F - 2F - 2F - 2F - 2F - 2F - 3F - 3F - 4F - 4
	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current F.8 Mains on Applied Part Leakage F.9 Patient Auxiliary Current	F - 2F - 2F - 2F - 2F - 2F - 3F - 3F - 4F - 4
H]	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current F.8 Mains on Applied Part Leakage F.9 Patient Auxiliary Current EMC Guidance and Manufacturer's Declaration	F - 2F - 2F - 2F - 2F - 2F - 3F - 3F - 4F - 4F - 4
H]	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current F.8 Mains on Applied Part Leakage F.9 Patient Auxiliary Current EMC Guidance and Manufacturer's Declaration List of Vocal Commands	F - 2F - 2F - 2F - 2F - 2F - 3F - 3F - 4F - 4F - 4F - 1H - 1
H]	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current F.8 Mains on Applied Part Leakage F.9 Patient Auxiliary Current EMC Guidance and Manufacturer's Declaration List of Vocal Commands Ultrasound Gel Heater	F - 2F - 2F - 2F - 2F - 2F - 3F - 3F - 4F - 4F - 4F - 1F - 1
H]	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current F.8 Mains on Applied Part Leakage F.9 Patient Auxiliary Current EMC Guidance and Manufacturer's Declaration List of Vocal Commands Jltrasound Gel Heater I.1 Structure I.2 Specifications I.3 Function and Requirement	F - 2F - 2F - 2F - 2F - 2F - 3F - 3F - 4F - 4F - 4F - 1I - 1I - 1I - 1
H]	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current F.8 Mains on Applied Part Leakage F.9 Patient Auxiliary Current EMC Guidance and Manufacturer's Declaration List of Vocal Commands Jtrasound Gel Heater I.1 Structure I.2 Specifications	F - 2F - 2F - 2F - 2F - 2F - 3F - 3F - 4F - 4F - 4F - 1I - 1I - 1I - 1
H I	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current F.8 Mains on Applied Part Leakage F.9 Patient Auxiliary Current EMC Guidance and Manufacturer's Declaration List of Vocal Commands Jltrasound Gel Heater I.1 Structure I.2 Specifications I.3 Function and Requirement I.4 Install the Heater	F - 2F - 2F - 2F - 2F - 2F - 3F - 3F - 4F - 4F - 1I - 1I - 1I - 1I - 2I - 2
H I	F.2 Device Enclosure and Accessories F.2.1 Visual Inspection F.2.2 Contextual Inspection F.3 Device Labeling F.4 Protective Earth Resistance F.5 Earth Leakage Test F.6 Enclosure Leakage Test F.7 Patient Leakage Current F.8 Mains on Applied Part Leakage F.9 Patient Auxiliary Current EMC Guidance and Manufacturer's Declaration List of Vocal Commands Jltrasound Gel Heater I.1 Structure I.2 Specifications I.3 Function and Requirement	F - 2F - 2F - 2F - 2F - 2F - 3F - 3F - 4F - 4F - 4F - 1I - 1I - 1I - 1I - 2I - 2I - 2

K Indications For Use	K - 1
J.6 Security Policy	J - 5
J.5 Interoperability	
J.4 Wireless Specification	J - 3
J.3 Electronic Interface	J - 2

xii Operator's Manual

1 Safety Precautions

1.1 Meaning of Safety Symbols

Symbol	Description
*	Type-BF applied part The ultrasound probes connected to this system are type-BF applied parts. The PCG leads within this system is type-BF applied part.
\wedge	General warning sign.
	Patient injury or tissue damage from ultrasonic radiation. The ALARA principle must be practiced when operating the ultrasound system.

1.2 Safety Precautions

Please observe the following precautions to ensure patient and operator's safety when using this system.

M DANGER

Do not operate this system and probes in an atmosphere containing flammable gases or liquids such as anesthetic gases, hydrogen, and ethanol, because there is danger of explosion.

MARNING

- Do connect the power plug of this system to wall receptacles that meet the ratings indicated on the rating nameplate. If adapters or multifunctional receptacles are used, it may cause the leakage current to exceed the safety requirement.
- In the environment that patient is 1.5 meters around, connect peripherals to the auxiliary power outlet, or power the peripherals by auxiliary output cable or isolation transformer complied with IEC60601-1 or the power input of the same safety level.
- DO NOT use power supply of different phases to power peripherals, like power supply of air-conditioning.

Operator's Manual

- When using peripherals not powered by the auxiliary output of the
 ultrasound system, or using peripherals other than permitted by Mindray,
 make sure the overall leakage current of peripherals and the ultrasound
 system meets the requirement of the local medical device electrical
 regulation (like enclosure leakage current should be no more than 500 uA
 of IEC60601-1), and the responsibility is held by the user.
- Connect the grounding conductor before turning ON the system.
 Disconnect the grounding cable after turning OFF the system. Otherwise, electric shock may result.
- For the connection of power and grounding, follow the appropriate
 procedures described in this operator's manual. Otherwise, there is risk of
 electric shock. Do not connect the grounding cable to a gas pipe or water
 pipe; otherwise, improper grounding may result or a gas explosion may
 occur.
- Before cleaning the system, disconnect the power cord from the outlet.
 System failure and electric shock may result.
- This system is not water-proof designed. Do Not use this system in any
 place where water or any liquid leakage may occur. If any water is sprayed
 on or into the system, electric shock may result or the system may be
 damaged. If water is accidentally sprayed on or into the system, contact
 Mindray Customer Service Department or sales representative.
- DO NOT use a probe that has a damaged, scratched surface, or exposed wiring of any kind. Immediately stop using the probe and contact Mindray Customer Service Department or sales representative. There is risk of electric shock if using a damaged or scratched transducer.
- Do not allow the patient to contact the live parts of the ultrasound system or other devices, e.g. signal I/O ports. Electric shock may occur.
- Do not use an aftermarket probe other than those specified by Mindray. The probes may damage the system causing a profound failure, e.g. a fire in the worst case.
- Do not subject the transducers to knocks or drops. Use of a defective transducer may cause an electric shock.
- Do not open the covers and front panel of the system. Short circuit or electric shock may result when the system hardware is exposed and powered on.
- Do not use the system with the patient when the system is being serviced or maintained.
- Do not use this system when any digital device such as a high-frequency electrotome or high-frequency therapeutic device is applied already.
 Otherwise, there is a risk of electric shock to the patient.
- Only use the ECG leads provided with the physiology module; otherwise, electric shock may be resulted.
- When moving the system, you should hold the handle; otherwise, damage may be resulted by abnormal force. Do not push the system from the left/ right side, otherwise, it may be toppled over.

1 - 2 Operator's Manual

- The auxiliary power output outlet in the system is used to supply power for the recommended peripheral devices. Do not connect other devices to the outlet, otherwise, the rated output power may be exceeded and failure may be resulted.
- Accessory equipment (analog or digital) connected to the ultrasound system must comply with the relevant IEC standards (e.g., IEC 60950 information technology equipment safety standard and IEC 60601-1 medical equipment standard). Furthermore, all configurations must comply with the standard IEC60601-1. It is the responsibility of the person, who connects additional equipment to the signal input or output ports and configures a medical system, to verify that the system complies with the requirements of IEC60601-1. If you have any questions regarding these requirements, consult your vendor.
- Prolonged and repeated use of keyboards may result in hand or arm nerve disorders for some individuals. Observe the local safety or health regulations concerning the use of keyboards.
- It is not allowed for the operator to have contact with other patients and the electronic parts (such as the input/output terminal of the signal) of other devices that are connected to the system. Otherwise, it may produce the electrical shock to the patient.
- When using a probe, pay attention to the status of the ultrasound image.
 Do not use the probe to perform image acquisition when the image is frozen.
- Do not modify this equipment without authorization of the manufacturer.
- An additional multiple socket-outlet or extension cord shall not be connected to the system.
- To avoid the risk of electric shock, this equipment must only be connected to a supply mains with protective earth.
- Connecting electrical equipment to MSO effectively leads to creating an ME SYSTEM, and can result in a reduced level of safety.
- Use the pluggable power supply as the net power supply breaking facility.

ACAUTION

- Precautions concerning clinical examination techniques:
 - This system must be used only by qualified medical professionals.
 - This operator's manual does not describe clinical examination techniques. The clinician should select the proper examination techniques based on specialized training and clinical experience.
- Malfunctions due to radio wave:
 - If a radio wave emitting device is used in the proximity of this system, it may interfere with operations. Do not use or take any devices transmitting RF signals (such as cellular phones, transceivers and radio controlled products) in the room placing the system.

Operator's Manual

- If a person brings a device that generates radio waves near the system, ask him/her to immediately turn OFF the device.
- Precautions concerning movement of the system:
 - Please install the system on a flat plane with casters locked. Otherwise, damage may be resulted by accidental moving.
 - Do not move the system laterally, which may result in damage in case of toppling.
 - Move the system slowly on the slope by two people and make sure that the support arm is not extended, otherwise, damage may result in case of unexpected sliding.
 - Do not sit on the system, which may result individual falling in case of system moving.
 - Object placed on the monitor may fall and injure an individual.
 - Fasten and fully secure any peripheral device before moving the system. A loose peripheral device may fall and injure an individual.
 - When moving the system on the steps, please take care to prevent the system from toppling.
- If the circuit protector is tripped, it indicates that the system or a peripheral device was improperly shut down and the system is unstable. You cannot repair the system under this circumstance and must call the Mindray Customer Service Department or sales representative.
- There is no risk of high-temperature burns during normal ultrasound examinations. It is possible for the surface temperature of the transducer to exceed the body temperature of a patient due to environmental temperature and exam type combinations. Do not apply the transducer to the same region on the patient for a long time. Apply the transducer only for a period of time required for the purpose of diagnosis.
- Do not use the system to examine a fetus for a long period of time.
- Except accessories that have been stated as sterile, the system and its
 accessories are not disinfected or sterilized prior to delivery. The operator
 is responsible for the cleaning and disinfection of probes and sterilization of
 biopsy brackets according to the manuals, prior to the use. All items must
 be thoroughly processed to completely remove harmful residual chemicals,
 which will not only harmful to the human body, but also damage the
 accessory.
- It is necessary to end the current exam that is in progress and clear the current Patient Information field. Otherwise, new patient data may be combined with the previous patient data.
- Do not connect or disconnect the system's power cord or its accessories (e.g., a printer or a recorder) without turning OFF the system power first. This may damage the system and its accessories or cause electric shock.
- If the system is powered off improperly during operation, it may result in data damage of the system's hard disk or system failure.

1 - 4 Operator's Manual

- Do not use a USB memory device (e.g., a USB flash drive, removable hard disk) which has unsafe data. Otherwise, system damage may result.
- It is recommended to only use the video devices specified in this manual.
- Do not use gel, disinfectant, probes, probe sheath or needle-guided brackets that are not compatible with the system.
- The applied contrast agency should be compliant with the relevant local regulations.
- Read the Acoustic Output Principle in the operation manual carefully before operating this system on clinical examination.
- The cover contains natural rubber that can cause allergic reactions in some individuals.
- Please use the ultrasound gel compliant with the relevant local regulations.
- DO NOT expose the system to excessive vibration through transportation.
 Mechanical damage may result.
- Always keep the system dry. Avoid transporting this system quickly from a cold place to a warm place; otherwise condensation or water droplets may form allowing a short circuit and possible electric shock.

NOTE:

- DO NOT use the system in the vicinity of strong electromagnetic field (such as a transformer), which may affect the performance of the system.
- Do not use the system in the vicinity of high-frequency radiation source (e.g. cellular phones), which may affect the performance of the system or even lead to failure.
- When using or placing the system, keep the system horizontal to avoid imbalance.
- To avoid damaging the system, do not use it in following environment:
 - Locations exposed to direct sunlight.
 - Locations subject to sudden changes in environmental temperature.
 - Dusty locations.
 - Locations subject to vibration.
 - Locations near heat generators.
 - Locations with high humidity.
- Turn ON the system only after the power has been turned OFF for a while. If the system is turned ON immediately after being turned OFF, the system may not be rebooted properly and could malfunction.
- Select "Freeze" to freeze an image or turn off the power of the system before connecting or disconnecting a probe.
- Remove the ultrasound gel from the face of the transducer when the examination is completed.
 Water in the gel may enter the acoustic lens and adversely affect the performance and safety of the transducer.
- You should properly back up the system to a secure external storage media, including system configuration, settings and patient data. Data stored to the system's hard drive may be lost due to system failure, improper operation or accident.
- Do not apply external force to the control panel. Otherwise, the system may be damaged.

Operator's Manual 1 - 5

- If the system is used in a small room, the room temperature may rise. Please provide proper ventilation and free air exchange.
- To dispose of the system or any part, contact Mindray Customer Service Department or sales
 representative. Mindray is not responsible for any system content or accessories that have been
 discarded improperly.
- Electrical and mechanical performance may be degraded due to long usage (such as current leakage or distortion and abrasion); the image sensitivity and precision may become worse too. To ensure optimal system operations, it is recommended that you maintain the system under a Mindray service agreement.
- Refer replacing job to Mindray service engineers or engineers authorized by Mindray only.
- Do not turn OFF the power supply of the system during printing, file storage or invoking other system operations. An interrupted process may not be completed, and can become lost or corrupted.
- The iScape feature constructs a single extended image from a series of individual image frames. The quality of the final image is user-dependent and requires skill to efficiently apply the feature and technique. Exercise caution when measurements are performed from an iScape image.
- Ensure that the current exam date and time are the same as the system date and time.
- Use detachable power supply cord as mains power breaking device. DO NOT set equipment in place where difficult for disconnection of detachable power supply cord.

Please read the following precautions carefully to ensure the safety of the patient and the operator when using the probes.

MWARNING

- The ultrasound probe is only for use with the specified ultrasound diagnostic system.
- The ultrasound probe must be used only by qualified professionals.
- Confirm that the transducer and probe cable are normal before and after each examination. A defective probe may cause electric shock to the patient.
- Do not subject the probe to shock. A defective probe may cause electric shock to the patient.
- Do not disassemble the probe to avoid the possibility of electric shock.
- Never immerse the probe connector into liquids such as water or disinfectant because the connector is not waterproof. Immersion may cause electric shock or malfunction.

ACAUTION

- When using the probe, wear sterile gloves to prevent infection.
- Be sure to use sterile ultrasound gel. Please use the ultrasound gel compliant with the relevant local regulations. And manage the ultrasound gel properly to ensure that it does not become a source of infection.

1 - 6 Operator's Manual

- In normal diagnostic ultrasound mode, there is no danger of a normaltemperature burn; however, keeping the probe on the same region of the patient for a long time may cause such a burn.
- Do not use the carrying case for storing the transducer. If the carrying case is used for storage, it may become a source of infection.
- It is required to practice ALARA when operating ultrasound system.

 Minimize the acoustic power without compromising the quality of images.
- The probe and accessories supplied with it are not delivered disinfected or sterilized. Sterilization (or high-level disinfect) before use is required.
- Disposable components should be packaged sterile and for single-use only. Do not use if integrity of packaging violated or if expiration date has passed. Please use the disposable components compliant with the relevant local regulations.
- Please use the disinfection or sterilization solution recommended in this
 operator's manual; otherwise Mindray will not be liable for damage caused
 by other solutions. If you have any questions, please contact Mindray
 Customer Service Department or sales representative.
- Do not use pre-lubricated condoms as a sheath. Lubricant may not be compatible with the probe material and damage may result.
- The damage of the transducer may be caused by the contact of improper gel or cleaner:
 - DO NOT dip the transducer in the strong polar solution of ethanol, chloride of lime, ammonium chloride, acetone and formaldehyde.
 - DO NOT contact the transducer with solution or ultrasound gel containing oily medium such as mineral oil or lanoline.

NOTE:

- Read the following precautions to prevent the probe from malfunction:
 - Before connecting or disconnecting the probe, freeze or turn off the diagnostic ultrasound system.
 - Clean and disinfect the probe before and after each examination.
 - After the examination, wipe off the ultrasound gel thoroughly. Otherwise, the ultrasound gel may solidify and the image quality would be degraded.
- To prevent the probe from being damaged, do not use it where it will be exposed to:
 - Direct sunlight or X-rays
 - Sudden changes in temperature
 - Dust
 - Excessive vibration
 - Heat generators
- Repeated disinfection will eventually damage the probe, please check the probe performance periodically.

Operator's Manual 1 - 7

1.3 Latex Alert

When choosing a probe sheath, it is recommended that you directly contact CIVCO for obtaining information regarding probe sheaths, pricing, samples and local distribution.

For CIVCO information, please contact the following:

CIVCO Medical Instruments

Tel: 1-800-445-6741 www.civco.com

MARNING

Allergic reactions in patients sensitive to latex (natural rubber) may range from mild skin reactions (irritation) to fatal anaphylactic shock, and may include difficulty breathing (wheezing), dizziness, shock, swelling of the face, hives, sneezing, or itching of the eyes (FDA Medical Alert on latex products, "Allergic Reactions to Latex-containing Medical Devices", issued on March 29, 1991).

1 - 8 Operator's Manual

2 System Overview

2.1 Intended Use

Resona I8 series Diagnostic Ultrasound System is applicable for adults, pregnant women, pediatric patients and neonates. It is intended for use in fetal, abdominal, Intra-operative (includes abdominal, thoracic, and vascular), Laparoscopic, pediatric, small organ (breast, thyroid, testes), neonatal and adult cephalic, trans-rectal, trans-vaginal, musculo-skeletal (conventional, superficial), Thoracic/Pleural, adult and pediatric cardiac, trans-esoph. (Cardiac), peripheral vessel, and urology exams.

Modes of operation include: B, M, PWD, CWD, Color Doppler, Amplitude Doppler, Combined mode(B+M, PW+B, Color+B, Power+B, PW+Color+B, Power+PW+B), Tissue Harmonic Imaging, Smart3D, 4D(Real-time 3D), iScape View, TDI, Color M, Strain Elastography, Contrast imaging (Contrast agent for LVO), V Flow, STE, STQ, Contrast imaging (Contrast agent for Liver).

This device is a general purpose diagnostic ultrasound system intended for use by qualified and trained healthcare professionals for ultrasound imaging, measurement, display and analysis of the human body and fluid, which is intended to be used in a hospital or medical clinic.

NOTE:

The system is not intended for central cardiovascular or central nervous system use.

2.2 Contraindication

The diagnostic ultrasound system is not intended for ophthalmic use.

2.3 Safety Classifications

- According to the type of protection against electric shock:
 Externally powered CLASS I EQUIPMENT + INTERNALLY POWERED EQUIPMENT
- According to the degree of protection against electric shock:

TYPE-BF APPLIED PART

- According to the degree of protection against harmful ingress of water or particulate matter:
 - The main unit is classified as IPX0
 - The probe is classified as IPX7
 - The footswitch (can be used in the operating room) is classified as IPX8
- According to the disinfection and sterilization method(s) recommended by manufacturer: The devices recommended by the manufacturer.
- According to the degree of safety of application in the presence of a FLAMMABLE ANESTHETIC MIXTURE WITH AIR or WITH OXYGEN OR NITROUS OXIDE: EQUIPMENT not suitable for use in the presence of a FLAMMABLE ANESTHETIC MIXTURE WITH AIR or WITH OXYGEN OR NITROUS OXIDE.
- According to the mode of operation:

Operator's Manual 2 - 1

CONTINUOUS OPERATION

- The device equipped with the applied part of defibrillation protection:

 The device is not equipped with the applied part of defibrillation protection.
- According to the signal input and output parts of the device:
 - The device is equipped with signal input and output parts
- Permanently installed or non-permanently installed:

Non-permanently installed

2.4 Product Specifications

NOTE:

The functions described in the operator's manual may vary depending on the specific system purchased.

2.4.1 Power supply

Power input

Voltage: 100 - 240 VACFrequency: 50/60 Hz

• Power consumption: 650 VA

• Battery voltage: 14.4 VDC, 6600mAh (Single battery)

Power output

Voltage: 100 - 240 VAC Frequency: 50/60 Hz

Power consumption: 300 VA (note: this is the maximum auxiliary output power of the outlet. When the peripheral device is connected to the outlet, ensure that the maximum auxiliary output power does not exceed this threshold. Otherwise, the system may be damaged.)

2.4.2 Environmental Conditions

MARNING

Do not use this system in conditions other than those specified.

Operating conditions

Ambient temperature: 0 °C - 40 °C

- Relative humidity: 20% - 85% (no condensation)

Atmospheric pressure: 700 hPa - 1060 hPa

Storage and transportation conditions

Ambient temperature: -20 °C - 55 °C

Relative humidity: 20% - 95% (no condensation)

- Atmospheric pressure: 700 hPa - 1060 hPa

2 - 2 Operator's Manual

2.4.3 Dimensions and Weight

• Dimensions (The monitor and the control panel are kept to a minimum position):

Length: 1026±20mm
 Width: 550±10mm
 Height: 1098±20mm

• Weight: 94kg±5kg (Standard configuration)

2.5 Product Differences

Model	B-Hist (Ellips e)	B-Hist (Trace)	B-Hist (Spline)	B-Hist (Recta ngle)	Profile	Spline Length	Color Vel	Cross
Resona I8W	√	√	√	√	V	√	√	√
Resona I8	×	√	√	√	$\sqrt{}$	√	√	1
Resona I8 Exp	$\sqrt{}$	√	×	√	$\sqrt{}$	√	√	√
Resona I8S	$\sqrt{}$	√	√	×	$\sqrt{}$	$\sqrt{}$	$\sqrt{}$	$\sqrt{}$
Resona I8T	$\sqrt{}$	√	√	√	×	$\sqrt{}$	$\sqrt{}$	$\sqrt{}$
Resona IY	×	$\sqrt{}$	√	√	V	×	√	$\sqrt{}$
Resona I8 Easi	$\sqrt{}$	$\sqrt{}$	√	√	V	√	√	×
Eagus I8 Easi	$\sqrt{}$	×	√	√	$\sqrt{}$	$\sqrt{}$	$\sqrt{}$	×
Nuewa I8W	$\sqrt{}$	$\sqrt{}$	√	√	$\sqrt{}$	√	×	$\sqrt{}$
Nuewa I8	×	√	√	√	$\sqrt{}$	$\sqrt{}$	×	$\sqrt{}$
Nuewa I8 Exp	$\sqrt{}$	×	√	√	$\sqrt{}$	√	×	√
Nuewa I8S	$\sqrt{}$	√	×	√	$\sqrt{}$	$\sqrt{}$	×	
Nuewa I8T	$\sqrt{}$	√	$\sqrt{}$	×	$\sqrt{}$	√	×	
Imagyn I8	×	$\sqrt{}$	√	×	$\sqrt{}$	√	×	√
Imagyn I8S	×	$\sqrt{}$	$\sqrt{}$	√	×	√	×	$\sqrt{}$
Imagyn I8T	×	V	V	√	V	×	×	√
Imagyn I8 Exp	$\sqrt{}$	×	×	V	$\sqrt{}$	V	×	$\sqrt{}$
Nuewa IY	V	×	$\sqrt{}$	×	$\sqrt{}$	$\sqrt{}$	×	√

2.6 System Configuration

2.6.1 Standard Configuration

- Main unit
- System software
- Operating software
- Hard disk drive (HDD)

Operator's Manual 2 - 3

- Solid state disk (SSD)
- Accessories
 - Dust-proof cover
 - Storage bin
 - Cable hook
 - Probe holders
 - Ultrasound gel
 - Leakage-proof cap for the ultrasound gel
 - Cables
 - Dust-proof cover for the probe socket
 - Small keyboard
 - Operator's manual

2.6.2 Probes and Needle-guided Brackets Available

Please see "17 Probes and Biopsy".

2.6.3 Options

No.	Item	Remarks
1.	Pencil probe cable	/
2.	CW Module Kit	/
3.	4D/TEE module kit	/
4.	Built-in wireless adapter	/
5.	Battery assembly	/
6.	Ultrasound gel warmer	Should be configured with the bracket of the ultrasound gel warmer.
7.	Bracket of the ultrasound gel warmer	Should be configured with the ultrasound gel warmer.
8.	Intra-cavity probe holder (with screws)	
9.	ECG Module Kit(AHA)	/
10.	ECG cable	3-Lead Leadset, Adt/Ped, AHA, Clip, Long The ECG module should be configured.
11.	DC-IN cable	The ECG module should be configured.
12.	PCG Transducer Kit	The ECG module should be configured.
13.	Ultrasound Fusion Imaging Kit	 Contains 1 magnetic positioning system controller, 1 magnetic generator, 2 fusion imaging sensors, and 1 motion sensor support. Fusion imaging or Endocavity Fusion Imaging should be configured.

2 - 4 Operator's Manual

No.	Item	Remarks
14.	Fusion Imaging Kit(CE/FDA/With Trolley)	 Contains 1 magnetic positioning system controller, 1 magnetic generator, 2 fusion imaging sensors, 1 trolley for the magnetic generator, and 1 motion sensor support. Fusion imaging or Endocavity Fusion Imaging should be configured.
15.	Magnetic positioning system box	Used for carrying the positioning system controller. Fusion imaging module or fusion imaging module (including trolley) should be configured.
16.	NB-011	SP5-1s/SP5-1E/SP5-1U/SP5-1Ns
17.	NB-022	SC6-1s/SC6-1E/SC5-1Ns
18.	NB-024	C6-2Gs
19.	NB-025	V11-3Hs
20.	NB-029	SC8-2s
21.	NB-036	C4-1s
22.	NB-051	ELC13-4s
23.	NB-053	L13-3Ns
24.	NB-054	L14-3Ws
25.	Probe Adapter PCM-ES01	The SD8-1E, P7-3TE, SC6-1E, or SP5-1E probes can be connected to the ultrasound system through the probe adapter.
26.	Probe Adapter PCM-US01	The P7-3TU or SP5-1U probes can be connected to the ultrasound system through the probe adapter.
27.	1D BarCode Scanner	/
28.	2D BarCode Scanner	/
29.	Footswitch (1-pedal, 2-pedal, or 3-pedal)	USB interface
30.	DVD assembly	/
31.	iVocal Microphone Package	iVocal should be configured.
32.	Wipes box bracket	/
33.	Probe Container	LAP13-4Cs should be configured.
34.	iScape View	/
35.	Free Xros M	/
36.	Free Xros CM	/
37.	Tissue Doppler Imaging	Cardiology Package should be configured.
38.	TDI QA	Tissue Doppler Imaging should be configured.
39.	Contrast Imaging	/
40.	Contrast Imaging QA	Contrast Imaging should be configured.
41.	LVO	Cardiology Package should be configured.
42.	Volume CEUS	4D module should be configured.

Operator's Manual 2 - 5

No.	Item	Remarks
43.	HiFR CEUS	Contrast Imaging, LVO, or Volume CEUS should be configured.
44.	CEUS Chrono-Parametric Mode	Contrast Imaging or Volume CEUS should be configured.
45.	TCMR	Tissue-Contrast Mix Rendering
		Volume CEUS should be configured.
46.	Strain Elastography	/
47.	STE	Not including Endocavity STE.
48.	STQ	/
49.	Endocavity STE	/
50.	High frame rate STE	STE or Endocavity STE should be configured.
51.	Stress Echo	Cardiology Package should be configured.
52.	Tissue Tracking QA	Cardiology Package should be configured.
53.	FH Tissue Tracking QA	Obstetrics Package should be configured.
54.	Smart 3D	/
55.	iPage ⁺	4D module should be configured.
56.	STIC	4D module should be configured.
57.	SCV ⁺	4D module should be configured.
58.	Smart Volume	4D module should be configured.
59.	Smart V Trace	Smart Volume should be configured.
60.	Color 3D	4D module should be configured.
61.	Niche	4D module should be configured.
62.	iLive	4D module or Smart 3D should be configured.
63.	Smart Planes CNS	4D module and Obstetrics Package should be configured.
64.	Smart Planes FH	4D module and Obstetrics Package should be configured.
65.	Smart Face	4D module and Obstetrics Package should be configured.
66.	Smart ICV	Smart Planes CNS should be configured.
67.	Smart Scene 3D	4D module should be configured.
68.	Ultrasound Fusion Imaging	 Fusion imaging module or Fusion imaging module (including trolley) should be configured. Not including Endocavity Fusion Imaging.
69.	Endocavity Fusion Imaging	Fusion imaging module or Fusion imaging module (including trolley) should be configured.
70.	Fusion RESP	Ultrasound Fusion Imaging should be configured.
71.	Needle Navigation	Ultrasound Fusion Imaging should be configured.
72.	USAT	UltraSound ATtenuation analysis
73.	HRI ⁺	HepatoRenal Index PlusUSAT should be configured.

2 - 6 Operator's Manual

No.	Item	Remarks
74.	V Flow	Vascular Package should be configured.
75.	Ultra-Micro Angiography	/
76.	Glazing Flow	/
77.	iClear ⁺	/
78.	DICOM Basic	/
79.	DICOM Worklist	DICOM Basic should be configured.
80.	DICOM MPPS	DICOM Basic should be configured.
81.	DICOM Query/Retrieve	DICOM Basic should be configured.
82.	DICOM OB/GYN SR	DICOM Basic should be configured.
83.	DICOM Vascular SR	DICOM Basic should be configured.
84.	DICOM Cardiac SR	DICOM Basic should be configured.
85.	DICOM Breast SR	DICOM Basic should be configured.
86.	DICOM Abdomen SR	DICOM Basic should be configured.
87.	DICOM Small Parts SR	DICOM Basic should be configured.
88.	DICOM Pediatric SR	DICOM Basic should be configured.
89.	DICOM Urology SR	DICOM Basic should be configured.
90.	Abdomen/General Package	/
91.	Obstetrics Package	/
92.	Smart OB	Obstetrics Package should be configured.
93.	Smart NT	Obstetrics Package should be configured.
94.	Smart Fetal HR	Obstetrics Package should be configured.
95.	Gynecology Package	/
96.	Smart FLC	4D module and Gynecology Package should be configured.
97.	Cardiology Package	/
98.	Small Parts Package	/
99.	Urology Package	/
100.	Vascular Package	/
101.	Pediatrics Package	/
102.	Nerve Package	/
103.	Emergency&Critical Package	/
104.	Pelvic Floor Package	Gynecology Package should be configured.
105.	Smart Pelvic	Pelvic Floor Package should be configured.
106.	Smart ERA	4D module and Gynecology Package should be configured.
107.	IVF	Gynecology Package should be configured.

Operator's Manual 2 - 7

No.	Item	Remarks
108.	IMT	Vascular Package should be configured.
109.	RIMT	Vascular Package should be configured.
110.	AutoEF	Cardiology Package should be configured.
111.	R-VQS	Vascular Package should be configured.
112.	Smart Hip	Pediatrics Package should be configured.
113.	Smart HRI	Abdomen/General Package should be configured.
114.	Smart Bladder	Abdomen/General Package or Urology Package should be configured.
115.	Smart Trace	/
116.	СРР	/
117.	Smart IVC	Cardiology Package or Abdomen/General Package should be configured.
118.	Smart VTI	Cardiology Package should be configured.
119.	Smart B-line	/
120.	V-Mapping	Vascular Package should be configured.
121.	iWorks	/
122.	iNeedle	/
123.	DVR Module	/
124.	McAfee	Windows system should be configured.
125.	ClamAV	Linux system should be configured.
126.	iVocal	/
127.	IOTA	/
128.	3D-Print Format	/

2.6.4 Peripherals Supported

ltem	Model
Graph/text printer	HP OFFICEJET PRO 8100
	CANON TS708
	Epson L130
	HP 8100 (CM752A)
Black/white video printer (digital)	MITSUBISHI P95DW-N
Black/white video printer (analog)	SONY UP-X898MD
Digital color video printer	SONY UP-D25MD
iVocal Microphone	SAMSON XPD2 (iVocal should be configured)
Barcode reader	LS2208
	DS4308
	Honeywell HH1800


2 - 8 Operator's Manual


Item	Model
Footswitch	FS-81-SP-2 (1-pedal)
	971-SWNOM (2-pedal)
	971-SWNOM (3-pedal)

2.6.5 Parts that can be used within patient environment

- Main unit
- Probes
- Footswitch
- Printers

2.7 Introduction of Each Unit

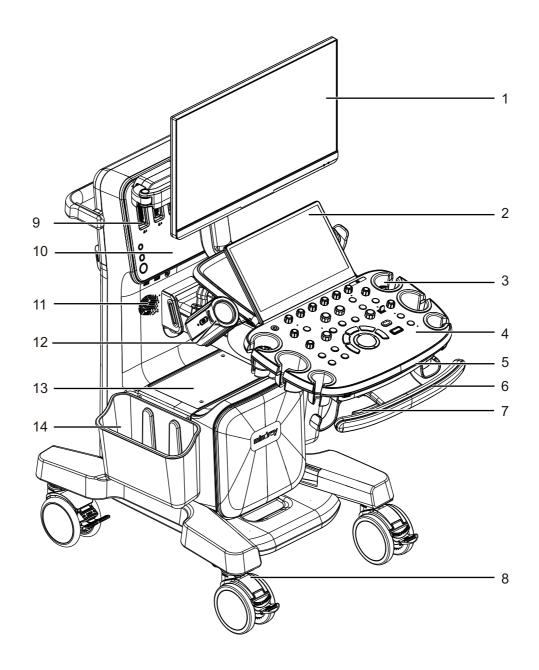

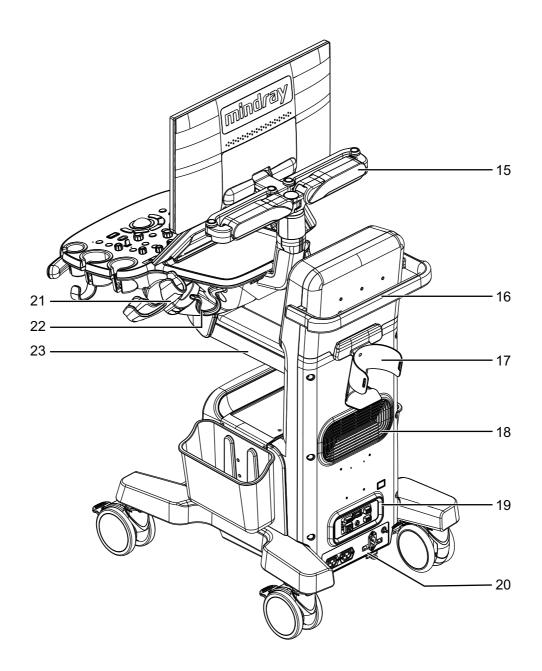


No.	Item	Description
1.	Monitor	Displays the images and parameters during scanning.
2.	Touch Screen	Screen-touching operator-system interface or control.
3.	Transducer& ultrasound gel holder	Used for placing transducers or ultrasound gel temporarily.
4.	Control panel	Key- pressing operator-system interface or control.
5.	Qwerty keyboard	Used for typing characters or entering some functions.
6.	Touch control handle	Holding the right part of the handle to display the battery indicator on the control panel.
		NOTE:
		Available only after the battery assembly is configured.

2 - 10 Operator's Manual

No.	Item	Description
7.	Control panel adjusting lever	Used for lifting or swiveling the control panel.
8.	Caster	 3 full-lock casters: press the "ON" pedal to lock the system, and press the "OFF" pedal to move the system. 1 double-lock caster: press the red pedal to lock the system, press the green pedal to move the system straight, and press the "OFF" pedal to reset the green and red pedals.
9.	Probe port	Sockets connecting transducers and the main unit.
10.	Front I/O panel	Connecting to ECG leads, CW, USB drive, audio input and output etc.
11.	Speaker	Outputs the audio.
12.	Ultrasound gel warmer	Used for heating the ultrasound gel.
13.	Placing table	Used for placing the B/W video printer, storage bin, and wipes box bracket.
14.	Storage bin	Used for temporal storage
15.	Monitor support arm	Supports the LCD display and adjusts the position and angle of the LCD display.
16.	Rear handle	Used for pushing and moving the system.
17.	Wipes box bracket	Used for placing the wipes box.
18.	Cooling vent	Used for cooling the main unit.
19.	Back I/O panel	Interface panel used for inputting and outputting signals.
20.	Power supply panel	Electrical port panel.
21.	Intracavitary probe holder	Used for placing the intracavitary probe.
22.	Hanger	Used for hanging the probe cables.
23.	Control panel support arm	Supports the control panel and adjusts the position of the control panel.

2.7.1 Power Supply Panel

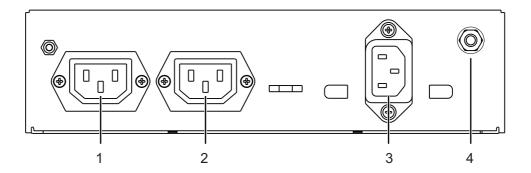


No.	Name	Function
1.	Alternative current auxiliary output 1	Supply power for optional peripheral devices.

No.	Name	Function
2.	Alternative current auxiliary output 2	Supply power for optional peripheral devices.
3.	AC Power inlet	AC power inlet
4.	Equipotential terminal	Used for equipotential connection, that balances the protective earth potentials between the system and other electrical equipment.

2.7.2 I/O Panel

Front I/O Panel

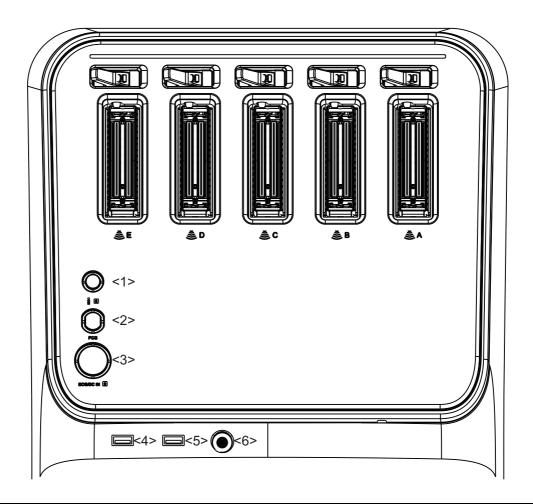


No.	Name	Function
1.		Used for connecting a pencil probe.
2.	PCG	PCG signal input port. Used for connecting PCG cables.
3.	ECG/DC IN	 ECG lead signal input port/external ECG signal input terminal. Connects to ECG leads to directly obtain the patient's ECG signals. Connects the signal output port of an external ECG monitoring device.

2 - 12 Operator's Manual

No.	Name	Function
4.	<i>\$</i> \$₹	High speed USB port. Used for connecting storage device such as
5.	SS C →	USB disk, Fusion imaging module, bar code reader, printer, footswitch, DVD recorder, etc.
6.	O	Audio input and output Used for connecting a microphone.

Back I/O Panel

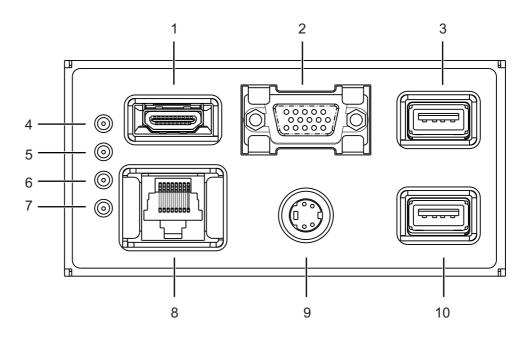

No.	Name	Function
1.	HDMI	High definition multimedia interface. Used for connecting TV, projector, ultrasound workstation video capture card, etc.
2.	VGA ○ ⊕	VGA signal output. Used for connecting TV, Projector, ultrasound workstation video capture card, etc.
3.	ss <	High speed USB port. Used for connecting storage device such as USB disk, Fusion imaging module, bar code reader, printer, footswitch, DVD recorder, etc.
4.	/	12V indicator
5.	/	24V indicator
6.	/	5V_STB indicator
7.	/	DBG_FLAG indicator
8.	몲	Network port. Used for connecting router, ultrasound workstation, server, etc.
9.	S-VIDEO →	S-Video signal output. Used for separating video output, and connecting projector, ultrasound workstation video capture card, etc.
10.	SS C →	High speed USB port. Used for connecting storage device such as USB disk, Fusion imaging module, bar code reader, printer, footswitch, DVD recorder, etc.

NOTE:

S-VIDEO port performs better in analog video print.

2.7.3 Control Panel



No.	Name	Description
1.	Power button/ Indicator	Power button: Turn on/turn off the system. Indicator: AC (Alternating current). It turns on at AC supply. Standby. It blinks in orange in standby status. Hard disk indicator. It blinks when reading the disk.
2.	Soft menu key (1-6)	 Press the button to enable or disable the corresponding functions on the touch screen. Rotate the button to adjust the parameter on the touch screen.
3.	A.power	 Press the button to switch from A.Power and Volume. Rotate the button to adjust the acoustic power or volume.
4.	P1	Indicates the control or indicator to increase or decrease a parameter. User defined key. Set by the user in the Preset. Press the button to enable or disable the user-defined function.

2 - 14 Operator's Manual

No.	Name	Description
5.	PW/Y	 Press to enter or exit the PW mode. When the PW mode is enabled: If the Mark is not displayed, then press to display the Mark line. If the Mark is displayed, then press to enter PW mode.
		Rotate to adjust PW/CW gain; while in 3D/4D mode, rotate the knob to make the 3D image rotate around Y axis.
6.	C/Z	 Press to enter or exit Color mode Rotate to adjust Color/Power gain; while in 3D/4D mode, rotate the knob to make the 3D image rotates around Z axis.
7.	P2	User defined key. Set by the user in the Preset. Press the button to enable or disable the user-defined function.
8.	4D	Press to enter or exit the 4D mode.
	3 0	Rotate to adjust the slice position of the 3D/4D mode.
9.	Р3	User defined key. Set by the user in the Preset. Press the button to enable or disable the user-defined function.
10.	P4	User defined key. Set by the user in the Preset. Press the button to enable or disable the user-defined function.
11.	Angle	Rotate to adjust the angle.Press to switch to the maximum steer angle.
12.	M/X	 Press to enter or exit the M mode. When the M mode is enabled: If the Mark is not displayed, then press to display the Mark line; If the Mark is displayed, then press to enter M mode. Rotate to adjust M gain; while in 3D/4D mode, rotate the knob to make the 3D image rotate around X axis.
13.	CW	Press to enter or exit the CW mode. When the CW mode is enabled: • If the Mark is not displayed, then press to display the Mark line; • If the Mark is displayed, then press to enter CW mode.
14.	PD	Press to enter or exit the Power mode.
15.	Dual-split window key	 In non-dual split mode, press to enter the dual split mode. In dual split mode, press to switch the active window.
16.	B mode key	 Press to enter the B mode. Rotate to adjust the B or 3D/4D gain.
17.	Depth	 Slide upward to increase the depth by 1 unit in real-time imaging until reaching the threshold. Slide downward to decrease the depth by 1 unit in real-time imaging until reaching the threshold.
18.	Zoom	 Rotate clockwise to zoom in the image; rotate anticlockwise to zoom out the image. Press to enter the spot-zoom mode, press again to enter pan-zoom mode, and press for the third time to exit the zoom mode.
19.	Bodymark	Press to enter or exit Bodymark status.


No.	Name	Description
20.	Clear	Press to clear in the sequence of "the selected measurement and comment information", "screen information of the current application mode", and then "all measurement and comment information"
		• Long press to clear all the measurement and comment information on the screen.
21.	ABC	Press to enter or exit Comment status.
22.	Cursor	Press to display/hide the cursor.
23.	/	Set key. The function is determined based on the actual situation. For example, next one or previous one; or special command of some special modes.
24.	Measure	Press to enter/exit the application measurement mode, and start default measurement.
25.	Update key	 Switch the current active window in multi-windows mode. Complete the image acquisition in iScape/3D/4D mode etc.
26.	Caliper	Press to enter/exit the general measurement mode, and start default measurement.
27.	/	Set key. The function is determined based on the actual situation. For example, next one or previous one; or special command of some special modes.
28.	iTouch	 Press to optimize the images, and keep pressing to further optimize the image. Long press to exit iTouch.
29.	Save	User defined key. Set by the user in the Preset. Supports 3 kinds of save mode: • Save single-frame image. • Save multi-frame image. • Select save mode based on different situations: — Real time: Auto cine replay: save multi-frame image — Freeze: save single-frame image.
30.	Freeze	Press to freeze/unfreeze the image.
31.	Print	 User defined key. Set by the user in the Preset. Press to print the image.
32.	/	 Move the trackball to change the cursor position or replay multiframe image. Adjust or move the VOI. Move the comment or body mark. Adjust the probe orientation of the body mark
33.	/	Battery indicator: displays the battery indicator NOTE: Available only after the battery assembly is configured.

2 - 16 Operator's Manual

TIP:

"/" means the key / knob has no silk-printed name.

2.7.4 Keyboard

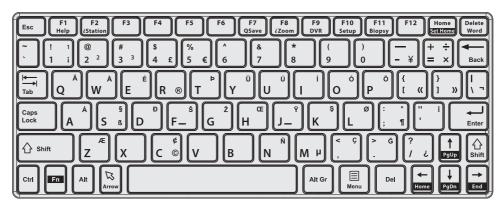

Common functional keys

No.	Key	Function
1.	←	Confirm the input data; or moves the cursor to the head of next row of the text or the input field.
2.	Esc	Cancel the operation or exit.
3.	<u>i</u>	Jump to the next operable item.
4.	Space key	Insert a space.
5.	Caps Lock	Switch the upper/ lower case.
6.	Home	Activate the Home function: return to start position of comment.
7.	Delete Word	Delete all comments on the screen.
8.	Direction-control keys	Move the cursor one letter each time; or, select the ambient one in a selectable area.
9.	Del	Delete the character after the cursor.
10.	Back Space	Delete the character before the cursor
11.	Menu	Display or hide the parameter menu on the upper right corner of the screen.

Functions of the Keys F1 to F12

No.	Key	Description	Function
1.	F1 Help	Help	Open or close the accompanying help documents.
2.	F2 iStation	iStation	Enter or exit Patient Info system.

No.	Key	Description	Function
3.	F3~F6	F3~F6	User-defined keys, functions of which can be defined in preset.
4.	F7 QSave	QSave	Save the current image parameters quickly.
5.	F8 iZoom	iZoom	Enter/ exit full-screen zoom status.
6.	F9 DVR	DVR	Enter VCR/DVR mode.
7.	F10 Setup	Setup	Enter/ Exit Setup.
8.	F11 Biopsy	Biopsy	Display/ hide the guide line.
9.	F12	F12	User-defined keys, functions of which can be defined in preset.

Functions of key combination

The system supports multi-language input; you can use the key combinations. The key combinations include <Shift>, <Alt Gr>, <Ctrl> and some alphabet keys.

- <Shift> key
 - <Shift> + key: input the upper left letter of the key.
 - For the alphabet keys (<A>~<Z>), press <Shift>+key to input the letter of different case with the current state.
- <Alt Gr> key
 - Combined with other letter keys, <Alt Gr> can be used for entering other languages.
 - Press <Alt Gr>, and meanwhile press a letter key, the letter on the upper-right corner of the key can be entered.
- <Ctrl> key combined keys

In iStation or Review screen, use <Ctrl> and <Set> to select more than one patient.

• $\langle Fn \rangle$ key


For those combination keys, press <Fn>+key to use the functions indicated with a frame on the key.

No.	Fn+	Name	Function
1.	\rightarrow	End	Move the cursor to the end of the row, or the rightmost side of an edit unit.
2.	←	Home	Home
3.	↑	PgUp	Turn pages upward.
4.	↓	PgDn	Turn pages downward.
5.	Home	Set Home	Activate the Set Home function: set the start point of comment.

2 - 18 Operator's Manual

2.8 Basic Screen & Operation

2.8.1 Monitor Display

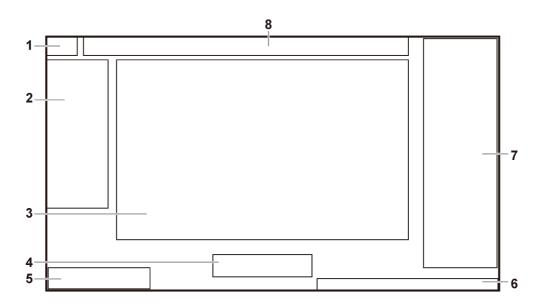

No.	Item	Description
1.	System Information Area	Displays the manufacturer's logo and product model.
2.	Parameters Area/Menu	 Displays the image parameters for the active window. If there are more than one imaging modes, the parameters are displayed by each mode. Menu: Measurements, Comments and bodymarks. The menu is not displayed by default. Press the <menu> key on the small keyboard to display or hide the parameter menu.</menu>
3.	Image Area	Displays the ultrasound images, ECG waveforms, probe mark (or active window mark), time line (in M or PW mode), coordinate axis (in the top left corner of the image area, including depth, time, velocity/frequency), acoustic power (including the acoustic power, MI (Mechanical Index) and TI (Thermal Index), besides, the comment, bodymark, measurement calipers, color bar/grayscale bar are also displayed here.
4.	Hint (trackball and <set> key function indications)</set>	Displays the current functions of trackball and <set> keys.</set>
5.	Help Information Area	Displays various help information items or the progress bar in the current status.
6.	System Icons Area	Displays the relevant system icons, such as USB memory device, printer, network, and current system time, etc.
7.	Thumbnails Area	Displays the thumbnail images stored under the current patient.

No.	Item	Description
8.		Displays the hospital name, the exam time, patient information, the probe model, the exam mode, etc.

2.8.2 Dialog Box

A dialog box screen consists of title, page tabs, contents and buttons, etc.



No.	Item	Description
1.	Title bar	The title bar is used to give a description for the content and function of the screen.
2.	Page Tab	For some screens, contents are distributed into several pages. Use <set> to open/close the available pages.</set>
3.	Contents	 Radio box: click to select the item. Check box: click to check or uncheck the item. Entry box: enter characters manually via the keyboard. Drop-down list: click ▼ to show the list and select an item.
4.	Controls	When the operation of a screen is completed, save or cancel the operation, and close the screen.

To reposition a dialog box

- Use the trackball to move the cursor onto the title bar of the dialog box.
 At this time the cursor becomes a ♣, then press <Set>.
- 2. Use the trackball and position the rectangular graphic to the new desired location.
- 3. Release <Set>, and the dialog box is moved to the desired position.

2.8.3 Menu Operation

Use the cursor to operate on the menu.

Menus of different modes display in real-time at the upper left corner of the screen.

2 - 20 Operator's Manual




1	Menu title	2	Menu item
		1	

Operate the menu by the trackball and left/right <Set> key.

- 1. Press <Cursor> to show the cursor.
- 2. Roll the trackball to locate the cursor onto the item to be adjusted.
 - For a commanding item or command optional item: press <Set> to directly activate the
 item
 - For a parameter item or ON/OFF item: press <Set> to activate the item, and press <Set> to switch among the available values.
 - For a parameter optional item: press <Set> to extend the available parameter the cursor is positioned onto the list. Roll the trackball to locate the cursor onto the item to be adjusted, and press <Set> to set the value.

2.8.4 Touch Screen

Mapping mode of touch screen

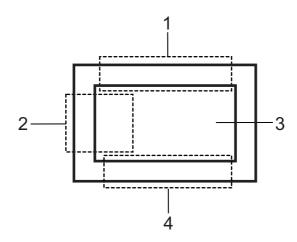

Operation area	Operations
1	Flick the edge downwards to enter the mapping mode.
2	Sweep to right to open the menus under the mapping mode.

Operation area	Operations
3	The mapping menu, and toolbar are displayed. It is available to perform the image adjustment, measures, image review, etc.
4	Flick the edge upwards to exit.

NOTE:

If there is a dialog box in the screen, the mapping mode is unavailable.

• Enter the mapping mode

Flip the touch screen from top to bottom (area 1). The image on the control screen maps on the touch screen. The mapping mode appears.

Mapping menu operations

Swipe the touch screen from left to right (area 2) under the mapping mode. The mapping menu appears on the touch screen. Tap or sweep right or left to adjust the image parameter, measures, etc.

Tap the blank area on the touch screen. The menu of the mapping mode hides.

• Two-finger gesture

Two-finger gesture can be configured with varied functions.

According to the two-finger gesture under mapping or non-mapping mode, perform the operations on the touch screen (area 3).

NOTE:

This function is only applicable to Windows system.

• Enter the preview mode

Swipe right to review the saved image under the mapping mode (area 3). Tap to review the saved image (area 3). The tool bar is displayed on the right side of the touch screen. It is available to review, send or delete the image.

Icon	Description
 ←	Review the previous image.
$\overline{\ominus}$	Send the image.
→	Review the next image.
立	Delete the current image.

Exit the mapping mode

Flip from the edge to the top or tap \otimes on the top right corner of the touch screen to exit the mapping mode (area 4) under the mapping mode.

Non-mapping mode of touch screen

The layout of the touch screen varies with the applications or modes. Flip the touch screen to go to another page. Learn the interface display and operations by referring to related chapters.

• Controls on the touch screen

2 - 22 Operator's Manual

NOTE:

You cannot enter the stage from cine review mode or when there is a dialogue box on the screen. This stage cannot switch to mapping mode.

Tap and hold the screen to enter control editing stage.

Function	Operations
Adding a control	Tap to select a button to add and tap [Confirm].
Add a user-defined control	In comment and body mark editing status, tap and then tap [Custom] to bring out the dialogue box for adding user-defined controls. Enter the control name and tap [OK].
Delete a control	Tap ★ of the target control and tap [Confirm] to delete.
Change the control position	Tap and drag the control to the desired position.

Moving tabs on 3D/4D viewing status
 On 3D/4D viewing status, tap and hold the desired tab on the touch screen, and then drag the tab to adjust its position.

2.9 Warning Labels

The warning labels are attached to this system in order to call your attention to potential hazards.

The warning labels use the same signal words as those used in the operator's manual. Read operator's manual carefully before using the system.

The name, pattern and meaning of each warning label are described as follows:

No.	Warning Labels	Meaning
1	1 4 2 3	 Do not place the system on a sloped surface. Otherwise the system may slide, resulting in personal injury or the system malfunction. Move the system slowly on the slope by two people and make sure that the support arm is not extended. DO NOT sit on the system. DO NOT push the system when the casters are locked. Read this information carefully before using the system.
2		Warning; Crushing of hands
3		No heavy load

The general meaning assigned to geometric shapes, safety colors and contrast colors for safety signs are as follows:

Geometric shape	Meaning	Safety color	Contrast color	Graphical symbol color
\Diamond	Prohibition	Red	White	Black
	Mandatory action	Blue	White	White
	Warning	Yellow	Black	Black

2.10 Symbols

This system uses the symbols listed in the following table. Their meanings are explained as follows:

Symbol	Description
†	Type-BF applied part
3kg/6.5lbs	Maximum load for storage bin.
$\overline{\sim}$	AC (Alternating current)
	Protective earth (ground)
.	Pencil probe port
	Equipotentiality
<u>")))</u>	Probe socket
S-VIDEO →	Reserved, used for separate video output
VGAI□I⊕	VGA output
器	Network port
HDMI	HDMI port
SS < →	High speed USB port
Q	Audio input and output
1	When the probe locking lever points to , you can remove the probe.
Ī	When the probe locking level points to , it means that the probe is locked and you can not remove the probe.

2 - 24 Operator's Manual

Symbol	Description
	Standby
	Standby indicator
<u>C</u>	Harddisk indicator
	Battery indicator
	Direction of the probe cable
	Battery status indicator
	Positive inside and negative outside
€	Atmospheric pressure limitation
<u></u>	Humidity limitation
1	Temperature limit
SN	Product serial number
<u></u>	Manufacture date
•••	Manufacturer
Rx Only	Federal law restricts this device to sale by or on the order of a licensed healthcare practitioner (USA).
UDI	Unique Device Identifier
ETL CLASSIFIED	CONFORMS TO AAMI STD ES60601-1, IEC STD 60601-2-37, IEC STD 60601-1-6;
Intertek 3179617	CERTIFIED TO CSA STD C22.2 NO. 60601-1, 60601-2-37, 60601-1-6
	MR Unsafe – the system is not intended to be used within magnetic resonance (MR) environment.

This page intentionally left blank.

MARNING

- Do not connect the three-wire cable of the system with a two-wire plug without protective grounding; otherwise, electric shock may result.
- Do connect the power plug of this system to wall receptacles that meet the ratings indicated on the rating nameplate. If adapters or multifunctional receptacles are used, it may cause the leakage current to exceed the safety requirement.
- In the environment that patient is 1.5 meters around, connect peripherals to the auxiliary power outlet which is capable of isolation protection, or power the peripherals by auxiliary output cable or isolation transformer complied with IEC60601-1 or the power input of the same safety level.
- DO NOT use power supply of different phases to power peripherals, like power supply of air-conditioning.
- When using peripherals not powered by the auxiliary output of the
 ultrasound system, or using peripherals other than permitted by Mindray,
 make sure the overall leakage current of peripherals and the ultrasound
 system meets the requirement of the local medical device electrical
 regulation (like enclosure leakage current should be no more than 500uA of
 IEC60601-1), and the responsibility is held by the user.

3.1 Move/Position the System

Please read and understand the safety precautions before placing the system to ensure safety for both operator and devices.

Perform the following procedure:

- 1. Switch off the power, and pull out the plug.
- 2. Disconnect all cables from the off-board peripheral devices (printer, recorder, etc.)
- 3. Unlock the four casters; hold the handle to move the system.
- 4. When you move the system to a desired location, lock the four casters.

ACAUTION

Maintain a generous – free air flowing space around the back and both sides of the system; failure may result due to increased rise in system operating temperature.

3.2 Connecting the Power Cord


This system can work normally only when it is connected to the external power supply or the battery capacity is sufficient.

NOTE:

When the system is powered by the batteries, self-test is not supported.

3.2.1 Connecting Power

- 1. Plug the power cable in the socket of the ultrasound system.
- 2. Plug the other end power plug into an appropriate outlet. The grounding terminal should be connected with a power grounding cable to ensure that protective grounding works normally.

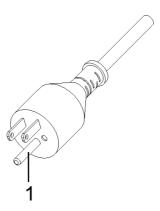

1	Grounding terminal
---	--------------------

NOTE:

Make sure to allow sufficient slack in the cable so that the plug is not pulled out of the wall if the system is moved slightly. If the plug is pulled out accidentally, data may be lost.

3.2.2 Powered by Batteries

$oldsymbol{\Lambda}$ WARNING

- The battery is inside the machine; only technical professionals from Mindray or engineers authorized by Mindray after training can perform battery installation and uninstallation.
- If you need to change the battery or buy a new one, please contact your sales representative.
- The lithium-ion battery has a service life of five years. Replace your battery when it reaches the end of its service life.
- The battery can support the ultrasound system for normal working for no less than 90 minutes.

3 - 2 Operator's Manual

- When connected to the external power supply, the system is powered by the external power. The batteries inside it are in the charging status.
- When disconnected from the external power supply, the system is powered by the batteries.
- When the system is working, the battery charges when its capacity is not full, and the indicator turns green when the capacity is full.
- Generally, a completely discharged battery will fully charge in less than 6 hours.
- When the battery capacity is charged to the full capacity, the standby time of the system is no less than 24 hours.
- When you need to move the ultrasound system in a hurry, you can first make the system enter the standby mode, pull off the power plug to power the machine in standby status when moving the machine, and then press the power button to exit standby after you move the machine to the target position and connect the AC power.

NOTE:

Power off the system if it will not be used for a long period of time (including storage/transportation condition). Do not leave the system in standby status, otherwise the batteries will be discharged and permanently damaged.

Battery Status Indicator

The battery status indicator is located in the bottom-right corner of the screen, indicating the battery capacity.

- Indicates the battery capacity is full.
- Indicates the battery capacity is less than 20%.
- Indicates the battery capacity is less than 10%.
- Indicates the battery capacity is 0.
- Indicates the battery is not installed.
- Indicates the battery cannot be used. Please contact the Mindray service engineer.

3.2.3 Equipotential Terminal

The symbol \checkmark represents the equipotential terminal that is used for balancing the protective earth potentials between the system and other electrical equipment.

MARNING

- Be sure to connect the equipotential wire before inserting the power plug into the receptacle; be sure to pull out the power plug from the receptacle before disconnecting the equipotential wire; otherwise electric shock may result.
- When you connect another device to this system, you should use the equipotential wire to connect each of equipotential terminals; otherwise electric shock may result.
- Connect the earth cable before turning ON the system. Disconnect the earth cable after turning OFF the system. Otherwise, electric shock may result.

 DO NOT connect this system to outlets with the same circuit breakers and fuses that control the current to devices such as life-support systems. If this system malfunctions and generates overcurrent, or when there is an instantaneous current at power ON, the circuit breakers and fuses of the building's supply circuit may be tripped.

3.3 Power ON/OFF

ACAUTION

To ensure safe and effective system operation, you must perform daily maintenance and checks. If the system begins to function improperly, immediately stop scanning. If the system continues to function improperly, fully shut down the system and contact the Mindray Customer Service Department or a sales representative. If you use the system in a persistent improperly functioning state, you may harm the patient or damage the equipment.

3.3.1 Check before Powering ON

Check before the system is powered on:

- The temperature, relative humidity and atmospheric pressure meet the requirements of the operating conditions. For details, see "2.4.2 Environmental Conditions".
- There is no condensation.
- There is no distortion, damage or dirt on the system and peripheral devices.

 If any dirt is found, cleaning shall be performed. For details, see "19 System Maintenance".
- There are no loose screws on the monitor, control panel.
- There is no cable damage (e.g., power cord). Maintain secure connections to the system at all times.
- The probes and probe cables are free from damage or stains.
 For details of probe cleaning and disinfection, see "17.1.5 Probes Cleaning and Disinfection/ Sterilization".
- No miscellaneous odds and ends are attached or affixed to the control panel.
- Ensure that all connections are free from damage and remain clear of foreign object blockages. There are no obstacles around the system and its air vent.
- Probe cleaning and disinfection.
- The entire scanning environment and field must be clean.
- The locking mechanism of the casters can work normally.

3.3.2 Power the System ON

After the power indicator on the touch panel becomes green, press the power button to power the system on.

If access control has been set by the system administrator, you can access data in the system only after logging onto the system.

To Login onto the System

Perform the following procedure:

3 - 4 Operator's Manual

- 1. Select the login type (Local or LDAP), and user name in the drop-down list.
- 2. Enter the password and click [Login].

When the user has logged onto the system, π is visible in the bottom-right corner of the screen.

To Change Users

Perform the following procedure:

- 1. Click **F** in the bottom-right corner of the screen.
- 2. Click [Change User] to bring up the Login dialog box.
- 3. Select the login type (Local or LDAP), and user name in the drop-down list.
- 4. Enter the password and click [Login].

To Modify Password

General operators and administrators can modify the password.

Perform the following procedure:

- 1. Click **f** in the bottom-right corner to bring up the Session Manage dialog box where you can see the current user's information.
- 2. If you want to modify the current password, click [Change Password].
- 3. Enter both the previous and new passwords, and confirm the new password in the dialog box.
- 4. Click [OK] to exit.

To Lock the System

Perform the following procedure:

- 1. Click the **f** in the bottom-right corner of the screen to bring up the dialog box.
- 2. Select [Lock Machine] and the system is locked.

You must log on before using the system.

3.3.3 Checking After Powering On

Check after the system is powered on:

- There are no unusual sounds or smells indicating possible overheating.
- There are no persistently displayed system error messages.
- There is no evident excessive noise, or discontinuous, absent or black items in the B mode image.
- Check whether there is abnormal heat on the surface of the probe during an ultrasound procedure.
- The control panel keys and knobs are fully functional.
- The date and time are displayed correctly.
- The touch screen and the main monitor screens display normally depending on the system modes and image status.

MARNING

• If you use a probe giving off excessive heat, it may burn the patient.

 If you find anything not functioning properly, this may indicate that the system is defective. In this case, shut down the system immediately and contact Mindray Customer Service Department or sales representative.

3.3.4 Power the System Off

You must follow the correct procedures to power the system off. Also, after you upgrade the software or when the system is down, you need to power off and restart it.

NOTE:

- DO NOT rush shutdown the system. It may make the data corrupted.
- If you will not use the system for a long period of time, you should disconnect the mains power, and turn off the power to all peripherals connected to the system.

To power off your system normally.

- 1. Press the power button to see the option:
 - Shut down: To power off the system normally.
 - Standby: To enter standby status.
 - Cancel: To cancel the operation.
- 2. Select [Shutdown] to power the system off.

3.3.5 Standby

NOTE:

If the system is disconnected from the AC power, make sure not to press the power button in the standby status. In this circumstance, to exit standby status or power off the system, connect the system to the AC power before pressing the power button.

To Enter Standby

- Open [Setup] > [System] > [General] to set the time for screensaver and standby. The system goes into the screen saving status if without the operating. The system then goes into the standby status if without the operation during expiring the standby time.
- Press the power button to select [Standby]. The system enters standby status.

To Exit Standby

Press the power button.

TIP:

When the system enters the standby status, and you need to power off: Press the power button to exit the standby status and then power off the system.


3.4 Monitor Position Adjustment


Gently hold the bottom edge of the monitor when adjusting its position.

3 - 6 Operator's Manual

3.4.1 Height and Displacement Adjustment

Move the monitor support arm up or down to adjust the height, back and forth to adjust the displacement.

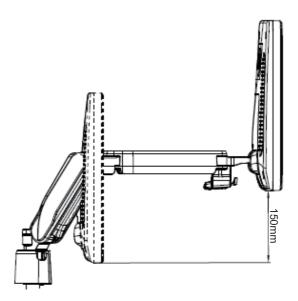

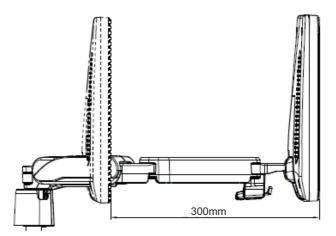


NOTE:

Take care not to trap your hands when adjusting the monitor up and down.


3.4.2 Rotate the Monitor

The monitor can be rotated 90° to the left and 150° to the right along with the supporting arm.

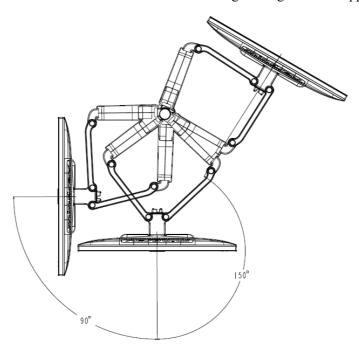

3.4.3 Tilt the Monitor

When positioned vertically, the monitor can be tilted 20° backward and can be tilted forward to a horizontal position. When transporting or moving the system, keep the monitor in the horizontal position, as shown below:

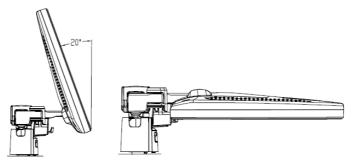


3.4.4 Lock the Monitor

If the ultrasound system is required to be moved within a short distance (for example: move to other department), turn the monitor to the horizontal level, push it to the locking structure, and then the

3 - 8 Operator's Manual

monitor can be locked. For more details, please refer to the operation diagram that is attached to the supporting arm.

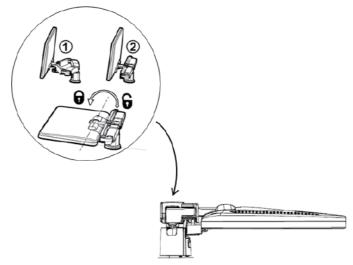

3.5 Monitor Brightness/Contrast Adjustment

Monitoring the brightness and contrast adjustment is one of the most important factors for proper image qualities. If set incorrectly, the gain, TGC, dynamic range or even acoustic output have to be changed more often than necessary to compensate.

- Brightness adjustment
 Press <F10 Setup>, and then select [System] > [General] > [LCD]/[TouchPanel].
- Contrast ratio adjustment


 Press <F10 Setup>, and then select [System] > [General] > [LCD]/[TouchPanel].
- Automatic brightness adjustment
 Press <F10 Setup>, tap [System] > [General], and then select [Brightness auto adjustment].
 The system will automatically adjust the brightness of the main screen and touch screen according to the surrounding environment.

NOTE:

On the monitor, the brightness adjustment comes before contrast. After readjusting the monitor's contrast and brightness, adjust all preset and peripheral settings.

3.6 Control Panel Position Adjustment

Press the control panel lever in the direction as shown in the following figure. The control panel can be rotated left and right in $\pm 80^{\circ}$, moved up and down in 215 ± 20 mm. The control panel can be locked at any position.

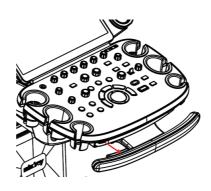

3.7 Connecting/Disconnecting a Probe

ACAUTION

- Press <Freeze> to freeze an image or turn off the power of the system before connecting/disconnecting the probe. Otherwise, system or probe failure may occur.
- When connecting or disconnecting a probe, place it in a proper position, to prevent the probe from falling off or becoming damaged.
- Hang the probe cable to the hanger located under the control panel to avoid excessively bending and damaging the cable.
- Only use the probes provided by Mindray. Aftermarket probes may result in damage or cause a fire.

NOTE:

If a probe port is not used for a long period of time, use the dustproof cover to protect the probe port from dust. Failure to do so may result in bad contact.

3.7.1 Connecting a Probe

MARNING


The probes, cables and connectors should be in proper operating order and free from surface defects, cracks and peeling. Otherwise, this may lead to electrical shock.

Perform the following procedure:

1. Keep the cable of the transducer downward, insert the connector into the system port.

3 - 10 Operator's Manual

2. Toggle the locking lever to the left side to lock the transducer connector.

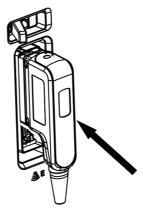


3. Position the probe properly to avoid it being treaded on or becoming wrapped around other devices. DO NOT allow the probe head to hang free.

3.7.2 Disconnecting a Probe


Perform the following procedure:

- 1. Toggle the locking lever to the right side.
- 2. Pull the transducer connector straight out vertically.

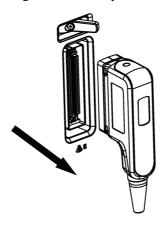

3.7.3 Probe Adapter Installation


Probe adapter illustration:

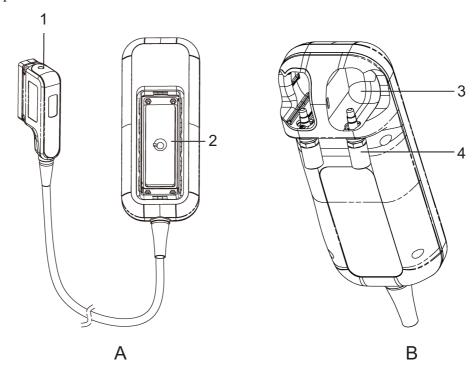

A	Front View of the probe adapter	В	Back View of the probe adapter
1	Probe adapter connector	2	Probe adapter port
3	Handle mounting hole	4	Tightening part

Perform the following procedure:

- 1. Keep the cable of the transducer downward, insert the connector into the system port.
- 2. Toggle the locking lever to the left side to lock the probe adapter connector.

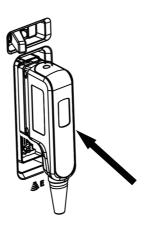

3. Pull down the tightening part of the probe adapter.

3 - 12 Operator's Manual



4. Aim the mounting hole to the handle end of the ultrasound system, and push the probe adapter slowly and carefully.



5. Turn the tightening part to the right.



6. Insert the probe connector into the probe adapter port, and turn the lock handle 90° clockwise to lock it securely.

3.8 Connecting Peripheral Devices

3.8.1 Connecting USB Devices

MARNING

DO NOT directly remove a USB memory device, as the USB device and/or the system may become damaged.

• When connecting a USB memory device to the ultrasound system via a USB port, a sound is heard if it is connected successfully and the symbol pears in the bottom-right corner of the screen.

- To remove the USB device: click to open the [Remove USB Device] screen. Select the device to be removed and click [OK]. A sound is heard when removing the USB memory device.
- The diagnostic ultrasound system supports USB 3.0.

3.8.2 Connecting the Footswitch

MARNING

Do not connect two or more footswitches to the main unit; otherwise, it may lead to the malfunction to the system.

The system supports USB port-type footswitches.

Directly insert the USB port of the footswitch to the system applicable USB ports.


Function Setting: The function of the foot switch can be preset.

3.8.3 Connecting a Graph/Text Printer

NOTE:

- Unless otherwise specified, printers listed in Chapter "2.6.4 Peripherals Supported" have drivers installed already.
- Please refer to the accompanying manuals of the printers for more details.

As shown in the figure below, a graph/text printer has a power cord and data cable. The power cord shall be directly connected to a wall receptacle as required.

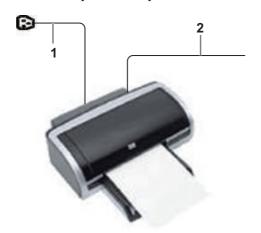

1	Power supply cable	Connect to power supply.
2	Data cable	Connect to the USB port of this system.

Perform the following procedure:

- 1. Connect the data cable to USB port of the ultrasound device.
- 2. Power on the system and the printer.
- 3. Preset the default report printer and its attribute.
 - a. In [Setup]>[Print] screen, select the "Report Print" column in the service list.

3 - 14 Operator's Manual

- b. In the "Property" frame, select printer from the driver list next to "Printer" in the lower screen and set the items.
- c. Click [OK] after you have finished setting.

3.8.4 Connecting a Video Printer

NOTE:

- Unless otherwise specified, printers listed in Chapter "2.6.4 Peripherals Supported" have drivers installed already.
- Please refer to the accompanying manuals of the printers for more details.

The digital video printers that system supports consist of the B/W printers and color printers. Perform the following procedure:

- 1. Connect the data cable to USB port of the ultrasound device.
- 2. Power on the system and the printer.
- 3. Add a print service:
 - a. Open the [Setup] > [Print] screen.
 - b. Click [Add Service] to enter the page.
 - c. Select the service type and enter the service name manually.
 - d. Click [OK] to return to the page.
 - e. Select the target printer from the drop-down list in the "Property" box and set other printing properties.
 - f. Click [OK] to complete.

3.8.5 Connecting a Wireless Printer


The system supports the wireless graph/text printer for the report print.

Perform the following procedure:

- 1. Power on the system and the printer.
- 2. Make sure the ultrasound machine and the printer are connected to a same LAN, and turned on the Wi-Fi function of the printer.
- 3. Press <F10>, select [Print] to choose the report to be printed. Select the printer from the wireless printer list, and set the printer.
- 4. Click [Save] to exit the preset and make the settings effective.

3.8.6 iVocal

Insert the iVocal microphone device to the USB port of the ultrasound system. The system automatically enters the following page.

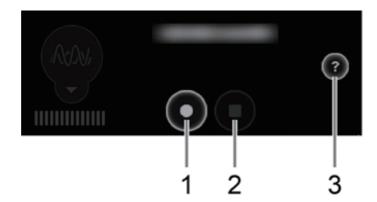

No.	Description
1	Click to speak to the microphone (the system recognizes the vocal order). The system conducts the operations after recognizing the voice.
2	Click to stop the voice Recognition.
3	Click to open the Setup menu.

Setup

Select ? to enter the iVocal Setup menu.

 Add: Select [Add] to enter the Adding New Command menu, Select [Function Description] to select the desired function, enter the user-defined command in the [Command] text box, and then select OK.

User-defined command naming rules:

- Only Chinese characters, English letters, and digits are supported.
- The English letters are case-insensitive, consecutive blank spaces are not supported, and a maximum of 128 letters are allowed when entering the English letters.
- Blank spaces are not supported and a maximum of 30 characters are allowed when entering the Chinese characters.
- The user-defined commands cannot be empty.
- User defined commands that are already existed in the system but represent different functions are not supported to be added.

• Test:

Select [Test] and input a vocal command to the iVocal Microphone. After the vocal
command is recognized, the Success Rate is displayed in fraction. Select [Test] again to
close the vocal command test.

If the vocal command is successfully recognized by the system, both the denominator and numerator of the Success Rate are added by 1 for each time; if the vocal command fails to be recognized by the system, the denominator of the Success Rate is added by 1 for each time through selecting the \bigotimes icon, while the numerator remains the same. For example: 2/3 represents 2 times of success and 1 time of failure.

- Clear: Select [Clear] to clear all the Success Rate test records.
- Recover: Select [Recover] to enter the Confirm menu. You can select Yes to restore to the default settings.

3 - 16 Operator's Manual

Icon	Function
■))	Audition the vocal command
	Edit the vocal command
	Delete the vocal command
5	Clear the Success Rate test record of the selected vocal command

This page intentionally left blank.

4 Setup

The Setup function is designed to set the configuration parameters of operating the system and maintaining user workflow setup data. The setup data of the user and system are stored to the hard drive, and should be backed up to CD/DVD or USB memory device.

ACAUTION

When the preset data is changed, be sure to save the preset data according to the methods described in this chapter. Mindray is not responsible for the loss of preset data.

• To enter Setup:

Press <F10 Setup> on the keyboard to enter the setup menu.

- To exit Setup:
 - Select [OK] in the Setup menu. The parameter settings are saved.
 - Select [Cancel] in the Setup menu or press <ESC> to close the Setup menu.

When you change the system language and click [OK] in the Setup menu, the system automatically shuts down to make the modification effective.

Basic operations

The commonly-used setting types are:

- Text box: position the cursor over the corresponding field box. Enter the desired value using the keyboard or soft keyboard on the soft menu.
- Radio button: click the button to select an item.
- Check box: click the checkbox to select one or more options.
- Drop-down list: click the arrow beside the list to select an item.

4.1 System Preset

The system automatically enters the [System] screen after you enter Setup.

Item	Description
Region	To set the hospital name, language, time zone, time format and system date/time.
General	To set patient information, exam setup, patient management, storage, system dormancy, display and so on.
Image	To set general parameters in imaging modes.
Application	To set the measurement ruler, measurement setting, follicle method, comment setting and so on.
OB	To set the relevant information regarding the fetal gestational age, fetal growth formula and fetal weight.

Item	Description	
Key Probe	To assign the functions to the buttons on the probe.	
Console&FootSwitch	To assign functions to the foot switch and user-defined keys.	
Key Board	To assign functions to the F keys of the key board.	
Gesture	Preset the gesture on the touch screen.	
	NOTE:	
	This function is only applicable to Windows system.	
Output	Set the output format, the range and the resolution for the image.	
Access Control	To set the user account control relevant information.	
Scan Code	To set the code parameters for barcode reader.	
Workstation	To set the Workstation quick key.	
Biopsy	To set the Biopsy grid parameters.	

4.1.1 Region

Set the hospital name, language, time zone, time format and system date/time.

Item	Description
HOSPITAL INFORMAT ION	To set the hospital-relevant information such as name, address, telephone, and so on.
Load Logo	Import image for logo loading.
	NOTE:
	For a better display effect, please try to use an BMP image with 400*400 pixels.
Language	To select a language (input) for the system.
Time Zone	To select the time zone.
System Date	To set the date for the system.
Date Format	To set the date format.
System Time	Move the cursor over the corresponding field and enter the time manually using the keyboard, or, move the cursor over the time segment and press <set>, then increase or decrease the required value by clicking the icons on the right side.</set>
Time Format	To select the time format.
Time Sync	To assign a time server and make the time of the ultrasound machine consistent with the server.

4 - 2 Operator's Manual

4.1.2 General

Set patient information, exam setup, screen saver, Ambient Light, dispaly, iVocal setting and so on.

Type	Item	Description
PATIENT INFO	Patient Banner Display Content	To select whether to display the available patient information items on the screen.
	H&W Unit	To set the unit for calculating patient height and weight.
	Surface Formula	To set the surface formula.
	Font Size (For Storage)	To set the font size in the Patient Banner Display Content for storage.
	Status after Freeze	To set the system state after the image is frozen.
	Storage Beep Volume	Set the key volume for saving single /multi-frame image.
EXAM SETUP	Status After Ending Exams	To set the system status when an exam ends.
	Auto Store Report (Print View)	Select whether to automatically save screenshots of the report preview pages to iStation after ending exams.
	Auto Store Report (Worksheet)	After selected, perform measure application and save single frame image, then end the patient exam, the system will save the report image in iStation.
	Sending/printing Image After Ending Exams	Select whether to automatically archive the exam data to the DICOM server for storage/print.
	Sending SR After Ending Exams	Select whether to automatically send structure report to the DICOM server.
	Disable Recycle Bin	After checking this option, the deleted data will not go to the recycle bin.
		NOTE:
		After disabling the recycle bin, the deleted data cannot be recovered.
	Remind exams backup after	To set number of days to remind the operator of exam backup.
	Maximum number of exams to be kept	To set the maximum number of exams to be kept. If the actual number is larger than the preset number, the latest exam will replace the earliest exam.
		NOTE:
		The patient exams which exceed the preset maximum will be deleted and unrecoverable. It is recommended to perform patient data backup before enabling this function to avoid data loss.

Type	Item	Description	
Screen Saver	Screen Saver	 Select the different saver methods to the system. After enabling the screen saver, check "Select Picture-Mindray" to select the image from the system. Or click [Browse] to select the image on your own; you can set the interval time for the screen saver slideshow in the drop-down list beside "Interval". To set the waiting time before the system enters dormancy status in the drop-down list beside "Wait". The system enters screen saver automatically if the system waiting time exceeds the screen saver already set. 	
	Standby	The system enters screen saver automatically if the system waiting time exceeds the screen saver already set and standby time.	
Display	Brightness auto adjustment	To set the brightness of the main screen and the touch screen according to the conditions.	
	LCD	To set the brightness and the contrast of the main screen, or restore to the default.	
	TouchPanel	To set the brightness and the contrast of the touch screen, or restore to the default.	
Ambient Light	Open Ambient Light	To open ambient light.	
iVocal	Enable Voice Response	Select to enable this function. When the function is enabled, the iVocal will respond to your voice command.	
	Automatically shut down waiting time	To set the waiting time to automatically shut down iVocal response.	

4.1.3 Image Preset

Type	Item	Description
Reset Config	Probe	To set the default probe model for the system from the drop-down list. The default parameters are applied to the new probe if checking "Use the default setting when start a new exam."
	Image Size	Set the standard for saving the image or using the digital/graph printer.
	Default Elasto	Set the default elastography mode.
ART Flow	Max transmit time	Set the maximum duration time. Enter Color mode and enable ART Flow; the penetrability of color image is enhanced in this time period.
	Max interval time	Set the maximum interval time. Enter Color mode and enable ART Flow; the ART Flow is enabled again until the interval is finished.

4 - 4 Operator's Manual

Type	Item	Description
Parameter	Steer	 To set the steer mode in B + Color + PW/CW imaging mode. C&(PW/CW): select to adjust the sample volume in color mode and sample line in PW or CW mode together. C/(PW/CW): select to adjust the sample volume in color mode and sample line in PW or CW mode separately.
	Auto Invert	The spectrum can automatically invert when the color flow is steered to a certain angle, thus accommodating the operator's wish to distinguish the flow direction.
	iScape Ruler Display	To set whether to display the iScape ruler in iScape imaging mode.
	B+Color Refresh With PW/CW Sampling Line Movement	To set whether to turn on the function that when moving PW/CW sampling line, B+Color image is activated under B+Color+PW/CW mode.
	Uninterruptible image saving when preprocessing parameters are changed	Adjusting preprocessing parameters will not interrupt image/cine saving.
	Color And PW/CW Synchronize Invert	To set whether to invert Color Map and PW/CW spectrum synchronously
	Display Transducer SN	To set whether to display the transducer SN.
	B+Color+PW Unfreeze keeping PW	To set whether to retain PW images when unfrozen under B+Color+PW mode.
Fusion	Power Line Frequency	Select the power frequency.
Tissue Tracking QA	Segment Model	To set the cardiac segment model: 16 or 17.
Image Parameter Display	Image Parameter Display	To select the parameters under each mode to be displayed in the real-time imaging screen.
ZoneVue	ZoneVue	To set whether to display "ZoneVue" parameter in the parameter adjusting area.

4.1.4 Application

Set the measurement ruler, measurement setting, follicle method, left ventricular setting, comment setting and so on.

Measure Parameter

Controls are as follows:

Item	Description
Cursor Type	Type of cursor displayed on the measurement caliper and results window. Value options:
	• Number: the cursor always displays as "+" while different measurements are marked with numbers.
	• Symbol: the cursor displays sequentially in 8 symbols to identify different measurements.
Cursor Size	The size of the cursor.
Heart Beat	The number of cardiac cycles in the heart rate calculation. (In heart rate measurement, the number of cardiac cycles should match the preset number.)
Cursor Line Display	If unselected, the connecting line between the measuring ends will be hidden after measurement.
Ellipse CrossLine Display	If unselected, the measuring axis within the ellipse area will be hidden after measurement.
Clear results while deleting caliper	Uncheck. The image is unfrozen or the image mode is changed after the measurement is completed. The measurement results are saved if the caliper is cleared.
Unit Setting	To set the measurement unit.

LV Cube/Teichholz/Gibsom

Set the tools used in the Cube/Teichholz/Gibson study.

Trace Cursor Speed

Set the cursor speed during tracing.

Comment

Set whether to clear comments and bodymark:

Item	Description
Clear comments while unfreezing image or changing probe/exam	To set whether to clear comments while unfreezing image or changing probe/exam.
Clear Bodymark upon Unfreeze	To set whether to clear bodymark whiling unfreezing image.
Voice comment enabled	To set whether to enable voice comment feature.

Follicle

Set the method for calculating the follicle.

PW Measure

PW measure velocity displays absolute value.

All measurement results in PW mode are absolute values based on the unit of velocity after checking this item.

Intelligent Input

Set to enable the Input Method Association.

4 - 6 Operator's Manual

ICA/CCA && RAR

Set the measurement properties of ICA, CCA, Renal A and Aorta.

Preview Thumbnail Image

4.1.5 OB

Set the relevant information regarding the fetal gestational age, fetal growth formula and fetal weight.

To set the default formula

Perform the following procedure:

- 1. On the [Fetal Gestational Age], [Fetal Growth] or [Fetal Calc] page, select an OB Item in the left column.
- 2. Select a formula in the right column.
- 3. Click [Default]. The default formula is marked with a $\sqrt{.}$
 - On the [Fetal Gestational Age] page, select whether to display the SD or EDD in the obstetric result.
 - On the [Fetal Gestational Age] page, select whether to display the EFW derived GA in the report.

To set the fetal weight display

Perform the following procedure:

- 1. Enter the [Fetal Calc] page.
- 2. Select the [Fetal Weight Unit].

Select Metric, English or English & Metric from the drop-down list.

- 3. Select the formula for calculating the weight percentile.
 - Select the formula from the drop-down list of [EFW-GP].
- 4. Click [OK] to confirm.

To import/export an OB Table or Formula

NOTE:

Only imported user-defined tables can be exported.

Perform the following procedure:

- 1. Select [Import] or [Export] on the [Fetal Gestational Age] or [Fetal Growth] page.
- 2. Select the drive and file path where the data is located.
- 3. Select the data file to load or export, click [OK] to confirm.

The imported user-defined table for FG and GA must be a *.csv file. The format of the *.csv file is described as follows:

• FG table

Table Type	Author Name	SD Type	Meas Value Unit	SD Unit
FG	The author name	Value of standard deviation	Unit of the measurement value	Unit of the standard deviation
Row Num	Row number (N) of the table			
No.	GA	Min	Meas Value	Max
1	GA value	Minimum value	Measurement value	Maximum value
2				
N				

GA table

Table Type	Author Name	SD Type	Meas Value Unit	
GA	The author name	Value of standard deviation	Unit of the standard deviation	
Row Num	Row number (N) of the table			
No.	Meas Value	SD(-)	GA	SD(+)
1	Measurement value	Standard deviation (-)	GA value	Standard deviation (+)
2				
N				

NOTE:

- Fill in the table according to the actual clinical values, except for those cells with bold text.
- Value of standard deviation. Select from one of the following: None, ±1SD, ±2SD, 3%~97%, 5%~95%, 10%~90%.
- Unit of the measurement value: according to the table to import, select from mm, cm, g, kg, cm² or mm².
- Row number (N) of the table: the maximum row number N in the column "No."
- The third row is empty.
- GA value, Minimum value, Measurement value, Maximum value: enter the number of days without the unit.

4 - 8 Operator's Manual

• Measurement value, Standard deviation (-), GA value, Standard deviation (+): enter the number of days without the unit.

User-defined OB Items

NOTE:

The calculation results of the user-defined OB formulae are used for reference rather than clinical diagnosis.

You can add user-defined formulae for items (obstetric tools) that are not included in the GA and FG table.

- 1. Select [More OB Items] on the [Fetal Gestational Age] or [Fetal Growth] page.
- 2. Select an item and click [OK].

The new item appears in the left column and the system asks if to add a formula.

3. Click [OK] to select the *.csv file (formula file) for the item. Or add a formula for the new item by clicking [Import].

Measure Result

EDD display: the EDD is displayed in the result window after checking.

GA Cycle For EDD

- Normal Cycle: GA is calculated according to 40 weeks after checking (EDD=LMP+287(40 weeks)).
- French Cycle: GA is calculated according to 41 weeks after checking (EDD=LMP+287(41 weeks)).

Display EFW GA in report

Estimate GA according to EFW data after checking.

4.1.6 Key Probe Preset

This page is used to set the functions of keys on the key probe by Short Press, Long Press, and Double Click.

4.1.7 Console&Footswitch

Select the application from the drop-down list of the "Control Panel Layout:". Different applications have different set of key configurations by default.

Click [Apply for All] to apply the key configuration of the current application to all applications.

Key function setting

To assign a function to a key:

- 1. Click to select a desired key. The system enters the function assignment page.
- 2. Click to select a function in each column.
- 3. Click [OK] to complete the function setting.

Foot switch function setting

You can assign a function to the left/middle/right key of the foot switch. The method is similar to setting key functions.

4.1.8 Key Board

Select the application from the drop-down list of the "Control Panel Layout:". Different applications have different set of key configurations.

Click [Apply for All] to apply the key configuration of the current application to all applications.

You can set the functions for the F keys of the key board. The method is similar to setting Console&Footswitch, see "4.1.7 Console&Footswitch".

Other Settings

Item	Description
Control Panel Brightness	To set the brightness for control panel key.
Trackball Speed	To set the speed of the trackball when moving the trackball.
Key Volume	To set the key volume at 3 levels, 0 means no sound.
Touch Screen Volume	To set the touch screen volume at 3 levels.
Trackball Cine Play Speed	To set the cine playing speed when moving the trackball.

4.1.9 Gesture

NOTE:

This function is only applicable to Windows system.

- 1. Click to select the desired gesture in the Key Function column on the left side of the page.
- 2. Click to select a function in the Function area. You can see the available functions selected on the right side.
- 3. Click [OK] to complete the function setting.

4.1.10 Output

Set the output format, the range and the resolution for the image.

Туре	Item	Description
AVI/MP4/ MOV Encode	Encode Quality:	To set the image quality of unloaded AVI. The system unloads according to the settings.
		The higher the image quality is, the clearer the unloaded image is. The unloading speed become slower with the larger space.
	Operating System Compatibility:	To set the unloading format of the AVI. The system unloads according to the settings.
		If checking "Mac OS", saving CIN files to USB flash drive as "MP4 Video".
	SendTo Frame Rate:	To set whether to enable/disable compression of images.
Analog Output	Output Size:	Select the output size: "Classic" or "Standard".
	Output Mode:	Select the format to output/separate the video format: NTSC or PAL.

4 - 10 Operator's Manual

Туре	Item	Description	
Digital Output	Output Size:	Select the output size.	
Size	Resolution:	Select VGA, HDMI output image resolution.	
DVR Output	Output Size:	Select DVR recording area.	
	Max Frame Rate	Select DVR recording Max Frame Rate.	
Retrospective Cine Length	Time(s)	To set the time duration of the retrospective cine saving with ECG disabled.	
	Beat(heart cycle)	To set the heart cycle of the retrospective cine saving with ECG enabled.	
Prospective Cine Length	Time(s)	To set the time duration of the prospective cine saving with ECG disabled.	
	Beat(heart cycle)	To set the heart cycle of the prospective cine saving with ECG enabled.	
Clipboard	Clipboard Reload Save	Set whether to overwrite or save a copy of the original image after editing.	
	Copy Position	Select the position to save a copy.	

4.1.11 Access Control

The system supports two types of users: administrator and operator.

Administrator

The system administrator can access all function modules, and view all patient data, such as patient information, images and reports, etc. Only one administrator is configured by default. The administrator can add or delete operators.

Operator

The operator can only access the function modules with assigned privileges. The operator can only view exam information saved in the system and operated by him or herself, such as patient information, images and reports, etc.

Enabling Access Control

The system administrator can preset the access controls, that is, whether an operator has the right to access data in the system.

Access control only can be set by the system administrator.

- If "Enable User Account Control" is selected, you must be authorized before accessing the data, and you can configure password policy and LDAP, and change password. If unselected, you can access all the data without authorization, and you cannot configure password policy and LDAP, and change password.
- If "Enable Emergency User" is selected, the administrator can edit privileges for emergency users. If unselected, the administrator cannot edit privileges for emergency users.

Adding a User/Assigning privilege

Turn on the access control function and log in to the system as Administrator before you add the user.

- 1. Click [Add] to bring up the dialog box.
- 2. Enter the user name and password, confirm password.

3. Select or deselect the check box from the privilege list.

Users can only access the function module with assigned privilege.

4. Click [OK] to confirm the setting and exit the dialog box.

The new user and the privilege will appear in the User List.

Deleting a User

Turn on the access control function and log in to the system as Administrator before you delete the user.

Select the user to be deleted in the User List. Click [Delete] to delete the selected user.

Editing Privilege

Turn on the access control function and log in to the system as Administrator before you edit privileges.

- 1. Select a user, click [Edit Privilege] to enter the "Edit user privilege" dialog box.
- 2. Select or deselect the check box from the privilege list.
- 3. Click [OK] to confirm the editing and exit the dialog box.

The edited privileges will appear in the User List.

Modify Passwords

NOTE:

The account password needs to be changed every 3 months.

The system administrator can modify all user passwords. The administrator password is empty by factory default. You can set this password.

An operator can only modify his/her own password.

- 1. Select the user name to be modified in User List.
- 2. Click [Change Password] to open the dialog box.
- 3. Enter current password, new password and confirm new password, then click [OK].

Configure Password Policy

Turn on the access control function and log in to the system as Administrator before you configure the password policy.

4 - 12 Operator's Manual

Click [Password Policy Config]:

Item	Description	Remark	
Lockout Threshold	Set the maximum time that a user can input the wrong password. If you exceed the maximum times, your account will be locked.	For example, assume that the "Lockout Threshold" is set to 5, the "Reset Account	
Reset Account Lockout Threshold after	Set the duration allowed for a user to continuously input the wrong password.	Lockout Threshold after" is set to 60, and the "Lockout Duration" is set to 60. That is, a user inputs the wrong	
Lockout Duration	Set the duration after an account is locked.	password for 5 times within 60 minutes, the account is locked, and the user can log in to the system only after 60 minutes. Other users with unlocked accounts can still log in to the system normally.	
Reset all lockout	Reset all locked accounts.	/	
Enable strong password(The password length must be 6-64)	 Enable strong password to improve security. If the strong password is enabled and you log in to the system with the account that is added before the strong password is enabled, the system prompts a warning message to inform you whether your password conforms to the password policy. The administrator can change password for administrator or operator. If the strong password is enabled and you add a new user account, the system prompt an error message to inform you that the password is too weak. please modify the password according to the error message. 		

LDAP Privilege Management

Turn on the access control function and log in to the system as Administrator before you edit privileges for the LDAP (Lightweight Directory Access Protocol) users.

Click [LDAP Config].

Item	Description
Server Address	Enter the server address in the field box after accessing the network.
Test LDAP Server	Click [Test LDAP Server] to test whether the LDAP server is accessible. If the LDAP is accessible, the system prompts the following message "Server test succeeded."
Root DN	It is automatically displayed after the server is successfully tested.

Item	Description
Days to keep cached password	Set days to keep the cached passwords in the local system. Users can log in to the server even without accessing the network within the setting days. • Empty: the passwords are kept in the local system permanently. • 0: no passwords are kept in the local system. • >1: for example, if it is set to 5, the passwords are kept in the local system for 5 days.
Member and privileges	 Adding a user: Enter the member name, and select or deselect privileges from the drop-down list of "Privilege". Click [Add], and the new members and privileges will appear in the list above. Deleting a user: Select a member to be deleted, and click [Delete]. Modifying the member name or privileges: Select a member to be modified, modify the member name, and select or deselect privileges from the drop-down list of "Privilege". Click [Modify], and the modified member name and privileges will appear in the Member of filter list.
Logon Test	 Enter the User name and password in the field boxes of the Authentication test area. Click [Logon Test] to test whether the user is authenticated. After successful authentication, the system prompts a successful authentication message.

Auto Lock Machine

To set the waiting time before the system enters locked status in the drop-down list beside "Wait". The system will be locked automatically if the system waiting time exceeds the duration already set.

4.1.12 Scan Code Preset

Set the code parameters for barcode reader.

1-dimension barcode reader (1D)

Item	Description
Scan Item	After scanning 1D bar code, the regular expression is matched in the priority order: "Patient ID > Other ID > First name > Last name > Middle name > Accession # > Operator > Diagnostician". If the regular expression is matched successfully, the data of 1D bar code will be displayed in this item in Patient page automatically.
	Example: The data of the bar code is 123 after scanning 1D bar code. The regular expression is matched in the priority order: "Patient ID > Other ID > First name > Last name > Middle name > Accession # > Operator > Diagnostician". If the regular expression of "Other ID" is matched successfully, "123" will be displayed in "Other ID" item in Patient page automatically.
Regular Expression	Set the regular expression according to the bar code format.
Move Up	Move up or Move down a selected item.
Down	

4 - 14 Operator's Manual

Item	Description
Delete	Add or delete a selected item. (Only the default item can be added or deleted.)
Add	
Load default	Restore the parameter value to the default value.

2-dimension barcode reader (2D)

General Analysis Mode

Select "General" from "Analysis Mode" drop-down list: The scan codes consist of Patient ID, Other ID, Patient Name, Birth, etc.

Item	Description	
Scan Barcode Example	Input a barcode example, barcode example is separated by separators (the separator is used to set the start and end position of each item), and the barcode data is displayed in the following items in turn.	
Parameters	• Input a barcode example, and you can change the information of "Patient ID", "Other ID", "First name", "Last name", "Middle name", "Birth(Day)", "Birth(Month)", "Birth(Year)", "Age" and etc. in the "Content" list. Note: "Ignore Item" is used to add one line below the selected item to hide unimportant patient information.	
	• Set the start and end position of each item via separators. After inputting a barcode example, you can select item separators from the drop-down list of the Separator. (Only separators that are input in the field box of the Scan Barcode Example can be displayed in the drop-down list of the Separator.)	
	Note: You can customize the age unit of "Birth(Day)", "Birth(Month)", "Birth(Year)" in the Content column. If the DOB provided by the patient contains only digit, the system displayed an auto-generated age.	
Down	Move up or Move down a selected item.	
Move Up		
Delete	Add or delete a selected item. (Only the default item can be added or	
Add	deleted.)	
Load default	Restore the parameter value to the default value.	
Age Unit	Select an age unit from the drop-down list of the "Age Unit": Year, Month, or Day.	
Female	Input the customized gender symbol besides the Male and Female field box, such as Male (M) or Female (F).	
Male		

• Advanced Analysis Mode

Select "Advanced" from "Analysis Mode" drop-down list: user enters scan barcode example and regular expression and click [Match], the system will match scan barcode example with regular expression automatically, and if which is matched successfully, the scan item will display the barcode by separators.

Append Options

The information of operator or diagnostician can be appended after selecting the check box.

For example, after scanning a 1D barcode of an operator or diagnostician, the obtained data is A, and A will be displayed in "Operator" or "Diagnostician" item in Patient page automatically. After scanning a 1D barcode of an operator or diagnostician for a second time, the obtained data is B, and A will be appended by B in "Operator" or "Diagnostician" item in Patient page automatically.

Default Item

If the default item is set to "No", and both the 2D and 1D barcodes fail to be matched, the obtained data of the barcode is input as a string of characters. After selecting a default item from the drop down list of "Default Item", the obtained data of the scanned barcode will be displayed in the corresponding selected default item.

For example, if the default item is set to "Patient ID", and both the 2D and 1D barcodes fail to be matched, the obtained data is displayed in the "Patient ID" item in Patient page automatically.

Import/Export

Set the barcode by importing/exporting configure file. You can contact Mindray service engineer also.

Worklist Options

- Select "Worklist Server" from the drop-down list, and the system searches the Worklist server according to the scanned data.
- Select "No" from the drop-down list, and the system creates a new exam in the Patient page according to the scanned data.

Worklist Default

- Select a default item for searching the Worklist server.
 For example, users select "Patient ID" from the drop down list of "Worklist Default", and the system searches Patient ID in the Worklist server.
- Select "No", and the system searches the Worklist server in the priority order: "Patient ID" > "Last name" > "Accession #".

NOTE:

The matching priority order is 2D item, 1D item, and Default Item, after the 1D/2D and default items are configured.

4.1.13 WorkStation

This page is used to set the quick key for sending image or cine to Workstation.

4.1.14 Biopsy

This page is used to set the biopsy grid parameters, such as Guide Line Dot Type, Grid Size, and Grid Type.

4.2 Exam Mode Preset

You can assign available exam modes for probes.

Perform the following procedure:

1. To select a probe, move the cursor over the Probe column and select the probe model using the drop-down list.

4 - 16 Operator's Manual

Select/delete exam modes:

On the left side, you can view all the available exam modes in the exam library for the probe.

On the right side of the screen, you can view the current exam modes assigned to the probe.

- Click [>]: add a selected exam mode in the [Exam Mode Library] to the [Probe and Exam Mode] list.
- Click [<]: add a selected exam mode in the [Probe and Exam Mode] to the [Exam Mode Library] list.
- Click [>>]: add all exam modes in the library to the [Probe and Exam Mode] list.
- Click [<<]: add all probe and exam modes in the library to the [Exam Mode Library] list.
- Click [Delete] to delete a user-defined exam in the Exam Mode Library area.
- Click [Default] to set a selected exam mode as the default exam mode. The default exam mode is marked by a " $\sqrt{}$ ".

4.3 Measurement Preset

"Exam Mode XX" on the upper left side refers to the currently configured exam mode. The configured general/application menus are only related to the current exam mode.

There are three kinds of measurement items.

Measurement

Results of measurements are directly obtained via the measurement tools, which are indicated by "" in the preset screen.

For example, "Distance" in the 2D general measurement or "HC" in the OB measurement.

On the touch screen, measurement tools are displayed using square button.

Calculation

Results of calculations are automatically derived by the system using other measured or calculated values as parameters, they are indicated by "iii" in the preset screen.

For example, EFW (Estimated Fetal Weight) in the OB measurement.

If all measurements related to a calculation tool are completed, the system will automatically calculate the result. If some measurement tools are performed again, the system will automatically update the calculation result using the latest measurement results.

On the touch screen, calculation tools are displayed using square button.

Study

A group of measurements and/or calculations for a specific clinical application, which are indicated by "\begin{align*}" in the preset screen.

For example, AFI in the OB measurement.

Fold/unfold the study to hide/show the measurement or calculation items included.

On the touch screen, study items are displayed with an arrow indicating the tools to be selected.

4.3.1 General Measurement Preset

You can preset the General Measurement packages for 2D (B/Color/Power Mode), M Mode, or Doppler (PW/CW) Mode respectively.

Perform the following procedure:

1. Select the [Caliper] on the [Measure] page.

- 2. Select the [2D], [M] or [Doppler] tab to go to the corresponding preset menu.
 - [Available Items]: general measurement tools configured by the system in the current scanning mode which are available but not assigned yet.
 - [Selected Items]: displays the tools to be added to the menu.
- 3. Add/Remove the general measurement item using the following buttons:
 - [>]: To add the selected tool from the [Available Items] to the [Selected Items].
 - [>>]: To add all tools in the [Available Items] to the [Selected Items].
 - [<]: To remove the selected tool from the [Selected Items] to the [Available Items].
 - [<<]: To remove all tools from the [Selected Items] to the [Available Items]. You do not need to select any items before removing.
- 4. Set the default item.

Select an item from the [Selected Items], then click [Default]. The item is marked with a $\sqrt{.}$ The default item is activated automatically when entering this general measurement menu.

5. Adjust the item position.

Select an item from the right column and click [Move Up]/[Move Down] to adjust the sequence in which the items are arranged in the corresponding general measurement menu (touch screen display).

6. Modify the properties of a measurement item.

The following takes Auto Trace as an example to show how to set the properties of a measurement tool.

- a. Select the [Doppler] tab to go to the corresponding preset menu.
- b. Select [Auto Trace] from the [Selected Items] and click [Property] to bring up the following dialog box.



4 - 18 Operator's Manual

Descriptions	of the attribut	es are shown ir	n the fol	lowing table:
--------------	-----------------	-----------------	-----------	---------------

Item	Description	
Item Name	Results obtained from Auto Trace are listed. The selected items will be	
Result	displayed in the results window after measurement.	
Unit	Select the measurement unit.	
	Click "Unit" column of each item to select.	
CalcMethod	Select the measurement method for the tool. Click "CalcMethod" column of each item to select.	

- c. Click [OK] to confirm the setting.
- 7. Select the measurement sequence.
 - [Repeat]: after the current measurement is completed, the system automatically activates the current tool again.
 - [Next]: after the current measurement is completed, the system automatically activates the next tool in the menu.
 - [None]: after the current measurement is completed, the cursor can be moved over the
 whole screen. And the cursor will automatically return to the menu of the corresponding
 measurement.
- 8. Click [OK] to confirm.

4.3.2 Application Measurement Preset

Measurement Package Preset

During measurement, the preset package displays on the touch screen. Items in the package can be preset and may belong to different application regions.

You may configure more than one measurement package for current exam mode. Under actual measurement status, select [Library] on the touch screen if necessary.

Click [Advanced] on the [Measure] page to enter the "Add New Package" page.

- [Available Items]: shows application packages configured in the system but not yet assigned to the current mode.
- [Selected Items]: shows application packages assigned to the current exam mode. If more than one package is assigned to the current exam mode, you can rotate the knob under the [Library] button on the touch screen or clicking menu title in the measuring status.

Package editing includes Creating Packages, Add/Remove Items, Deleting Measurement Packages, Setting Default Packages, Adjusting Package Positions.

- Creating Packages: Click [New] and enter a name for the new package in the dialog box popup. Click [OK] to confirm, the new package displays in the [Available Items] list.
- Adding/Removing Packages: Add/remove the package by clicking [>], [>>], [<] and [<<].
- Deleting Packages: Select a package from the [Available Items] list, click [Delete]. To delete an item from [Selected Items], you need to move it to the [Available Items] first.
- Setting Default Packages: Select a package from the [Selected Items] list, then click [Default]. The default package is marked with a √.

The default package displays when entering the [Measure] page.

The measurement menu of the default package (corresponding to the exam mode) displays when entering the measuring status.

• Adjusting Package Positions: Select a package from the [Selected Items] and click [Move Up]/ [Move Down] to adjust the sequence that the packages in the menu are arranged in.

Measurement Menu Preset

The following operations are available.

- Adding/Removing Items: Add/Remove the general measurement item using the [>], [>>], [<] and [<<].
- Setting Default Items: Select an item from the [Selected Items] list, click [Default]. The defaulted item is marked with a $\sqrt{}$.

To deselect the default tool, select it and click [Default] or set another item as the default. If a particular item is set as the default item, it automatically displays the submenu of the study when entering this measurement menu.

Adjusting Item Positions: Select an item from the [Selected Items], click [Move Up]/[Move Down].


The order in the list is also the item position in the menu.

User-defined Measurement

Perform the following procedure:


- 1. Select the [Measure] tab page.
- 2. Click [New].

The "Measurement Custom Wizard" dialog box appears.

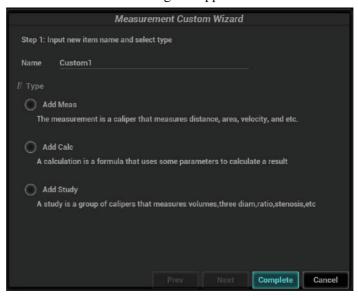

3. Enter the Name in the "Measurement Custom Wizard" dialog box, select "Add Meas", then select [Next].

4 - 20 Operator's Manual

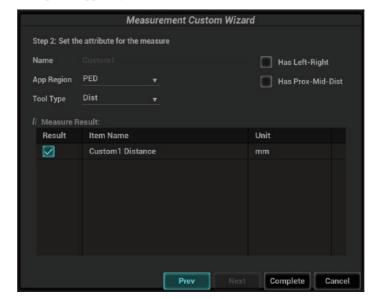

4. Select the [Tool Type], [App Region] and the Measurement Result.

Descriptions of the attributes in the dialog box are shown in the following table.

Attributes	Descriptions
App Region	Select the application region for the user-defined item.
Tool Type	General measurement tool type of the user-defined item. E.g. Select Dist. if you want to add a new item to measure the distance.
Has Left-Right	If selected, you can choose left or right side in the measurement menu.
Has Prox-Mid-Dist	If selected, you can choose proximal, middle or distal in the measurement menu.
Has Multi-Fetus	If selected, you can choose different fetuses in the measurement menu (available in the Obstetric application region only).
Measure Result:	Choose the results to be displayed in the results window. The result name can be changed.
	Move the cursor over an item and press <set>, then enter the name in the text box.</set>
Unit	Select the measurement unit.
	Click "Unit" column of each item to select.

5. Click [Complete] to finish setting. The user-defined measurement item is listed in the "Selected Items" menu and in the "User-defined" category of "Available Items". An asterisk appears after the user-defined item for identification.

The user-defined measurement item will be added automatically to the "Selected Items" in the Report template. If the item is completed in an exam, the results will be displayed in the report.

User-defined Calculations

NOTE:

- Please ensure the correctness and validity of the defined formula, otherwise Mindray will not be liable for damage caused by improper definition of the formula.
- Trigonometric functions are in degrees, not radians.


• PI is accurate to 7 digits.

User-defined calculations are derived from arithmetic operations in which the parameters are measurement, calculation or study results obtained in measurement items which exist in the system or are user-defined.


Perform the following procedure:

- 1. Select the [Measure] tab page.
- 2. Click [New].

The "Measurement Custom Wizard" dialog box appears.

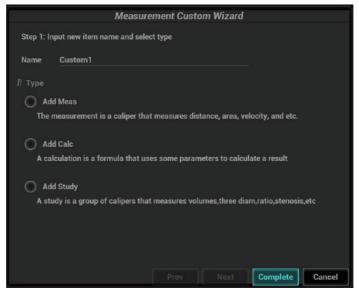

- 3. Enter the Name in the "Measurement Custom Wizard" dialog box, select "Add Calc", then select [Next].
- 4. Select the [App Region] and edit the formula.

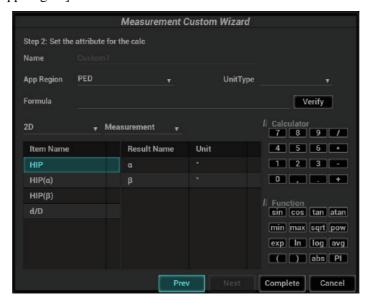

Descriptions of the attributes in the dialog box are shown in the following table.

4 - 22 Operator's Manual

Attributes	Descriptions
Formula	Displays the user-defined formula.
Verify	Used to verify if the formula is valid.
App Region	Select the application region for the user-defined item.
Item Name	All available measurement items of the application region selected in the previous step.
Calculator	You can select from measurement/calculation/study items in 2D/M/
Function	Doppler mode.
Unit	Used to enter numbers and functions in the formula.

For example, to create a user-defined measurement item (HC/AC):

- a. Enter name for the item, such as "calculation 1."
- b. In Region select "Obstetric," then select the measurement tool sources "2D" and "Measurement".
- c. Find HC in the "Item Name" list, click to select it, then double-click HC in the Result Name box on the right side. The index is added to the formula.
- d. In the Calculator, click "/" and it is added to the formula.
- e. Find AC in the "Item Name" list, click to select it, then double-click AC in Result Name box on the right side. The index is added to the formula.

The function description is as follows:

Function	Method	Number of Parameters	Function Description
sin	sin(a)	1	Sine (the ratio of the opposite to the hypotenuse)
cos	cos(a)	1	Cosine (the ratio of the adjacent to the hypotenuse)
tan	tan(a)	1	Tangent (the ratio of the opposite to the adjacent)
atan	atan(a)	1	Arctangent (the result is expressed in radian.)
min	min(a,b,)	≥2	Minimum
max	max(a,b,)	≥2	Maximum
sqrt	sqrt(a)	1	Square root
pow	pow(a,b)	2	Calculate b power of a
exp	exp(a)	1	Exponential function with natural constant e as the base
ln	ln(a)	1	Logarithm with natural constant e as the base
log	log(a)	1	Logarithm with 10 as the base
avg	avg(a,)	≥1	Average value
abs	abs(a)	1	Absolute value

Function	Method	Number of Parameters	Function Description
PI	PI	/	Constant π , 3.1415926

NOTE:

The letter "a" and "b" in the "Method" Column are parameters.

The following physiological indicators can be added to the formula.

Name	Definition	Unit
Age	Age	day
BSA	Body surface area	m^2
PSA	Prostate specific antigen	ng/ml
PPSA Coefficient	PPSA Coefficient	ng/ml ²
RAP	Right atrial pressure	mmHg
GA	Gestational age	day
Height	Height	cm
Weight	Weight	kg
Heart Rate	Heart rate	bpm
High BP(CAR)	High blood pressure (Cardiac)	mmHg
Low BP(CAR)	Low blood pressure (Cardiac)	mmHg
High BP(VAS Left)	High blood pressure (Left Vessel)	mmHg
Low BP(VAS Left)	Low blood pressure (Left Vessel)	mmHg
High BP(VAS Right)	High blood pressure (Right Vessel)	mmHg
Low BP(VAS Right)	Low blood pressure (Right Vessel)	mmHg

5. Verify the formula, select the unit of the result, then click [Complete]. The user-defined calculation item is listed in the "User-defined" category of "Available Items".

In the meantime, the user-defined calculation item will be added automatically to the "Selected Items" in the Report template. If the item is completed in an exam, the results will be displayed in the report.

Add a Study

You can add or remove user-defined study items in the [Selected Items] column.

Perform the following procedure:

- 1. Select the [Measure] tab page.
- 2. Click [Add Study] on the right.
- 3. Enter the study name in the dialog box that appears.
- 4. Click [OK] and the item will be added to the "Selected Items".
- 5. Select a measurement/calculation item from the "Available Items" and click [>] to add the item to the user-defined study.
- 6. Repeat the step 5 to add more items if necessary.
- 7. Move the cursor to click on the study and click [Property] on the right to edit the measure sequence.

4 - 24 Operator's Manual

Edit User-defined Items

NOTE:

- Adding B-Hist or B-Profile to the study is not supported.
- Click [Export Custom] in the measurement preset window to export the user-defined measurement.

Select the target defined item in the "Available Items", and click [Edit].

Remove User-defined Items

- Remove Measurement/Calculation
 - a. Select "User-defined" in the "Available Items", and select the desired item.
 - b. Click [Delete].
- Remove Study

Select a user-defined study, click [<].

4.3.3 Report Preset

NOTE:

- Deleting is not supported in IVF, IMT and EM reports.
- Watch the layout when setting the patient information layout of the report template. Do not set too many characters in one line; otherwise it may affect the display of the report.

Creating Report Templates

Perform the following procedure:

- 1. Select the [Report] on the [Measure] page.
- 2. Click [New].
- 3. Select template: click the drop-down list under "Application Region" to select the template and click [OK] to confirm the template layout and exit the dialog box.
- 4. Enter the name for the user-defined report template in the box after "Report Template Name".
- 5. Click [Measurement] to select measurement results to be displayed in the report:
 - a. Select an application category from the drop-down list beside "Available Items".
 - b. Select Measurement, Calculate, Study or All from the drop-down list beside "Available Items". The corresponding items appear in the list.
 - c. Use the [>] or [>>] buttons to add items to the "Selected:" list.
 - Only tools which appear in the right column and are completed in the ultrasound exam can be displayed in the report.
 - In cardiac mode, if result items of only one formula are selected, only results of that one formula will be displayed after measurement. (For e.g., if only items suffixed with Teicholz are selected, not with Gibson or Cube, then only results suffixed with Teicholz after measurement are displayed.)
 - d. Add the study.
 - Click [Add Study] and enter the study name in the dialog box which appears, then click [OK].
 - The new added study appears in the "Selected:" list.
 - e. Adjust the item position.

Select an item from the "Selected:" list, click [Up]/[Down] to adjust the position of the item in the list, as well as in the report template.

- f. Click [OK] to save the settings and exit the dialog box.
- 6. Set the module display in the report: click [Setting] to make a selection;
 - Tick the check box in front of the module name to display the module in the report;
 - Click [OK] to save the setting and exit.
- 7. Change the patient information layout in the report template:
 - Change the template used in the report layout: click [New Layout] to select another template.
 - Double click the information lines to be edited in "Report body". The dialog box of font setting appears. Set the font size, font weight or hidden key words.
 - Double click the blank of a module in "Report Body". The dialog box of editing the content appears. Select the content to be displayed at current position.
 - Press left <Set> on the blank of a module in "Report Body". Choose to add or delete the line, or add the table, etc.
- 8. Click [Save] to save the setting.
- 9. Click [Close] to quit the template.

Deleting Report Templates

Perform the following procedure:

- 1. Select the [Report] on the [Measure] page.
- 2. Select the template to be deleted from the list.
- 3. Click [Delete] > [Yes] to delete the selected template.
- 4. Click [OK] to confirm the settings.

Editing Report Templates

Perform the following procedure:

- 1. Select the [Report] on the [Measure] page.
- 2. Select the template to be modified from the list.
- 3. Select [Edit] to enter the report editing page.
- 4. Click [OK] to confirm the settings.

Setting Default Templates

Perform the following procedure:

- 1. Select the [Report] on the [Measure] page.
- 2. Select a report template from the list.
- 3. Click [Default].
- 4. Click [OK] to confirm.

4.4 Comment Preset

You can preset the custom comments library for current exam mode. The comments in the library are provided by the system or user-defined ones.

4 - 26 Operator's Manual

4.4.1 Comment Configure

Add comments

Directly enter user-defined comment texts, or select available items (select comment texts for the comment library or select comment in groups).

- Directly enter user-defined comment texts: posit the cursor in the field box above [Add Comment], enter the text comment through the keyboard, and then click [Add Comment].
 Then the directly-entered comment will be added to the Available Items and Selected Items.
- Select available items: First select a comment library and "Comment" from the drop-down lists beside "Available Items", and then all items will be displayed below "Available Items".
 Or Select "Group" from the drop-down list beside "Available Items", all groups will be displayed below "Available Items".
 - Click [>] to add the item in "Available Items" on the left into "Selected Items" on the right.
 - Click [>>] to add all items in "Available Items" on the left into "Selected Items" on the right.

Change position of the selected items

Select an item on the right side box and click ∇ , \triangle , \triangleleft or \triangleright button to change the position of the item.

Withdraw or delete a user-defined comment

- Withdraw an item (from the library or user-defined) in the Selected Items list:
 - Click [<] to withdraw selected Items to the Available Items list.
 - Click [<<] to withdraw all items in Selected Items.
- Delete a user-defined item in the Available Items box: You can only delete the user-defined items rather than the items in the system library. After a user-defined item is deleted, it will not be available.

Select a user-defined item in the Available Items box, and click [<].

List Config

Select a desired group from the drop-down list.

4.4.2 Comment Group Define

You can add user-defined comment group for current exam mode. The groups in the library are provided by the system or user-defined ones.

NOTE:

You can rename, delete, add comment to, delete comment from, or change position of the selected items in the user-defined groups, while system standard groups cannot be modified.

- Add groups: click [Add Group], position the cursor in the field box near [Lists Name], enter
 the group name through the keyboard, and then click [Confirm]. Then the entered group will
 be added to the Group Lists.
- Rename groups: select a user-defined group, click [Rename], enter the group name through the keyboard, and then click [Confirm]. Then the new group name will be displayed in the "Group Lists".

- Delete groups: select a user-defined group, click [Delete Group]. After a user-defined group is deleted, it will not be available.
- Add comments to groups: the operation is the same to that of the "Comment Configure" tab.
- Delete comments: select an item from the selected items and click [Delete].

Change position of the selected items: Select an item on the right side box and click [Up] or [Down] to change the position of the item.

After you customize groups, click [OK] to confirm and exit the screen.

4.5 iWorks Preset

You can customize the protocols and views in the iWorks preset screen.

4.5.1 Protocol Management

- Click [Multi Select] and you can select multiple views to be copied in the list on the left.
- Click to select the protocol in the list. The protocol type can be checked on the right.
- Click [Add Protocol] to create a new protocol. It can be customized.
- Click to select a protocol in the list on the left and click [Copy]. A protocol named "XXX_Copy1" is created with the copied views, which can be customized.
- Select a view with "Left", "Lt", "Right" or "Rt" in its name in the list on the left, and click [Copy L <> R]. The selected view is copied onto a new view in which bodymarks, annotations and measurement items are reversed to the opposite side.
- Click [Delete] to delete a user-defined protocol.
- Click [Up] or [Down] to move the selected protocol.
- Click [Move to Top]/[Move to Bottom] to move the selected protocol to the top or bottom of the list.

4.5.2 View Management

- Click to select the views in the list. The image, annotation, body mark and measurement settings can be checked on the right.
- Click to select a user-defined protocol in the list. Click [Add View] to add a view template to the protocol.

4.5.3 Create a New Protocol

You can create user-defined protocols and customize the automated procedure.

Perform the following procedure:

- 1. In the iWorks preset screen, click [Add Protocol] to create a new protocol.
 - Or, select an existing protocol and click [Copy] to customize the protocol based on the previous template.
- 2. Enter the protocol name, type and select the application region.
- 3. Click [Add View] to enter the view name and perform image settings.
 - In the measurement setting, if "Measurement on next section" is selected, the system will
 save two section images after finishing the section operation. One of the two sections will
 include the measurement result.
 - Select the checkbox of "Disable Protocol Body Marks" for body mark display settings.

4 - 28 Operator's Manual

4. Select [OK] to confirm and exit the screen.

4.6 Stress Echo Preset

4.6.1 Protocol Edit

You can create, edit, delete, copy, export and load the Stress Echo protocols using the Protocol Editor dialog box.

Item	Description
Protocol Name	Enter the protocol name.
Trigger	Set the trigger type.
WMS model	Set the chamber segment division method.
Loop usage:	Displays the acquired loop number as well as the total usable loop number.
View	Set the views for each stage.
Standard Views:	Set the standard view.
Export	Import/Export a protocol.
Load	
New Protocol	Create a new protocol.
Copy Protocol	Create a new protocol with an existing one.
Delete Protocol	Delete the protocol.
New Stage	Create a stage for the current protocol.
Delete Stage	Delete the stage.

Creating a Stress Echo Protocol

Perform the following procedure:

- 1. Click the [New Protocol] to the right of the Protocol Editor dialog box.
- 2. Enter the protocol name in the Protocol Name box at the top.
- 3. For each view (all views display for each phase):
 - a. Select [New View] in the View list.
 - b. Select a standard view from the Standard View list. Or you can customize the view name.
- 4. For each phase in the protocol:
 - a. Select [New Stage] in the Stage list.
 - b. Enter a phase name.
 - Select [Auto Select:], the system jumps to Select Mode after retrospective acquisition.
 - Select the required option from the [Clip Capture:] drop-down list.
 - Select the number of loops to acquire (per view in the selected phase) in the Loops list (for non-continuous stages).
 - Select [Type:]: Exercise or Drug.
- 5. Click [OK] to save changes and quit.

Editing a Stress Echo Protocol

Perform the following procedure:

- 1. Click an available protocol on the Select Protocol screen.
- 2. Click [Edit] to enter the Protocol Editor screen.
- 3. Edit the protocol as described in the create protocol.

Deleting a Stress Echo Protocol

Click an user-defined protocol on the Select Protocol screen, click [Delete Protocol].

4.6.2 Maintenance

Item	Description
Acquire Mode	Set the type of ROI: manual ROI or full-screen.
Overlay	Select the items to be labeled on each loop.
WMS Score Type	Set the chamber segment division method.
QT-Time Table	To customize the length of systolic duration acquired for a specific heart rate, it will store the clip duration. You can add and remove entries in this table. You can also load the factory defaults.
Heart Rate:	Enter the heart rate.
Syst. Duration:	Enter the systolic duration.
Load Factory	To reset the QT time table.
Update	Enter a heart rate and the referring systolic duration and then click [Update].
Delete	Select the required heart rate and systolic duration pair from the QT–Time Table and then click [Delete].

4.7 DICOM/HL7

4.7.1 DICOM Local Preset

NOTE:

- AE Title should be the same with the SCU AE Title preset in the server (PACS/RIS/HIS), for example, if the AE Title of the server preset in the storage server is Storage, and the AE Title of the accepted SCU is preset as Machine, then in the figure above, the AE Title of Local should be Machine, and the AE Title of storage server should be Storage.
- The device name is random. If the server name is same with that in the DICOM server list, the information "the server added already exits", click [OK] to retype the name.
- 4001, 6000, 3001, 6555 cannot be set as the port.
- IP address should be the address of the remote server.

4 - 30 Operator's Manual

DICOM local preset items are described as follows:

Item		Description
Local Host	AE Title	Application Entity title.
DICOM Service	Port	Communication port, DICOM communication port.
Properties (Including SCU and SCP)	PDU	Maximum PDU data package size (not need to change), ranging from 16384 to 65536; if the value is less than 16384 or greater than 65536, the system automatically sets it to the value 32768.
	DICOM Output Character Sets	Select an character set for DICOM output according to the local PACS workstation.
	TLS Port	Set the TLS port.
	TLS Server Setting	Import the encryption key/certificate.
	TLS Client Setting	 After importing TLS certificates, and selecting Verify Certificate check box, the system verifies the effectiveness of the TLS function in the DICOM storage, print, and worklist services. Import trusted certificates, or delete certificates.
Server	Device	Name of the device supporting DICOM services.
Settings	IP Address	IP address of the server.
	Ping	You can ping the other machines after you entered the correct IP address. Besides, you can select a server in the Device list to ping it.
	Device List	Displays the added device.
	Delete	Click to delete the selected server (s) in the device list.
	Set DICOM Service	Provides server settings of DICOM service. for details, please refer to the following chapters.
	Set DICOM Strategy	Click to enter the configure the strategy screen. for details, please refer to the following chapters.
	Log Level	Select the log display level: No Log, Service Result Log, Service Process Log, All Log.

Add a Server

Perform the following procedure:

- 1. Enter the server device name and IP address.
- 2. Click [Ping] to check the connection.
- 3. Click [Add] to add the server to the device list, and its name and address are displayed in the list.

Set DICOM Strategy

NOTE:

- The DICOM strategy must be configured by qualified personnel with good knowledge of DICOM standards.
- The qualified personnel must ensure the validity of the DICOM strategy.

Perform the following procedure:

- 1. Click [Set DICOM Strategy].
- 2. Edit the DICOM strategy:
 - Add: Enter strategy name and description, and click [Add] to add a new strategy. Then the added strategy will be added to the Strategy List.
 - Delete: Select a strategy from the Strategy List, and click [Delete].
 - Update: Select a strategy from the Strategy List, re-enter strategy name or description, and click [Update].

3. Configure the item:

Select a strategy name from the Strategy List, and assign strategy items to the selected strategy.

- Add: Set the function from the drop-list box, enter the parameter 1 and parameter 2, and click [Add]. Then the added strategy item will be added to the Strategy Items List.
- Delete: Select a strategy item from the Strategy Items List, and click [Delete].
- Update: Select a strategy from the Strategy Items List, reselect the function or re-enter the parameter 1/2, and click [Update].
- 4. Import/Export strategy:
 - Import: Click [Import], browse the desired strategy file and operate according to the screen prompts to import.
 - The imported file for DICOM strategy must be a *.xml file.
 - Export: Select a strategy from the Strategy List, click [Export] and then select the export path and type the file name.
 - E drive is default, and the file type is .xml.

4.7.2 DICOM Service Preset

The DICOM Service screen is used to set attributes for DICOM service.

When the system is configured with DICOM basic function module, and installed with DICOM modules, the corresponding preset can be found in DICOM Service screen.

TIP:

Not all SCPs can support verification. See the SCP properties to confirm whether the SCP can support this service. If not, the verification will not be successful.

Perform the following procedure:

- 1. Click [Set DICOM Service] on the DICOM/HL7 screen.
- 2. Select the DICOM service tab to enter the corresponding settings screen.
- 3. Enter the correct AE Title, port, etc.
 - Click [Add] to add the service to the Service List.
 - Select an item in the service list, change the parameters in the above area, and click
 [Update] to update the item in the service list.
 - Click to delete the selected service in the service list.
 - Select an item in the service list, click [Default] and you can see "Y" in the Default column.
- 4. Click [Verify] to verify that the two DICOM application entities are properly connected.

4 - 32 Operator's Manual

If the verification is successful, the system displays "xxx Verify Succeed." Otherwise, it displays "xxx Verify Failed."

If verification failed, possible causes may be: wrong IP address, not able to access IP address, remote DICOM server is not running, wrong port, incorrect application name.

Storage Service Preset

DICOM storage preset items are described as follows:

Item	Description
Device	After you set the server (s) in DICOM Preset screen, the name (s) will appear in the drop-down list, select the name of the storage server.
Service Name	Default is xxx-Storage, user-changeable.
AE Title	Application Entity title, here, it should be consistent with that of the storage server.
Port	DICOM communication port, 104 is default. Here, the port should be consistent with that of the storage server port.
Maximum Retries	Set the maximum retries (0-9). The default value is 3. If the DICOM task sending to the server fails, the retry times should be 3.
Interval Time(Sec)	Interval time.
Timeout(Sec)	Refers to the amount of time after which the system will stop trying to establish a connection to the service.
TLS	Transport Layer Security. Select whether to encrypt the data during network transportation.
Cine Zoom Mode	Select the cine zoom mode during image file storage.
Compression Mode	Select the compression mode: original data (uncompressed), RLE (the image not compressed), JPEG, and JPEG2000.
Compression Ratio	Select the JPEG compression ratio: lossless, low, medium, and high. The compression ratio is inversely proportional to the image quality (reserved function).
Color Mode	Select the color mode. If you choose the mix or the grey, RLE/JPEG is unavailable. The image uses 24 bit when sending the image from the ultrasound device to the server; it depends on the image when choosing the mix. The image use 8 bit if the image is captured in color mode or the image has the tint. All images use 8 bit when choosing the grey.
Allow Multiframe	If SCP supports this function, then select it.
Max Framerate	Set the frame range of transferring cin file into DCM multi-frame file. It is editable to the user.
3D/4D	Set the 3D/4D image transfer mode. Set the transfer mode for the 3D/4D cine sending. Normal: use the way that 2D image adopts to send; Volume: use Enhanced US Volume Storage IOD to send; Data source: used to obtain 3D/4D image for 4D Viewer.
SR Storage Option	To enable or disable structured reporting sending.

Item	Description
Encapsulated PDF	Select if to encapsulate PDF format report in DICOM standard. It becomes available if SCP supports the function.
Doppler Audio	Set to save the audio of PW mode.
Measurement	 If "All" is selected, the structured report will contain all the latest measurement values displayed on the measurement report. If "Single" is selected, the structured report will contain only the final measurement value.
Storage mode	 Set the storage mode for image and cine file: "Parallel file": save the current file, and is ready for the storage of the next file. "Parallel frame": send the current frame, and is ready for sending the next frame.
TransducerTracking	Files of images that are saved in DCM format through DICOM or DICOMDIR contain transducer serial number information.
Strategy Name	Set the DICOM strategy.
SR Compatibility	Configuration Selection for Compatibility of ViewPoint Server and DICOM Server.

NOTE:

- If the server software supports the compression algorithm, select JPEG, RLE, JPEG2000. Otherwise, original data should be used (RLE is the default method).
- RLE, JPEG and JPEG2000 are not supported by all SCPs. Refer to the SCP's DICOM CONFORMANCE STATEMENT electronic file to check whether SCP supports it or not. Do not select these compression modes if the storage server does not support them.
- Images of PW/M/TVM/TVD mode (B image is not frozen) and images other than PW/M/TVM/TVD mode: if "Max Framerate" is not "Full" and the actual frame rate is larger than the set value, the system will save the image files in a frame rate of the set value, and transfer in a frame rate of B mode.
- Images of PW/M/TVM/TVD mode (B image is frozen), the system will save/transfer the images files in frame rate of 6.

Print Service Preset

DICOM print preset items are described as follows:

Item	Description
Device	After you set the server (s) in DICOM Preset screen, the name (s) will appear in the drop-down list, select the name of the print server.
Service Name	Default is xxx-Print, user-changeable.
AE Title	Application Entity title, here, it should be consistent with that of the print server.
Port	DICOM communication port, 104 is default. Here, the port should be consistent with that of the print server port.
Maximum Retries	It starts retrying if it fails to send DICOM task to the server. The retry entry times should be this value.

4 - 34 Operator's Manual

Item	Description
Interval Time(Sec)	Reserved time.
Timeout(Sec)	Refers to the amount of time after which the system will stop trying to establish a connection to the service.
TLS	Transport Layer Security. Select whether to encrypt the data during network transportation.
Copies	Refer to copies of printed files. You can select among 1 through 5, or directly enter the numeral.
Settings	The system supports RGB (color printing) and MONOCHROME2 (black and white printing). Please select the type the printer supports.
Film Orientation	Select between LANDSCAPE and PORTRAIT.
Priority	Specify printing task priority among HIGH, MED and LOW.
Film Size	Select film size among the selections listed in the drop-down list.
Display Format	Specify quantity of printed files, e.g. STANDARD\2, 3 indicates 6 images are printed for each page.
Medium Type	Specify print medium: Paper, Clear Film, Blue Film; select Blue Film or Clear Film for black and white printing; select Paper for color printing.
Trim	Specify whether you want a trim box to be printed around each image on the film: Yes or No.
Configuration Info	Enter configuration information in the field.
Min Density	Enter the minimum density of the film.
Max Density	Enter the maximum density of the film.
Destination	Specify where the file is exposed: MAGAZINE (stored in the magazine), or, PROCESSOR (exposed in the processor).
Magnification Type	 Select how the printer magnifies an image to fit the film. Replicate: interpolated pixels belong to duplicate of adjacent pixels); Bilinear: interpolated pixels are generated from bilinear interpolations between adjacent pixels; Cubic: interpolated pixels are generated from cubic interpolations between adjacent pixels; None: without interpolation.
Strategy Name	Set the DICOM strategy.

Worklist Setting

DICOM service setting for Worklist is described as follows:

Item	Description
Device	After you set the server (s) in DICOM Server Setting screen, the name (s) will appear in the drop-down list, select the name of the Worklist server.
Service Name	Default is server-Worklist, and it can be modified.
AE Title	Application Entity title. It is consistent with that of the Worklist server.

Item	Description
Port	DICOM communication port, 104 by default. The port should be consistent with that of the Worklist server port.
Maximum Retries	Reserved feature.
Interval Time(Sec)	Reserved feature.
Timeout(Sec)	Refers to time after which the system will stop trying to establish a connection to the service.
TLS	Transport Layer Security. Select whether to encrypt the data during network transportation.
Strategy Name	Set the DICOM strategy.
Remove Attributes	Set the DICOM elements that are not sent during Worklist query.

MPPS Preset

MPPS setting items are described as follows:

Item	Description
Device	After you set the server (s) in DICOM Server Setting, the name (s) will appear in the drop-down list, select the name of the MPPS server.
Service Name	Default is server-MPPS, and it can be modified.
AE Title	Application Entity title. It should be consistent with that of the MPPS server.
Port	DICOM communication port, 104 by default. The port should be consistent with that of the MPPS server.
Maximum Retries	It starts retrying if it fails to send DICOM task to the server. The retry entry times should be this value.
Interval Time(Sec)	Reserved feature.
Timeout(Sec)	Refers to the amount of time after which the system will stop trying to establish a connection to the service.
TLS	Transport Layer Security. Select whether to encrypt the data during network transportation.

NOTE:

Set the MPPS service as the default when using the MPPS.

Storage Commitment Setting

DICOM storage commitment setting items are described as follows:

Name	NOTE
Device	After you set the server (s) in DICOM Server Setting, the name (s) will appear in the drop-down list, select the name of the storage commitment server.
Service Name	Default is server-SC, and it can be modified.

4 - 36 Operator's Manual

Name	NOTE	
AE Title	Application Entity title. Here, it should be consistent with that of the storage commitment server.	
Port	DICOM communication port, 104 by default. Here, the port should be consistent with that of the storage commitment server port.	
Maximum Retries	Reserved feature.	
Interval Time(Sec)	Reserved feature.	
Timeout(Sec)	Refers to the amount of time after which the system will stop trying to establish a connection to the service.	
Associated Storage Service	The associated storage server is preset before storage commitment, only after the exam is sent out, can storage commitment be created.	
TLS	Transport Layer Security. Select whether to encrypt the data during network transportation.	

Query/Retrieve

DICOM query/retrieve setting items are described as follows:

Item	Description	
Device	Select the name of a device that can be added (including the local).	
Service Name	Default is server-query /Retrieve, and it can be modified.	
AE Title	Application Entity title.Here, it should be consistent with that of the storage commitment server.	
Port	DICOM communication port, 104 by default. Here, the port should be consistent with that of the storage commitment server port.	
Maximum Retries	Reserved feature.	
Interval Time(Sec)	Reserved feature.	
Timeout(Sec)	Refers to the amount of time after which the system will stop trying to establish a connection to the service.	
TLS	Transport Layer Security. Select whether to encrypt the data during network transportation.	

HL7 Query Service Preset

The protocol version that the ultrasound system supports: V2.3, V2.4, V2.5, V2.6. HL7 service setting for Worklist is described as follows:

Item	Description	
Device	After you set the server (s) in DICOM Server Setting screen, the name (s) will appear in the drop-down list, select the name of the Worklist server.	
Service Name	Default is server-HL7Query, and it can be modified.	
AE Title	Application Entity title.here, it should be consistent with that of the HL7 server.	

Item	Description
Port	DICOM communication port, 104 by default. Here, the port should be consistent with that of the HL7 server port.
Maximum Retries	Reserved feature.
Interval Time(Sec)	Reserved feature.
Timeout(Sec)	Refers to the amount of time after which the system will stop trying to establish a connection to the service.
Listen Mode	This function enables the ultrasound system to use the listen port for data receiving.
Listen Port	Port for ultrasound system to receive data after the listen mode function is activated. Here, the port should be consistent with that of the HL7 server port. For details of listen port setting, refer to settings in the server.

4.8 Network Preset

4.8.1 Network Settings

NOTE:

This function is only applicable to Windows system.

Transmission Encryption

After accessing the network, click [VPN Config] to enter the "VPN Config" interface.

Item	Description
Status	 "No driver": click [SetupDriver] to enter the "TAP-Windows 9.21.2 Setup" interface, and do as instructed. "Ready": the VPN is ready for use. "Advance": VPN Advance Configuration "Connected": VPN is successfully connected. "Disconnected": VPN is disconnected. "Error": error connection.
Server IP	/
Group	/
User Name	/
Password	/
Hide characters	The password is displayed as *.
Disconnect	Connect or disconnect VPN.
Connect	

4 - 38 Operator's Manual

Item Description	
Advance	 Enters the "VPN Advance Config" interface. Reset: if the system does not respond after you click [Config], click [Reset]. Config: enters the "OpenConnect-GUI VPN client" interface. For details about the settings, please refer to the TAP manual. NOTE:
	After exiting the "VPN Advance Config" interface, you need to reboot the system; otherwise, you cannot connect VPN normally.
Close	Close the "VPN Config" interface.

Turn on Wi-Fi function

Perform the following procedure:

- 1. Select [Network Settings] page in Network Preset screen.
- 2. Click [Enable Wi-Fi] in the screen.

4.8.2 iStorage Preset

You can send exam data or images to the iStorage server and perform analysis using UltraAssist. For details about this feature, see the UltraAssist manual.

Item	Description
Service Name	The name of the iStorage service.
IP Address	IP address of the iStorage service device.
Port	Port for transmitting.
Connect	Click to verify connection.
Add	Click to add the Network service to the service list.
Update	To save the changed parameters.
Delete	Click to delete the selected service from the service list.

Add an iStorage service

Perform the following procedure:

- 1. Set the iStorage server properties as described above.
- 2. Click [Add] to add the service to the Service list.

Edit a network service

Perform the following procedure:

- 1. Select the service to be updated in the service list.
- 2. You can see properties in the Configure Service area.
- 3. Modify the parameters and click [Update] to update the setting.

4.8.3 MedSight Preset

You can set environment for MedSight here and then use the MedSight function by mobile phone or tablet computers. See MedSight manual for details.

4.8.4 Q-Path Preset

You can use the ultrasound system to check data on browser directly. After you have ordered storage service of a network website service, you can check data using the website, authorized account and password (provided by the service vendor). You can open the browser (Q-View) to review previously sent DICOM data.

Q-path is a network server provided by Telexy Healthcare Inc. for digital image storage. Q-View is a client viewing tool for the server. Telexy Healthcare developed technology and a command structure that allows any Q-view enabled ultrasound system to access Q-path directly from the ultrasound system using a single control. The primary purpose for Q-view is to provide remote access to Q-path from the ultrasound system to complete the exam report on the ultrasound system and submit for QA.

To access Q-Path on the system, the user just opens the Q-View first and then enters the URL, user account and password provided by Telexy Healthcare, and the system software system will call Q-View tool then for user Q-Path application.

For details, please contact Q-Path service provider.

Q-Path Basic Preset

Item	Description
Advanced	Sets the sub URLs of "QView full sub URL" and "QView lite sub URL".
	The sub URL is set by default. Users can modify the sub URL and click [Apply] to exit the "QView sub URL setting" window.
Enable Q-Path by the Report Key	Sets whether to open the Q-Path server through the [Report] key.
Worksheet Only	Sets whether to directly enter the Worksheet interface after opening the Q-Path server.
Password On	Sets whether to display the Signature field box in a worksheet.
Worksheet	Tap [Report] > [WorkSheet] or tap [Review] > [Report] > [WorkSheet], enter the worksheet password in the field box, and click [OK].
	Users can query the corresponding worksheet by searching the worksheet password in the Q-Path server.
Password On End Exam	Sets whether to input the worksheet password after ending an exam.
Password Visible	Sets whether the password is visible.
Import	Imports a user-defined worksheet template from the USB storage (downloaded from the Q-Path server).
Backup	Backs up worksheets to the USB storage.
Restore	Restores the backup worksheet template from the USB storage to the ultrasound system.
Delete	Deletes a worksheet template.
Load Factory	Restores the worksheet template to the default state.

Perform the following procedure:

- 1. Select "Enable Q-Path".
- 2. Enter the website, account and password of the target service.

4 - 40 Operator's Manual

- 3. Select user type: Personal User or Default User.
 - Personal User: the personal user needs to enter the user name and password in every-time login.
 - Default User: after the default user enters the user name and password in the field box of the "User Name" and "Password", and click [OK], no login is required to access the Q-Path server later.
- 4. Select an appropriate item from the drop-down list of "Available Items".
- 5. Select an exam mode in the left "Exam Mode" column.
- 6. Select a worksheet in the right "Worksheets" column.
- 7. Click [OK] to exit, and the system will shut down.

4.8.5 MIOT Preset

After the MIOT (Mindray Internet of Things) service is enabled and configured, the Ultrasound device information such as Usage, Operating duration, can be transmitted to MIOT.

Item	Description
IP Address	IP address of the MIOT service device.
Port	Port for transmitting.
MIOT Service Switch On	Click to enable MIOT service.

4.9 Print Preset

This screen is used to set up the printer and image printing.

4.9.1 Print Setting

Item	Description
Add Service	Click to begin adding print services.
Remove Service	Click to delete the selected print service.
Rename Service	Click to rename the selected print service.
Default Print Service	Click to set the selected print service as the default one.
Property	Preset print service properties.

4.9.2 Image Settings

Click [Image Setting] to enter the page, you can set the brightness, contrast and saturation of image printing, or you can use the default values.

4.10 Maintenance

The [Maintenance] function is designed for you to import or export user data, restore factory setting and export log. You may also execute self-test and option installation/trial through the maintenance menu. Furthermore, you can set the factory preset, export the register data, and etc.

If you require other maintenance functions, please contact Mindray Customer Service Department or sales representative.

4.10.1 Option

The system enters the Option page after entering the Maintenance screen. In the Option list, the system lists all the system-supported options and their installation status (not installed or installed).

Please contact the Mindray Customer Service Department or a sales representative for details.

4.10.2 Exporting Setup Data

This function is used to write all setup data of the system into a disk for backup. The format of the data file is .PDP.

You can select 2 types of preset data to export from the system:

- General module preset data: including "All Preset", "Image Preset", "iWorks Preset" and "DICOM/HL7" data.
- Exam mode related preset data, including all image setting, comment and body mark setting and measurement setting data.

Perform the following procedure:

- 1. Select the target module.
- 2. Click [Export].
- 3. Select the path to save the data.
- 4. Select the exported file and type as PDP and click [OK].

4.10.3 Importing Setup Data

This function is used to import the existing setup data to the setup data memory of the system. The system will reset and operate according to the setup preferences that were imported.

Perform the following procedure:

- 1. Click [Import].
- 2. Select the imported file.
- 3. Click [OK], a progress bar will appear and the setup data is imported to the specified path.

4.10.4 Load Factory

To restore the factory setup data, click [Load Factory] on the right side of the screen.

4.10.5 Probe Check

This function enables users to check if a transducer element is in malfunction, so as to evaluate the transducer performance.

Before performing the probe check, ensure the probe head must be clean and the probe is in nonscanning state.

Click [Probe Check] to open the Probe Check screen. The system automatically performs probe check to the element of the currently activated probe.

4 - 42 Operator's Manual

- If a transducer element is in malfunction, it is displayed as a red spot.
- If a transducer element functions well, it is displayed as a green spot.

You can export the result image to the external device.

4.10.6 Other Settings

For Windows System

Other preset settings are described as follows:

Item		Description
Setup	Export Log	Export the log.
	Self Test	Perform system self-test and restart the machine.
	Recover	To recover the system.
	Battery Manufacture State	Querying Battery Health Status.
	Prepay Installment	Display the prepay installment information.
	Enter Windows	For this function, you need a one-time password, please contact the service engineer or your agent.
	Stop WinProxy	Cursor debug interface.
	Start WinProxy	
	Fast Startup	To speed up the startup process.
		NOTE:
		After installing McAfee, please disable the Fast Startup function to avoid McAfee failure.

If you have any questions, please contact the service engineer or your sales representative.

For Linux System

Other preset settings are described as follows:

	Item	Description
Setup	Export Log	Export the log.
	Self Test	Perform system self-test and restart the machine.
	Recover	To recover the system.
	Battery Manufacture State	Querying Battery Health Status.
	Prepay Installment	Display the prepay installment information.

If you have any questions, please contact the service engineer or your sales representative.

4.11 Security

4.11.1 Drive Encryption/Secure Data Wipe

Encrypt the patient data stored in the hard disk. The system provides two encryption methods: Factory Default and User Define.

- Factory Default: the system is in factory state by default.
- User Define: add a user-defined password.

Perform the following procedure:

- 1. Select [User Define].
- 2. If no patient data are stored in the hard disk, click [Confirm], input the password and click [Confirm] to finish the password setting

If the patient data are already stored in the hard disk, the system will pop-up prompts, follow the steps below:

- a. Click [OK].
- b. Click [Wipe] and operate according to the screen prompts to clear patient data.
- c. Select [User Define] again, and click [Confirm].
- d. Input the password and click [Confirm] to finish the password setting.

NOTE:

- If you want to switch to Factory Default, perform steps above again. The password is the same as that of the User Define.
- When you set password, multi-language and Chinese characters are not supported.

4.11.2 Anti-Virus

For Windows System

The system provides two pieces of anti-virus software: Windows Defender and McAfee. They can effectively prevent the ultrasound system from being attacked by virus, spyware, or other malware.

- Windows Defender is already installed on the system.
- The McAfee software is an option. If the McAfee software is installed, the system displays "McAfee is running". If you want to buy McAfee, contact Mindray representatives.

NOTE:

- McAfee cannot be uninstalled after successful installation.
- After the option is installed, the system will be restarted. And after restart, the system installs McAfee automatically, which needs about one hour.
- If McAfee is improperly installed due to power-off, shut-down, closing of cmd.exe, or any other abnormal operation during the installation, please contact the Mindray service engineers.

For Linux System

The system provides anti-virus software: ClamAV. ClamAV can effectively prevent the ultrasound system from being attacked by virus, spyware, or other malware.

The ClamAV software is an option. If you want to buy ClamAV, contact the service engineer or your sales representative.

4 - 44 Operator's Manual

After the ClamAV is installed, click [System Scanning] or [Global Scanning] on the [Security] Setup screen to scan the virus. When the system is connected to the Internet, click [Update] to update the antivirus library to the latest version.

Transmission Encryption

NOTE:

This function is only applicable to Linux system.

After accessing the network, click [VPN Config] to enter the "VPN Config" interface.

Item	Description
Status	"Ready": the VPN is ready for use.
	"Advance": VPN Advance Configuration
	"Connected": VPN is successfully connected.
	• "Disconnected": VPN is disconnected.
	"Error": error connection.
Server IP	/
Group	/
User Name	/
Password	/
Hide characters	The password is displayed as *.
Disconnect	Connect or disconnect VPN.
Connect	
Advance	Enters the "VPN Advance Config" interface.
	• Reset: if the system does not respond after you click [Config], click [Reset].
	Config: enters the "OpenConnect-GUI VPN client" interface. For details about the settings, please refer to the TAP manual.
	NOTE:
	After exiting the "VPN Advance Config" interface, you need to reboot the system; otherwise, you cannot connect VPN normally.
Close	Close the "VPN Config" interface.

4.12 System Information

Click [About] on the Setup menu to enter the system information screen. The "About" shows the information about the product type, manufacturer, configuration type, ECN/TCN, version number, MAC address, etc.

You cannot edit the information, but only view them. The information varies depending on the system configurations and version.

Log onto the system as Administrator, and click [Statistics] to enter the statistics screen, which shows the total exam numbers of each probe, application and operator.

This page intentionally left blank.

5 Exam Preparation

You can start a patient exam in the following situations:

- New patient information: to start a new patient exam, patient information must first be entered.
- New exam: to start a new exam for patient who is already registered, the recorded information can be obtained through either iStation or Worklist.
- Activate exam: to select an exam that has been completed within 24 hours, continue the exam with imported patient information and exam data.
- Continue an exam: to select an exam that has been paused within 24 hours, continue the exam with imported patient information and exam data.

5.1 Patient Information

5.1.1 New Patient Information

ACAUTION

Before examining a new patient, tap the [End] on the touch screen to end the exam of the previous patient, update the patient ID and information, to avoid mixing data of the next new patient.

To start a new patient exam, it is better to type the detailed patient information. The system will set up a unique information database for each patient based on the patient information entered, so that the information of one patient will not be confused with that of another patient.

NOTE:

The system supports image scanning and measurement without patient information.

1. Tap [Info] on the touch screen to enter the patient information page.

Place the cursor onto the targeted box. The field box is highlighted and a flashing cursor appears. Information can be entered or selected from the options.

NOTE:

- Patient ID is generated automatically by the system after starting a new patient, and can be modified manually. The characters "\", "*", "?" are not permitted.
- Select "Male", "Female" or "Unknown" for patient gender in the drop down list.
- You can either enter the patient's date of birth manually, or click to select the date, and click [Confirm] to finish.
- The age unit can be "Years", "Months" or "Days." If the age is less than one year, the system will automatically calculate the age in months or days.
- When you enter the date manually, please enter it in the format as that of the system.
- 2. Select the exam type tab to enter exam-specific information.

NOTE:

- BSA body surface area: After the height and weight are inputted, the system will automatically calculate the BSA and BMI (Body Mass Index) based on the formula.
- ALT: Alanine transaminase.
- Gravida: times of pregnancy
- Ectopic: times of abnormal pregnancy. e.g. extrauterine pregnancy.
- Gestations: Number of embryos (1, 2, 3, 4)
- IVF information: Essential female hormone and ovulation.
- Calculation index: Calculate gestation age (GA) and estimated delivery date (EDD) based on last menstrual period (LMP), in vitro fertilization (IVF), basic body temperature (BBT), previous exam date (PRV). Select LMP, IVF, PRV, BBT, or EDD from the drop-down list; or, calculates GA and LMP according to the EDD and entered date.
 - LMP: After you enter LMP, the system will calculate and display GA and EDD.
 - DOC: After you enter DOC, the system will calculate the GA and EDD.
 - IVF: After you enter IVF, the system will calculate GA and EDD.
 - PRV: input the date and GA of the last exam, the system will calculate a new GA and EDD.
 - BBT: input BBT, the system will calculate the GA and EDD.
 - EDD: after you enter EDD, the system will calculate and display GA and LMP.
- 3. Input general information/operating Information.
- 4. Functional keys.
 - [Pause Exam]: to pause the current exam due to some special causes or system power off.
 - [Cancel Exam]: to cancel the current exam.
 - The cancelled exam can't be restored.
 - [New Patient]: click to clear the current patient information in the patient information screen in order to input new patient information.
 - [New Exam]: click to clear the current exam information in order to create a new exam for the current patient.
 - [Quick Register]: click to save the patient information quickly and return to the main screen.
- 5. To exit the Patient Info screen
 - Exit and save the settings: click [Save] on patient information page, tap [OK], or tap [Info] on the touch screen.
 - Exit without saving the information: click [Cancel] on patient information page or tap [Cancel] on the touch screen.
 - Press or <Freeze> to return to the current exam mode.

5.1.2 Retrieve Patient Information

iStation

The patient data can be obtained in iStation from the system hardware or USB memory device. You can enter the searching conditions for the patient.

- 1. Do one of the following to enter iStation screen:
 - Press <F2 iStation> on the Key Board;

5 - 2 Operator's Manual

- Click [iStation] in the "Patient Info" screen;
- Click [iStation] in the Review screen.
- 2. Select the data source.

Select the data source in the drop-down list of "Data Source".

- 3. Search for patient information.
 - a. Select [Search Options] to set up search options.
 The search options include "Search Field", "Exam Date", "Exam Type", "Gender", and "DOB".
 - b. Enter the keyword corresponding to the search type in the search box. The system will display all exam records immediately.
- 4. Select the desired patient information in the list, and the system pops up the shortcut menu.

Review Image	Click to enter the Review screen.
Patient Info	Click to enter the Patient Info screen.
Review Report	Enter diagnostic report screen.
Delete Exam	Delete the selected record.
Backup Exam	Click to back up the selected patient record to media supported.
Restore Exam	Click to import the patient data from an external media.
Send Exam	Click to send the selected patient data to external device, storage server or printer.
Activate Exam	Click to continue an exam that has been finished within 24 hours.
Resume Exam	Click to continue an exam that has been paused within 24 hours.
Annotation Exam	Click to add annotations to the selected exam, or view the history annotations of the selected exam.

5. Click [New Exam] to enter the Patient Info screen.

The corresponding patient information is also imported to the new exam simultaneously. After editing the patient information in the Patient Info screen, select [Save] to start a new exam.

WorkList

NOTE:

Configure DICOM Basic and DICOM WorkList first.

Click [Worklist] in the "Patient Info" screen to query or import the patient data.

5.2 Select Exam Mode and Probe

ACAUTION

If the exam mode is changed during a measurement, all measurement calipers on the image will be cleared. The data of general measurements will be lost, but the data of application measurements will be stored in the reports.

1. Connect proper probes to the system, and tap [Probe] on the touch screen.

2. Tap to select the probe type and exam mode, and the system exits the dialogue box to enter the selected exam mode and probe.

The activation indicator of the selected probe on the front I/O panel lights in blue.

Quickly switch to recently used probes and exam modes

The recently used probes and exam modes are displayed on the right side of the touch screen. Select an appropriate probe and exam mode for quick switch.

IP (Image Process) switch

For the application that supports IP switch, a set of exam modes that corresponds to different IPs are displayed on the touch screen. You can click to switch to the corresponding IP.

NOTE:

- The exam modes that correspond to switchable IPs should belong to the same application. For example, ABD generic, ABD Difficult, and ABD vascular all belong to the abdomen application.
- IP switch will not cause the system to return to real-time B mode. After the IP is switched, only the image parameter is switched at the same time. Measurements, comments, and bodymarks remain the same as those before switching.
- IP switch can not be performed in the frozen mode.
- For details about IP preset manager, please refer to "6.1.2 Quickly Saving Image Settings".

5.2.1 Dual-probe Switch

A user-defined key for dual-probe switch can be defined in preset, by which you can fast switch the probe under B/Color/Power mode.

NOTE:

This function applies only to probes with the same exam modes.

- 1. Scan to obtain the image by current probe.
- 2. Tap [Probe] on the touch screen. The probe types appear.
- 3. Choose the probes to be compared. The system enters dual-probe mode. The image from previous probe is frozen.
- 4. Scan and obtain the required image from the current probe.
- 5. Press the user-defined key to switch the images of two probes.

5.2.2 Bi-plane Probe Switch

For the probe ELC13-4s, after selecting the exam mode, enter B mode, and tap [C] or [L] on the touch screen to select the convex plane or linear plane.

5.2.3 Selecting Imaging Mode

Select the imaging mode via the functional buttons on the control panel.

5 - 4 Operator's Manual

5.3 Activate& Continue an Exam

5.3.1 Activate an Exam

In iStation screen, select the exam record finished within 24 hours, and click [Activate Exam] from the menu popped up; or, click [Activate Exam] in iStation or Review screen to activate the exam.

NOTE:

- The system can automatically load the patient information and exam data to continue the exam.
- If you want to continue an exam which data lies in an external memory database, you have to first allow the system to load the patient data to the system's patient database.
- For an only one re-activated exam, you can modify patient ID.

5.3.2 Continue an Exam

In iStation screen, select an exam record paused within 24 hours, click [Resume Exam] from the menu popped up to continue the exam.

If you want to select a patient data in an external memory database, you have to first allow the system to load the patient data to the system's patient database.

The patient ID can be modified for the exam only with one exam record and being activated again.

5.4 Pause & End an Exam

5.4.1 Pause an Exam

Sometimes, you have to stop an uncompleted exam due to some special causes. When the exam is paused, the system can begin other exams.

- 1. Tap [Info] on the touch screen to enter the patient information page.
- 2. Click [Pause Exam].

If the system is powered off during scanning, the exam status turns "paused" after the system

When an exam is paused, the system will:

- Save the exam-related images, reports and measurement data, modify the status as "Paused".
- Save the exam information, including report, imaging mode, exam mode, image parameters, operation mode, and imaging/measurement data and so on.

5.4.2 End an Exam

Before examining a new patient, tap [End] to end the exam of the previous patient, update the patient ID and information, to avoid mixing data of the next new patient.

To end an exam, do one of the following:

- Tap [End] on the touch screen to finish the current exam.
- Click [New Patient] on the Patient Info screen to end the last patient exam and clear the patient information.
- Click [New Exam] on the Patient Info screen (or iStation screen, or Review screen) to end the last exam and clear the exam data.

This page intentionally left blank.

Image Acquisition

MARNING

- The images displayed in this system are only reference for diagnosis.
 Mindray is not responsible for the correctness of diagnostic results.
- In Dual-B imaging mode, the measurement results of the merged image may be inaccurate. Therefore, the results are provided for reference only, not for confirming a diagnosis.

6.1 Imaging Mode

Switching Between Image Modes

Refer to "2.7.3 Control Panel" for image mode switch.

Quickly switch imaging mode

Press the <Menu> key on the small key board to quickly switch to the special mode. The available special modes are displayed on the top left corner of the screen. Press the <Menu> key again to close the special menu.

6.1.1 Image Adjustment


Touch screen displays (Non-mapping mode)



No.	Item	Description
1.	Mode displaying area (or main functional tabs)	Displays the current modes, click the tab to enter the mode.
2.	Other application mode entrance	Displays the available application modes related, click to enter the modes.
3.	Parameter adjusting area	 Displays the parameters in the current imaging mode or function. Parameter magnitude setting: Click por to increase/ decrease the value. ON/OFF setting: some of the parameters only can be set at ON or OFF, ON is to activate the function, and when the function is activated, the key is highlighted. Page selection: if the parameters cover more than one pages, slide left and right to turn pages. Parameter submenu: for the parameter with vicon, tap to display the submenu to select the desired value. Functional item: tap to go to the corresponding function.
4.	Knob-adjusting area	 Displays the knob-controlled parameters. There are six knobs at the bottom of the touch screen; their functions vary with the current menu. Press or rotate the knobs to adjust the corresponding parameters.

Touch screen displays (image mapping mode)

Enter the mapping mode to open the mapping menu. Tap the menus to operate. Refer to "2.8.4" Touch Screen" for details.

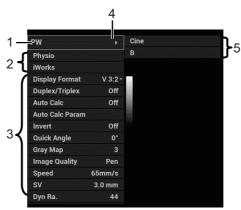

No.	Item	Description
1.	Menu title	Displays the current image mode. Click the expand button to show the image modes. Select the image mode if necessary.
2.	Other application mode entrance	Displays the available application modes related, click to enter the corresponding mode.

6 - 2 Operator's Manual

No.	Item	Description
3.	Parameter adjusting area	 Displays the parameters in the current imaging mode or function. Value adjustment: click the parameter item. The value increases as swiping from left to right; the value decreases as swiping from right to left. ON/OFF setting: some of the parameters only can be set at ON or OFF, ON is to activate the function. Parameter submenu: for the parameter with ▼ icon, tap to display the submenu to select the desired value. Functional item: touch to go to the corresponding function. Scrollbar operation: scroll to view all items.
4.	Expand button	/
5.	Sub-menu	/

6.1.2 Quickly Saving Image Settings

Tap [QSave] on the probe and exam mode selection page, press <F7> or the user-defined key to QSave to enter the page.

To save image parameters

Click [Save] to save the current image values for the current exam mode of the certain probe.

New Exam

Click [Create] to save the current image parameters, measurements, comments, body mark settings to the exam mode. The system will ask for a new name of the exam.

Restore the factory default settings:

Click [Restore] to restore the probe and exam mode to factory settings.

View image parameter

Click [Show Parameter] to view the image parameter of the current exam mode and the probe.

- Click [Advanced]. The value to TIC/TIB/TIS can be set.
- Click [Advanced], and then enable [Sampling Line Displaying]. The sampling line always appears after being set when entering PW/M/TVM mode for once. Press <PW>/<M> to enter the corresponding mode one time.
- Click [Advanced], and then enable "High Frame Rate STE" (it is an option) to improve the image effect.

IP Preset Manager


Click [IP Preset Manager] to save, create, restore, or delete the IP.

3D4D Preset Manager

Click [3D4D Preset Manager].

• Level: displays the scenario and subpreset item of the currently activated probe and exam mode. The scenario and subpreset item can be renamed or restored to factory settings.

Scenario and Subpreset: the item can be deleted, added, and set to default active item, and the
position can be adjusted.

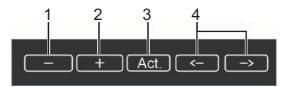

No.	Item	Description
1.	Delete	Delete a selected scenario or subpreset.
2.	Add	Click a blank button, and select a desired scenario or subpreset under the currently activated probe and exam mode.
3.	Set to active	Set a scenario or subpreset to the default active item.
4.	Move to left/ right	Move a scenario or subpreset to the left or right.

• Click [Show Scenario Parameters] and [Show Subpreset Parameters] to view the Scenario and Subpreset parameters.

TIP

It is unavailable for frozen dual-probe mode.

6.2 B Mode

B mode is the basic imaging mode that displays real-time views of anatomical tissues and organs.

6.2.1 B-mode Image Scanning

Enter the patient information, and select the appropriate probe and exam mode.

If the system is in other imaging mode, press to return B mode.

Adjust parameters to optimize the image.

6.2.2 B-mode Image Parameters

In B Mode scan, the image parameter area on the left part of the screen will display the real-time parameters:

Items	Remark
F	Frequency
D	Depth
G	Gain
FR	Frame Rate
DR	B Dynamic Range
TSI	Tissue characteristics

6 - 4 Operator's Manual

Items	Remark
iClear	Display when the function is activated.
iBeam	
iTouch	
Zoom	
Echo Boost	

Image Quality

Used for switching B/THI and adjusting the frequency. The real-time value of frequency is displayed in the image parameter area, and if harmonic frequency is used, "F H" is displayed as harmonic frequency value.

The system provides a THI function using harmonics of echoes to optimize the image. Harmonic imaging enhances near field resolution and reduces low-frequency and large amplitude noise, so as to improve Small Parts imaging.

NOTE:

- The adjusting range of THI frequency values can be divided into penetration preferred (HPen), general mode (HGen), resolution preferred (HRes).
- Under cardiac and cardiac-difficult mode, the values for SP5-1s can be arranged from penetration preferred (HPen), general mode (HGen), between general mode and high frame (HGen-FFR), resolution preferred (HRes), between the resolution and the high frame (HRes-FFR).
- The adjusting range of basic frequency values can be divided into penetration preferred (Pen), general mode (Gen), resolution preferred (Res).

Press the knob under the [Image Quality] on the touch screen to switch B/THI.

Rotate the knob under the [Image Quality] on the touch screen to select the different frequency values.

Please select the frequency according to the detection depth and current tissue features.

Gain

To adjust the gain of the whole receiving information in B mode. The real-time gain value is displayed in the image parameter area.

Rotate knob clockwise to increase the gain, and anticlockwise to decrease.

Increasing the gain will brighten the image and you can see more received signals. However, noise may also be increased.

Depth

This function is used to adjust the display depth of sampling, the real-time value of which is displayed in the image parameter area.

Use the <Depth> deflector rod on the control panel to adjust.

Increase the depth to see tissue in deeper locations, while decrease the depth to see tissue in shallower locations.

Depth increase will cause a decrease in the frame rate.

TGC

The system compensates the signals from deeper tissue by segments to optimize the image.

The system compensates the signals from deeper tissue by segments to optimize the image.

There are 8-segment TGC sliders on the touch screen corresponding to the areas in the image.

- To increase the gain compensation at an area of interest, move the TGC slider to the right.
- To decrease the gain compensation at the corresponding area of interest, move the TGC slider to the left.
- Double click anywhere of the TGC screen, the slider will return to the original status.

About 1.5s after the adjustment is finished, the TGC curve disappears.

Adjust the signal gain for the certain image area to get a balanced image.

Quick TGC Adjustment

The system provides "User preset" or "Standard preset" to quickly adjust the TGC sliders.

Touch the desired icon in the "User preset" or "Standard preset" column on the touch screen to adjust TGC sliders.

Touch the icon on the touch screen to restore TGC to the original status.

TGC User Preset

Users can preset the TGC sliders to the desired position.

Touch the position on the touch screen to enter TGC user preset screen. Select the desired slider position in the "Standard preset" or "User preset" column, make adjustment of the sliders manually if necessary, and then touch [Save as] to select among [Save as User1], [Save as User2], and [Save as User3].

Acoustic Power (A.Power)

Refers to the power of ultrasonic wave transmitted by the probe, the real-time value of which is displayed in the upper left corner of the screen.

Rotate the <A.power> knob to adjust the parameters.

Generally, increasing the acoustic power will increase the brightness and contrast of the image as well as the force of penetration.

NOTE:

You should perform exams according to actual situation and follow the ALARA Principle.

Scan range and FOV position

More information can be obtained without moving the probe or changing the sampling position.

- To change the scan range, press the knob under the [FOV] on the touch screen to enter or exit the FOV range and FOV position adjustment status.
- Press <Set> to switch the FOV range and FOV position.
- Rotate the trackball to adjust FOV position or the FOV range. Or, rotate the knob under [FOV] to adjust FOV range.

NOTE:

- The FOV position/range is available only for the convex and phased probes.
- When the scan range is adjusted to the widest, the FOV position cannot be changed.
- You can get a much larger field of view when selecting a larger FOV, but the frame rate will decrease.

6 - 6 Operator's Manual

B Steer

To steer the beam the probe transmits.

Use the <Angle> knob to complete the adjustment.

TIP:

Steer is available only for linear probes.

ExFov

Tap [ExFov] on the touch screen to turn on/off the function.

For linear probes, the ExFOV function displays as trapezoid imaging.

For convex and phase probes, the ExFOV function displays as extending the scan angle.

Line Density

The function determines the quality and information of the image.

Tap [Line Density] on the touch screen to adjust the parameters.

The higher the line density is, the higher the resolution becomes.

Dynamic Range (Dyn Ra.)

Adjusts contrast resolution of an image, compresses or expands gray display range.

The more the dynamic range, the more specified the information, and the lower the contrast with more noise.

Rotate the knob below [Dyn Ra.] to adjust the parameters. Rotate the knob clockwise to increase the value; rotate the knob counterclockwise to decrease the value.

Smooth

This feature is used to reject the noise and smooth the image.

Rotate the knob under [Smooth] to adjust the parameter.

The bigger the value is, the higher the smooth becomes.

iClear

The function is used to enhance the image profile so as to distinguish the image boundary for optimization.

Rotate the knob under [iClear] to adjust the parameters.

"Off" represents iClear is disabled, and the bigger the value is the stronger the effect becomes.

iClear⁺

This function is the advanced version of iClear. It can better enhance image quality, reject noise, and provide better contrast resolution.

Rotate the knob under [iClear⁺] on the touch screen to adjust the parameters.

Off represents iClear⁺ is disabled, and the bigger the value is, the stronger the effect becomes.

If iClear⁺ is configured, iClear will be replaced by iClear⁺.

Persistence

Used to superimpose and average adjacent B images, so as to optimize the image and remove noises.

Rotate the knob under the [Persistence] item on the touch screen to adjust the value.

• The bigger the value is the stronger the effect becomes.

- Persistence can remove image noise to make image clearer.
- Persistence increase may lead to signal missing.

Rotation/Flip

This function provides a better observation for image display.

- Invert: To invert the image horizontally or vertically.
 Tap [U / D] or [L / R] on the touch screen to adjust the parameters, and identify the image orientation through the "M" mark on the screen.
- Rotation: Tap [Rotation] on the touch screen to adjust the parameters.
 - Image can be rotated by the manners in angle of 0°, 90°, 180°, 270°.
 - When the image is rotated in the angle of 90° or 270°, the depth scale is displayed on the upper part of the screen.

The "M" mark indicates the orientation of the image; the M mark is located on the top of the imaging area by default.

iBeam

This function is used to superimpose and average images of different steer angles to obtain image optimization.

Rotate the knob under [iBeam] to adjust the parameters.

- Images after iBeam processing can be optimized with less spot noise and higher resolution, so that more details for the structure are revealed.
- iBeam is disabled when it is off.

TIP:

The phased probe does not support iBeam.

Auto Merge

In the Dual-split mode, when the images of the two windows have the same probe type, depth, invert status, rotation status and magnification factor, the system will merge the two images so as to extend the field of vision.

Tap [Auto Merge] on the touch screen to enable/disable the function.

TIP:

Only for linear probes.

Gray Map

Adjusting grayscale contras to optimize the image.

Tap [Gray Map] on the touch screen to complete the adjustment.

Tint Map

This function provides an imaging process based on color difference rather than gray distinction. Tap [Tint Map] on the touch screen to select the map.

TSI

The TSI function is used to optimize the image by selecting acoustic speed according to tissue characteristics.

Tap [TSI] on the touch screen to select.

6 - 8 Operator's Manual

HDScope

The image inside the ROI is clearer than these outside when the function is enabled.

Tap [HDScope] on the touch screen, the ROI appears. The image inside the ROI is clearer than the outside.

- When the ROI box is solid line, roll the trackball to change its position.
- When the ROI box is dotted line, roll the trackball to change the size.
- Press <Set> to switch between the solid line and the dotted line status.

Tap [HDScope]. The image effect increases as the value changes.

Off represents the disable. The larger the value is, the clearer the image becomes.

TIP:

The function is disabled in frozen state.

iTouch

To optimize image parameters as per the current tissue characteristics for a better image effect.

It is available for all real-time imaging in B mode.

- 1. Press <iTouch> on the control panel to enter the iTouch status.
 - The symbol of which will be displayed in the image parameter area of the screen.
- 2. Tap [iTouch] on the touch screen to adjust the parameters.
- 3. Long press <iTouch> to exit.

H Scale

Display or hide the width scale (horizontal scale).

The scale of the horizontal scale is the same as that of vertical scale (depth), they change together in zoom mode, or when the number of the image window changes. The H Scale will be inverted when image is turned upwards/downwards.

Tap [H Scale] on the touch screen to display or hide the scale.

Dual Live

Display different image effects of one probe for a better observation.

Tap [Dual Live] on the touch screen to enable/disable the function, and dual-split window of images are displayed.

Two pages of adjustable parameters are displayed on the touch screen as well; where, shared parameters and left window parameters are displayed in the B (L) page, while right window parameters are displayed in the B(R) page.

In the image parameter area, parameters of the both windows are displayed.

It supports the magnification of the image.

LGC

Adjust the gain along the scan line to improve the lateral resolution of the image.

Tap [LGC] on the touch screen to enter the adjusting dialogue box.

- The 8 rods displayed on the touch screen indicate the corresponding image areas on the main screen
- Tap the slider to adjust the gain, move downwards to decrease the gain, while move upwards to increase the gain.

TIP:

The system provides several preset parameters for imaging.

Echo Boost

The contrast is increased and the noise is decreased with the clear boundary after generating the function.

Tap [Echo Boost] on the touch screen. Echo Boost value appears on the parameter area.

TIP:

Use phased probe to activate the function in cardiac mode.

Ref Lines

A reference line and a help line meeting the probe icon side 45° display on the 2D image under GYN and Pelvic Floor exam mode. This helps to locate midsagittal plane of pelvic floor precisely and define the reference line for measurement.

Tap [Ref Lines] in the B tab on the touch screen:

- Roll the trackball to move the reference line.
- Rotate the <Angle> to rotate the reference line around the intersection point.

TIP:

- Ref Lines can be adjusted by pressing <Set> in frozen state.
- Use intra-cavity probe to activate the function in GYN or Pelvic Floor exam mode.

Dehaze

This function can restrain noise, so as to enhance the contrast resolution of the image.

Tap the [Dehaze] item on the touch screen to adjust the value.

V 1:1

This function is to display images in vertical format in the dual-split mode. After the feature is enabled, one image appears above, and the other image appears below.

In the dual-split mode, tap [V 1:1] to enable this function.

TIP:

Only linear probes support this function.

Extend Image (ExtImage)

This function is to extend image area and hide menu area and thumbnails.

Tap [ExtImage] on the touch screen or press user-defined key to enable this function.

ZoneVue

Image within the zone range is clearer.

Rotate the knob under [ZoneVue] to adjust the zone range. The real-time zone range is displayed on the screen.

6 - 10 Operator's Manual

6.3 Color Mode

The Color mode is used to detect color flow, and the color is designed to judge the direction and speed of blood flow.

Generally, the color above the color bar indicates the flow towards the probe, while the color below the color bar indicates the flow away from the probe; the brighter the color is, the faster the flow speed becomes; while the darker the color is, the slower the flow speed becomes.

NOTE:

- During color mode imaging, menus of image optimizing for B-Mode and C-Mode are displayed on the touch screen at the same time. You can switch between the 2 modes by clicking the mode tabs.
- In Color Mode, acoustic power is synchronous with that of B Mode. Adjustment of the depth or zoom to the B Mode image will lead to corresponding changes in Color Mode image.

6.3.1 Color Mode Image Scanning

Perform the following procedure:

- 1. Select a premium image during B mode scan, and adjust to place the area of interest in the center of the image.
- 2. Press <C> to enter B+Color mode.
- 3. Use the trackball and <Set> to change position and size of the Region of Interest (ROI).
- 4. Adjust the image parameters during scan to obtain optimized images.

6.3.2 Color Mode Image Parameters

In Color mode scan, the image parameter area on the left side of the screen displays the real-time parameter values as follows:

Items	Meaning
F	Frequency
G	Color Gain
WF	Color wall filter
PRF	Pulse Repetition Frequency PRF

ROI Adjustment

To adjust the width and position of ROI in Color mode.

- When the ROI box is solid line, roll the trackball to change its position.
- When the ROI box is dotted line, roll the trackball to change the size.
- Press <Set> to switch between the solid line and the dotted line status.

The larger the ROI box is, the lower the frame rate becomes, and the lower the resolution and color sensitivity will be.

Color Gain

Refers to the overall sensitivity to flow signals. The real-time gain value is displayed in the image parameter area.

Rotate the <C> knob clockwise to increase the gain, and anticlockwise to decrease.

Increasing the gain will increase the flow signal presented as well as noise, while the signals may be missing when the gain is adjusted too low.

Image Quality

Refers to the transmitting frequency in Doppler mode of the probe, the real-time value of which is displayed in the image parameter area.

Rotate the knob under the [Image Quality] on the touch screen to select the different fundamental wave value.

B/C Align

To set and constrain the maximum width of the B mode image to that of the Color ROI.

Tap [B/C Align] on the touch screen.

Dual Live

This function is used to display B image and Color image synchronously.

Tap [Dual Live] on the touch screen to enable or disable the function. When the function is activated, the window will be automatically switched to the dual windows (one for B image, and another for Color image).

Steer

The feature is used to adjust the ROI of color flow with different angles with immobility of the probe.

This function is used to adjust the scan angle of linear probes, so as to change the angle between the transmitting beam and flow direction.

Rotate the knob under the [Steer] on the control panel to adjust the steer angle.

TIP:

Steer is available only for linear probes.

C ExFov

The C ExFOV function displays as trapezoid imaging in color mode.

Tap [ExFov] on the touch screen to turn on/off the function.

Only for linear probes. It can only be displayed after the "ExFov" parameter in B mode is enabled and cannot be adjusted together with "Steer".

Line Density

The function determines the quality and information of the image.

The higher the line density is, the higher the resolution becomes.

Tap [Line Density] on the touch screen to adjust the parameters.

Packet Size

This function is an indication of the ability to detect flow, which is used to adjust the accuracy of color flow.

Rotate the knob under the [Packet Size] item on the touch screen to adjust the value.

- 0 represents no packet size control.
- The higher the sensitivity is, the more sensitive indication for low-velocity flow becomes. It affects the frame.

6 - 12 Operator's Manual

Flow State

Refers to optimizing the various flow states.

Tap [Flow State] on the touch screen to adjust the parameters.

Persistence

This function is to adjust the temporal smooth to optimize the image.

Rotate the knob under [Persistence] on the touch screen to adjust the parameters.

0 represents no persistence. The bigger the value is, the stronger the effect becomes.

Smooth

This feature is used to reject the noise and smooth the image.

The bigger the value is, the higher the smooth becomes.

Rotate the knob under [Smooth] on the touch screen to adjust the parameters.

Scale

This function is used to adjust the speed range of color flow, which is adjusted through PRF in the system. The real-time PRF value is displayed in the image parameter area.

Rotate the knob under [Scale] on the touch screen to complete the adjustment.

- To provide a much clearer color flow image.
- Use low PRF to observe low-velocity flows, and use high PRF to observe high-velocity flows.
- Aliasing may occur if low velocity scale is used and high velocities are encountered.
- Low velocities may not be identified when a high velocity scale is used.

Baseline

Refers to the area where the velocity is zero in the scale. Adjust according to the actual situation so as to get an optimum flow display.

Rotate the knob under [Baseline] to complete the adjustment. Positive value means to increase the signals below the baseline, and negative value means to increase the signals above the baseline.

Invert

To set the display mode of the color flow, the color scale will be inverted when the function is activated.

Tap [Invert] on the touch screen to complete the adjustment.

TIP:

It is available only for linear probes.

Color Map

This function is a combination of several image parameters, which indicates the display effect of color image.

Tap the [Color Map] item on the touch screen to select the map.

Wall Filter (WF)

It filters out low-velocity signals to provide effective information, and this function is used to adjust the filtered frequency. The real-time value (WF) is displayed in the image parameter area.

Rotate the knob under [WF] on the touch screen to adjust the parameters.

Flow signals may be missing.

Smart Track

To optimize image parameters as per the current tissue characteristics for a better image effect. The angle and the position of the ROI are adjusted after the function is enabled. The area is tracked without being affected by the dynamic moves.

Tap [Smart Track] on the touch screen under Color/Power mode. The vessels lay in the middle of the ROI.

Enable the function under B+Color/Power+PW mode. The PW sampling line, SV size and SV position are adjusted automatically.

Priority

This function is used to set levels of the flow display, to display the grayscale signal or color signal.

The color image is preferred with higher value; while grayscale signals are displayed with the lower value.

Rotate the knob under [Priority] on the touch screen to complete the adjustment.

Velocity Tag

This function is used to mark the specified velocity range in flow to check the flow function or specific flow velocity value.

- 1. Tap [Velocity Tag] on the touch screen to adjust the parameters. The green mark appears on the color scale.
- 2. Roll the trackball upwards and downwards to select the marking velocity.
- 3. Press <Set> to enter the tag range selection status, roll the trackball upwards and downwards to select the range.
- 4. Press <Set> to switch between marking position and marking range.

iTouch

To optimize image parameters as per the current tissue characteristics for a better image effect. Complete the image optimization via <iTouch>.

HR Flow

Enhance tiny vessel display to analyze the blood supply of the vessel in pathological organ.

Tap [HR Flow] on the touch screen or press the user-defined key to complete the adjustment ([HR Flow] is highlighted after it being enabled).

ART Flow

Enhance the blood sensitivity and penetrability in time period.

Tap [ART Flow] on the touch screen (the soft key is highlighted when the function is enabled).

- ART Flow Duration appears at the right bottom of the screen after the function is enabled. The
 penetrability of color image is enhanced during this time period.
- After ART Flow Duration is finished, the ART Flow interval appears at the right bottom of the screen. The ART Flow is enabled again until the interval is finished.

Glazing Flow

This function applies glazing effect to the vessel flow, so as to make it more stereoscopic.

Tap the [Glazing Flow] item on the touch screen.

The color codes of the vessel velocity and power will change after the Glazing Flow function is enabled. During diagnosis, users should exam the ROI without using the Glazing Flow function. Otherwise, misdiagnosis may occur.

6 - 14 Operator's Manual

UMA (Ultra-Micro Angiography)

This function filters out low-velocity tissue signals so as to optimize the display of blood flow of low velocity in capillary vessels.

After entering UMA, select the sub-mode:

- cUMA (Color UMA): it is the velocity sub-mode of Color mode, used to observe color flow and provide flow direction and velocity information.
- pUMA (Power UMA): it is the power sub-mode of Color mode, used to display the density and
 power of the red blood cells in the blood flow for a certain period of time, and express it with
 different brightness colors, providing perfusion information of the blood flow, but not velocity
 information.
- sUMA (Subtraction UMA): the function of sUMA is the similar to pUMA. Compared with pUMA, sUMA displays more flow information and focus more on the tiny flow.

TIP:

UMA provides a set of parameters for quick adjustment predefined for different organs in different scenes, such as Placenta and Fetal Head.

Background

This function is used to adjust the rejection degree of the internal B image background of the color ROI. The display of tiny blood flow is enhanced, by not displaying or reducing displaying the B image, and only displaying the color flow energy signal.

TIP:

This parameter is only applicable to sUMA.

6.4 Power Mode

Power mode provides a non-directionally display of blood flow in the form of intensity as opposed to flow velocity.

DirPower (Directional Power Mode) provides the additional information of flow direction towards or away from the probe.

NOTE:

- During Power mode imaging, menus of image optimizing for B mode and Power mode are displayed on the touch screen at the same time. You can switch between the 2 modes by tapping the mode tabs.
- In Power mode, the acoustic power is synchronous with that of B mode. Adjustment of the depth to the B mode image will lead to corresponding changes in Power mode image.

6.4.1 Power Mode Image Scanning

Perform the following procedure:

- 1. Select a premium image during B mode or B+ Color scan, and adjust to place the area of interest in the center of the image.
- 2. Press <PD> to enter B+Power mode.
- 3. Use the trackball and <Set> to change position and size of the Region of Interest (ROI).
- 4. Adjust the image parameters during scan to obtain optimized images.

6.4.2 Power Mode Image Parameters

In Power mode scan, the image parameter area on the left side of the screen displays the real-time parameter values as follows:

Items	Meaning
F	Frequency
G	Color Gain
WF	Color Wall Filter
PRF	Pulse Repetition Frequency PRF

Because both are based on Doppler color imaging, the adjustments of Power mode are same with these of Color mode's. Hence, only the adjustments of Power mode are introduced.

Power Gain

Refers to the overall sensitivity to flow signals, and this function is used to adjust the gain in Power mode. The real-time gain value is displayed in the image parameter area.

Rotate <C> knob clockwise to increase the gain, and anticlockwise to decrease.

Increasing the gain will increase the flow signal presented as well as noise, while the signals may be missing when the gain is adjusted too low.

Color Map

This feature indicates the display effect of power image. The maps in Power mode image are grouped into two categories: Power maps and Directional Power maps.

Tap [Color Map] on the touch screen to complete the adjustment.

- The Power maps provide information of blood flow, which are highly sensitive to the low-velocity flows.
- The Directional Power maps provide information of flow direction.

Dynamic Range (Dyn Ra.)

This function is to adjust the transformation of echo intensity into color signal.

Increasing dynamic range will lead to higher sensitivity to low-power signals, thus enhances the range of signals to display.

6.5 V Flow

V Flow shows the blood direction and velocity via the arrow. The arrow length represents the velocity, and the arrow orientation represents the direction of the blood flow. The blood flow is displayed according to the updates of the arrow position and the velocity.

V Flow shows the blood situation on vortex flow, turbulent flow, regurgitation, etc.

NOTE:

- You can enter V Flow on B/Color real-time scan mode.
- It only supports single-window display, but does not support dual-window display and quadwindow display.
- V Flow image does not support the image magnification.
- The parameters on B mode and Color mode are same with these on V Flow mode during V Flow scan.


6 - 16 Operator's Manual

- During V Flow scan, menus of image optimizing for B mode, Color mode and V Flow are
 displayed on the touch screen at the same time. You can switch among them by tapping the
 mode tabs.
- In Color Mode, acoustic power is synchronous with that of B Mode. Adjustment of the depth to the B mode image will lead to corresponding changes in V Flow mode image.

6.5.1 Basic Operations

Perform the following procedure:

- 1. Scan the carotid artery on the real-time B/Color mode; adjust the probe and the image to locate the desired region at the center of the B/Color mode image.
- 2. Tap [V Flow] or user-defined key to enter V Flow mode. Roll the trackball to locate the ROI, and press <Set> and roll the trackball to adjust the ROI position and the size.

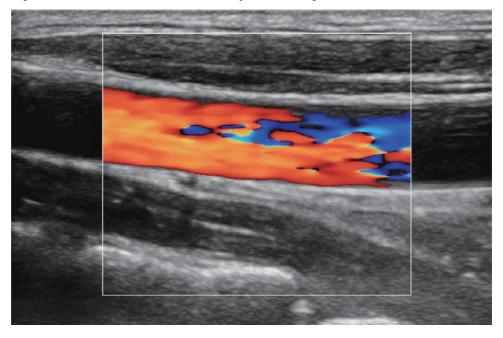

- 3. To optimize the image, adjust the parameters during the image scan.
- 4. Tap [Start Capture] or press < Update>, and keep the probe still. The image shows the change of the blood flow over a period of time



5. The image is frozen after completing the capture. Review the single-frame or cine file.

- 6. Measure speed, volume flow and WSS. Save the single-frame and multi-frame image if necessary.
- 7. Press on the control panel or the user-defined key to quit V Flow mode.

6.5.2 Image Optimization

Quality

Tap [Quality] to adjust the image quality.

The filling, smoothness and the image effect have slight change after completing the v flow adjustment.

V Flow Map

This function is a combination of several image parameters, which indicates the display effect of color image. The blood flow information is displayed via switching among the different spectrums.

Tap [V Flow Map] to adjust the parameter.

The color of the arrow changes after completing the adjustment.

Gain

Used for adjusting the sensitivity of the blood flow signal.

Rotate the knob under [Gain] to adjust the parameter.

- The filling of the blood becomes more with the value becoming larger, and the arrows becoming more.
- The filling of the blood becomes less with the value becoming smaller and the arrows becoming less.

Arrow Density

Used for adjusting the arrows' number in the unit area.

Rotate the knob under [Arrow Density] on the touch screen.

• The arrow becomes more with the density becoming more compacted.

6 - 18 Operator's Manual

The arrow becomes less with the density becoming fewer.

Persistence

Used for adjusting the temporal smooth to optimize the image.

Rotate the knob under [Persistence] on the touch screen.

0 represents no persistence. The bigger the value is, the stronger the effect becomes.

WF (Wall Filter)

It filters out flow noise. The bigger the value, the more the filtered noise. The real-time value (WF) is displayed in the image parameter area in the left corner of the screen.

Rotate the knob under [WF] on the touch screen to adjust the parameters.

Flow signals may be missing.

Flow Brightness

Used for adjusting the blood brightness of the grey background.

Rotate the knob under [Brightness] on the touch screen.

The grey background of the blood flow effect becomes brighter with the value becoming larger.

Colorbar Scale

The maximum velocity of the color map.

Rotate the knob under [Colorbar Scale] on the touch screen.

- The velocity on the color bar becomes larger with the value becoming larger and the arrow's color changing.
- The velocity on the color bar becomes smaller with the value becoming smaller and the arrow's color changing.

Edge Smooth

Tap [Edge Smooth] to adjust the parameter.

The blood against the edge becomes smooth with the value being larger.

Arrow Lifetime

Rotate the knob under [Arrow Lifetime] on the touch screen to adjust the frame of the arrow.

The arrow appears longer with the value becoming larger.

Arrow Size

Rotate the knob under [Arrow Size] on the touch screen to adjust the arrow size.

- The end point of the arrow does not change with the value becoming larger, but the arrow length becomes longer.
- The end point of the arrow does not change with the value becoming smaller, but the arrow length becomes shorter.

Trig Type

Set trigger type.

Under V Flow mode, turn on ECG and select "Manual" or "R" or "R100/200/300/400" trigger mode. Image will be captured in 100/200/300/400ms after R wave and ECG wave will be marked by red at that time.

ROI Size

Adjust the size of ROI. Tap [ROI Size] on the touch screen to adjust.

Acquire Time

Tap [Acquire Time] on the touch screen to adjust the acquisition time.

Sensitivity

This function is an indication of the ability to detect flow, which is used to adjust the accuracy of color flow.

Rotate the knob under the [Packet Size] item on the touch screen to adjust the value.

- 0 represents no packet size control and the bigger the value is, the higher the sensitivity becomes.
- The higher the sensitivity is, the more sensitive indication for low-velocity flow becomes.
- It affects the frame.

6.6 M Mode

NOTE:

- During M mode imaging, menus of image optimizing for B mode and M mode are displayed
 on the touch screen at the same time. You can switch between the 2 modes by tapping the
 mode tabs.
- During M mode scanning, the frequency, depth, and acoustic power of the probe are synchronous with that of B mode.
- Adjustment of the depth or TGC to B Mode image will lead to corresponding changes in M Mode image.

6.6.1 M Mode Image Scanning

Perform the following procedure:

- 1. Select a premium image during B mode or B+ Color scan, and adjust to place the area of interest in the center of the image.
- 2. Press <M> on the control panel, and use the trackball to adjust the sampling line.
- 3. Press <M> on the control panel again or <Update> to enter M mode, and then you can observe the tissue motion along with anatomical images of B mode. During the scanning process, you can also adjust the sampling line accordingly when necessary.
- 4. Adjust the image parameters to obtain optimized images.

TIP:

The sampling line is displayed for one procedure operation. Press <M> to enter M mode.

6.6.2 M Mode Image Parameters

In M mode scan, the image parameter area on the left side of the screen displays the real-time parameter values as follows:

Items	Meaning
F	Frequency

6 - 20 Operator's Manual

Items	Meaning
D	Depth
G	M Gain
V	M Speed
DR	M Dynamic Range

Gain

To adjust the gain of M mode image, the real-time gain value is displayed in the image parameter area.

Rotate <M> knob clockwise to increase the gain, and anticlockwise to decrease.

Increasing the gain will brighten the image and you can see more received signals. However, noise may also be increased.

Display Format

To set the display format of B mode image and M mode image.

Tap the different display format ratio keys on the touch screen to adjust.

Adjust according to the actual situation and obtain a desired analysis through comparison.

Speed

This function is used to set the scan speed of M mode imaging, and the real-time speed value is displayed in the image parameter area.

Turn the knob under [Speed] on the touch screen to complete the adjustment.

- The smaller the value is, the slower the speed becomes.
- Speed changing makes it easier to identify disorders in cardiac cycles.

Tint Map

This function provides an imaging process based on color difference rather than gray distinction.

Tap [Tint Map] on the touch screen to select the map.

Gray Map

Adjusting grayscale contrast to optimize the image.

Tap [Gray Map] on the touch screen to complete the adjustment.

EdgeEnhance

This function is used to increase image profile, so as to distinguish the image boundary.

Rotate the knob under [EdgeEnhance] on the touch screen to adjust the parameters.

- 0 represents no edge enhance is turned on, and the bigger the value is, the stronger the effect becomes.
- Larger edge enhance may lead to noise increase.

Dynamic Range (Dyn Ra.)

Adjusts contrast resolution of an image, compresses or expands gray display range. The real-time dynamic range value will be displayed on the image parameter area.

Rotate the knob under [Dyn Ra.] on the touch screen to complete the adjustment.

The more the dynamic range is, the more specified the information appears.

M Soften

This feature is used to process the scan lines of M images to reject noise, making the image details to be clearer.

Rotate the knob under [M Soften] to adjust the parameters on the touch screen.

0 represents the function is disabled. The bigger the value is, the stronger the effect becomes.

6.7 Color M Mode (CM)

To know the cardiac motion state, CM is overlaid with flow based on M mode, which is more sensitive to the instantaneous signal changes. Then, it shows the diagnosis information in detail.

The Color M mode includes Color Flow M mode and Color Tissue M mode.

TIP:

- Linear probe does not support Color M mode.
- Only phased probe supports color tissue M mode.

6.7.1 CM Image Scanning

Perform the following procedure:

- 1. To enter Color Flow M mode:
 - In B+M mode, press <C>.
 - In B+Color, press <M>.
- 2. To enter Color Tissue M mode:
 - Press the user-defined <TDI> key on color flow M mode, or tap [TDI] on the touch screen, and then press <M> or <Update>.
 - In B+TVI/TVD, or B+TVI+TVD mode, press <M>.
- 3. Adjust the image parameters to obtain optimized images.
- 4. Exit Color M Mode

Press <C> or <M> on the control panel to exit Color M mode.

Or, press on the control panel to return to B mode.

6.7.2 CM Image Parameters

In Color Flow M mode, parameters that can be adjusted are in accordance with those in B, M and Color modes; please refer to relevant sections of B, Color and M mode for details.

In color tissue M mode, parameters that can be adjusted are in accordance with those in B, M and Color modes; please refer to relevant sections of B, Color and M mode for details.

The ROI size and position determine the size and position of the color flow displayed in the color M mode image.

- Set the position of the sampling line by moving the trackball left and right.
- Press <Set> to switch the cursor status between the ROI position adjustment and ROI size adjustment.

6.8 Anatomical M Mode

For an image in the traditional M mode, the M-mark line goes along the beams transmitted from the probe. Thus it is difficult to obtain a good plane for difficult-to-image patients who cannot be

6 - 22 Operator's Manual

moved easily. However, in the Anatomical M mode, you can manipulate the M-mark line and move it to any position at desired angles. The system supports anatomical M scanning (including Free Xros M mode and Free Xros CM mode) in 2D imaging modes (B, Color, Power and TVI mode).

ACAUTION

Anatomical M Mode and Color Anatomical M mode images are provided for reference only, not for confirming diagnoses. Compare the image with those of other machines, or make diagnoses using non-ultrasound methods.

6.8.1 Free Xros M

Free Xros M imaging is supported on frozen B image, B+M image and B+Power/Color/TVI image. Perform the following procedure:

- 1. Adjust the probe and image to obtain the desired plane in real-time B mode or M mode. Or select the B mode cine file to be observed.
- 2. Tap [Free Xros M] on the touch screen to enter Free Xros M mode or press the user-defined key to enter Free Xros M mode.
 - There are 3 M-mark lines available, each with a symbol of "A", "B" or "C" at one end as identification.
- 3. Adjust the sampling line (single line or couple of lines) to obtain optimized images and necessary information.
 - Tap [Show A], [Show B] or [Show C] on the touch screen to adjust the sampling line. The
 corresponding sampling line and the Free Xros M image appear on the screen. Then,
 activate the sampling line.
 - Tap [Display Cur.] or [Display All] on the touch screen to select whether to display the image of the current M-mark line or all.
 - You can choose to display the sampling line on the current image or all.
 - Press <Set> to switch among the sampling lines and press <Cursor> to show the cursor.
 - Position Adjustment: When the sampling line is activated, move the trackball to adjust the position. The direction is recognized by the arrow at the end of the line.
 - Angle Adjustment: When the sampling line is activated, move the trackball to adjust the fulcrum of the line, and rotate the <Angle> knob to adjust the angle.
- 4. Adjust the image parameters to obtain optimized images.
- 5. Press to return to real-time B mode.

6.8.2 Free Xros CM (Curved Anatomical M-Mode)

In Free Xros CM mode, the distance/time curve is generated from the sample line manually depicted anywhere on the image. Free Xros CM is used for TVI and TEI modes.

ACAUTION

Curved anatomical M image is provided for reference, not for confirming a diagnosis. Generally it should be compared with other device or make a diagnosis by non-ultrasonic methods.

NOTE:

Only phased probe supports Free Xros CM.

Perform the following procedure:

- 1. In real-time 2D mode, adjust the probe and image to obtain the desired plane.
- 2. Tap [TDI] on the touch screen or the user-defined TDI key to obtain the image.
- 3. Tap [Free Xros CM] on the touch screen or the user-defined key to enter the mode.
- 4. Use the trackball to define the start point of the sampling line on the 2D image. The cursor displays as +, and can be moved within the 2D image only.
- 5. Press <Set> to fix the start point, and the digital number "1" is marked beside the point.
- 6. Define the next point using the trackball and <Set> key (tap [Undo] on the touch screen to cancel the current point and activate the preview point). The system updates the time-motion curve in real time, and each point is marked with a number in sequence.
- 7. Repeat Step 6 to finish the sampling line. Double press <Set> to finish the editing.
- 8. You can edit the curve if needed:
 - a. After finishing the sampling line, tap [Edit] on the touch screen. The cursor becomes the icon □.
 - b. Move the cursor over the curve, press <Set> to activate the spot.
 - c. Move the cursor to change the shape of the curve.
 - d. Double press <Set> to finish the editing.

NOTE:

Tap [Delete] on the touch screen to remove the curve, and tap [Edit] to re-edit the curve.

- 9. Adjust the parameters to obtain the desired tissue of Free Xros CM image. Then, save the image.
- 10. Press to exit.

6.8.3 Anatomical M Mode Parameters

In anatomical M mode, adjustable parameters are similar with these in M mode.

6.9 PW/CW Mode

PW (Pulsed Wave Doppler) mode or CW (Continuous Wave Doppler) mode is used to provide blood flow velocity and direction utilizing a real-time spectral display. The horizontal axis represents time, while the vertical axis represents Doppler frequency shift.

PW mode provides a function to examine flow at one specific site for its velocity, direction and features; while CW mode proves to be much more sensitive to high velocity flow display. Thus, a combination of both modes will contribute to a much more accurate analysis.

NOTE:

During PW/CW mode imaging, menus of image optimizing for B Mode and PW/CW mode are
displayed on the touch screen at the same time; if there is also Color mode (Power mode)
working, menus of certain modes will also be displayed on the touch screen synchronously,
and you can switch by clicking the mode tabs.

6 - 24 Operator's Manual

• In PW/CW mode, acoustic power of the transducer is synchronous with that of B mode.

6.9.1 PW/CW Mode Image Scanning

Perform the following procedure:

- 1. Select a premium image during B mode or B+ Color (Power) scan, and adjust to place the area of interest in the center of the image.
- 2. Press <PW>/<CW> to set the position of the sample line by moving the trackball left and right. Set the SVD by moving the trackball up and down, and adjust the angle and SV size according to the actual situation.
- 3. Press <PW>/<CW> again or <Update> to enter PW/CW Mode and perform the examination. Observe and calculate the data based on B mode or Color mode image. You can also adjust the SV size, angle and depth in the real-time scan.

The parameter area appears in the left of the screen, see the figure below:

PW Sampling Line Adjustment	SV	SV Size
	Angle	Angle
	SVD	SV depth
CW Sampling Line Adjustment	Angle	Angle
	SVD	Focus depth

- 4. Adjust the image parameters during PW/CW mode scan to obtain optimized images.
- 5. Adjust the image parameters to obtain optimized images.

TIP:

The sampling line is displayed for one procedure operation. Press <PW>/<CW> to enter M mode.

6.9.2 PW/CW Mode Image Parameters

In PW/ CW mode scan, the image parameter area on the left side of the screen shows the real-time parameter values as follows:

Items	Meaning
F	Frequency
G	PW/CW gain
WF	WF (Wall Filter)
PRF	Pulse Repetition Frequency PRF
SVD	SV depth
SV	SV Size
Angle	Angle

Gain

This function is intended to adjust the gain of spectrum map. The real-time gain value is displayed in the image parameter area.

Rotate <PW> knob clockwise to increase the gain, and anticlockwise to decrease.

Increasing the gain will brighten the image and you can see more received signals. However, noise may also be increased.

PW Sampling Gate

Adjusts the SV position and size of sampling in PW mode, the real-time value of SV and SVD are displayed in the image parameter area, in which SV represents the size of the sampling gate, and SVD represents the sampling depth.

- SV size: Rotate the knob under [SV] on the touch screen to adjust the SV size.
- SVD: Roll the trackball to select the SV depth.

The smaller the SV size becomes, the more accurate the result is; and more information can be obtained when selecting large SV size.

CW Focus Position

To adjust the focus position of CW mode. The real-time focus position value is displayed on the image parameter area in SVD.

Roll the trackball to select the focus depth.

Image Quality

Refers to the transmitting frequency in Doppler mode of the probe, the real-time value of which is displayed in the image parameter area.

Rotate the knob under the [Image Quality] on the touch screen to select the different fundamental wave value.

Scale

This function is used to adjust the speed range of color flow, which is adjusted through PRF in the system. The real-time PRF value is displayed in the image parameter area.

Rotate the knob under [Scale] on the touch screen to complete the adjustment.

To provide a much clearer color flow image.

Use low PRF to observe low-velocity flows, and use high PRF to observe high-velocity flows.

Aliasing may occur if low velocity scale is used and high velocities are encountered.

Low velocities may not be identified when a high velocity scale is used.

iTouch

To optimize image parameters as per the current tissue characteristics for a better image effect.

Auto Calculation

This function is used to trace the spectrum and calculate the PW/CW mode image parameters. The results are displayed in the results window.

In real-time scanning, the results displayed are derived from the calculation of the latest cardiac cycle.

In the freeze and cine status, the results displayed are calculated from the current selected area.

- Auto Calc Param: To set the calculation results to display.
- Auto Calc Cycle: To set the heart cycle number for auto-calculation.
- Auto Calc Loop: Freeze the image, turn the knob under [Auto Calc Loop] on the touch screen.
 - Rotate the knob clockwise to select the next loop.
 - Rotate the knob anticlockwise to select the last loop.
- Trace Area: To set the trace area of the Doppler wave in the spectrum map, applicable for auto calculation, V Max and V Mean display.

6 - 26 Operator's Manual

- Trace Smooth: To set the smooth level when tracing.
- Trace Sensitivity: This function is used to set the sensitivity of tracing in the spectrum.

Invert

This function is used to set the display manner of spectrum.

Tap [Invert] on the touch screen to complete the adjustment.

NOTE:

It is available only for linear probes.

Speed

This function is used to set the scan speed of PW mode imaging.

Tap [Speed] on the touch screen to adjust the parameters.

Changing the speed makes it easier to identify the cardiac cycles and to detect more details.

T/F Res

Adjusts for a balance between time resolution and spatial resolution.

Rotate the knob under [T/F Res] on the touch screen to adjust the parameters.

WF (Wall Filter)

To display the image accurately, it adjusts the cut-off used in the wall filter, and filters out the flow noise which is produced by vessel wall vibration. The real-time value is displayed in the image parameter area.

Rotate the knob under [WF] on the touch screen to adjust the parameters.

Flow signals may be missing.

Tint Map

This function provides an imaging process based on color difference rather than gray distinction.

Tap [Tint Map] on the touch screen to complete the adjustment.

Gray Map

Selects among post processing map curves to optimize grayscale images.

Tap [Gray Map] on the touch screen to complete the adjustment.

Display Format

Sets the display proportion of PW mode image and B mode image.

Duplex/Triplex

This function is used to set if B image or B+Color image (Power) is scanned synchronously.

Tap [Duplex/Triplex] on the touch screen.

HPRF

HPRF mode is used when detected velocities exceed the processing capabilities of the currently selected PW Doppler scale or when the selected anatomical site is too deep for the selective PW Doppler scale.

Tap [HPRF] on the touch screen.

HPRF enhances the range of detecting high-velocity flow.

Baseline

Refers to the area where the velocity in zero in the spectrum. The map changes after being edited.

To optimize the image, adjust baseline according to the actual situation to change the range of flow velocity.

Rotate the knob under [Baseline] to complete the adjustment.

Angle

This function is used to adjust the angle between Doppler vector and flow to make the velocity more accurate.

The real-time adjusting angle value is displayed in the image parameter area.

Rotate the <Angle> knob on the control panel to adjust.

Quick Angle

Adjusts the angle faster in increments of 60° , and the real-time value of which is displayed in the image parameter area.

The function is available in real-time imaging, freeze or cine review status.

Dynamic Range (Dyn Ra.)

The dynamic range conveys the information that being transformed from echo intensity to gray scale.

With the contrast range, dynamic range, information displayed more, the noise increases more as well.

Turn the knob under [Dyn Ra.] on the touch screen to complete the adjustment.

Volume

Adjusts the output audio in spectrum Doppler.

Utilizing the output audio helps to identify the feature and status of flow.

Rotate the <Volume> knob on the control panel to adjust the volume. Press the <Volume> knob to turn on/off.

Steer

Adjusts the scan angle in PW mode, so as to change the angle between the transmitting beam and flow direction.

Obtain more information with immobility of the probe.

Values of steer angles vary with the probe.

Rotate the knob under [Steer] to complete the adjustment.

NOTE:

Steer is available only for linear probes.

6.10 TDI

TDI mode is intended to provide information of low-velocity and high-amplitude tissue motion, specifically for cardiac movement.

There are 4 types of TDI mode available:

6 - 28 Operator's Manual

- Tissue Velocity Imaging (TVI): This imaging mode is used to detect tissue movement with direction and speed information. Generally the warm color indicates the movement towards the transducer, while the cool color indicates the movement away from the transducer.
- Tissue Energy Imaging (TEI): This imaging mode reflects the status of cardiac movement by providing the energy information, the larger the energy is, the brighter the color becomes.
- Tissue Velocity Doppler Mode (TVD): This imaging mode provides direction and speed information of the tissue.
- Tissue Velocity M Mode (TVM): This function assists to observe the cardiac motion through a direct angle.

6.10.1 TDI Mode Image Scanning

Perform the following procedure:

- 1. Tap <TDI> on the screen or the user-defined <TDI> key to enter the TDI mode.
 - In B or B+Color mode: to enter TVI Mode, parameters of TVI mode will be displayed on the touch screen.
 - In Power mode: to enter TEI Mode, parameters of TEI mode will be displayed on the touch screen.
 - PW mode: Tap <TDI> on the screen or the user-defined <TDI> key and then press <PW> or <Update> to enter TVD. The parameters of TVD are displayed on the touch screen.
 - M mode: Tap <TDI> on the screen or the user-defined <TDI> key and then press <M> or
 <Update> to enter TVM. The parameters of TVM are displayed on the touch screen.
 - In TDI mode, press <C>, <PD>, <M> or <PW> to switch among the modes.
- 2. Adjust the image parameters to obtain optimized images.
- 3. Tap <TDI> on the screen or the user-defined <TDI> key to exit from TDI mode and enter general imaging modes.

Or, press on the control panel to return to B mode.

6.10.2 TDI Mode Image Parameters

In TDI mode scan, the image parameter area in the left corner of the screen will show the real-time parameter values as follows:

TVI/TEI

Items	Meaning
F	Frequency
G	Gain
WF	Color Wall Filter
PRF	Pulse Repetition Frequency PRF

• TVD

Items	Meaning
F	Frequency
G	Gain
WF	WF (Wall Filter)

Items	Meaning
PRF	Pulse Repetition Frequency PRF
SVD	SV depth
SV	SV Size
Angle	Angle

TVM

Image parameters combine the parameters of TVI mode and M mode.

In each TDI mode, the parameters that can be adjusted are similar to those in the color flow modes (Color, PW, and Power). See the relevant sections for details. The following introduces the specific items in TDI mode.

Flow State

This function is used for fast image optimization.

Adjust using the [Flow State] item on the touch screen.

6.10.3 TDI Quantitative Analysis

ACAUTION

TDI is provided for reference, not for confirming a diagnosis.

NOTE:


To perform the strain and strain curve, the ECG curve is in need in case of the deviation in curve.

It is about analyzing the data of TVI imaging and measuring the velocity of the myocardium with the cardiac cycle.

Here are three types of curves to perform the quantitative analysis:

- Velocity-time curve
- Strain-time curve
- Strain rate-time curve
 - Strain: Deformation and displacement of the tissue within the specified time.
 - Strain rate: speed of the deformation, as myocardial variability will result in velocity gradient, strain rate is used commonly to evaluate how fast the tissue is deforming.

6 - 30 Operator's Manual

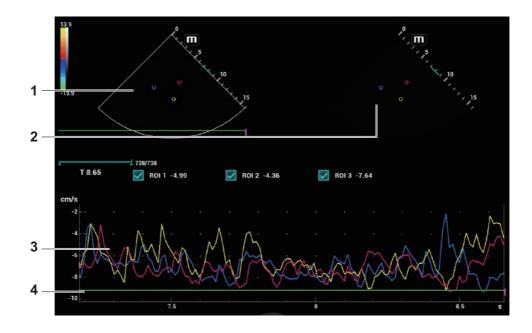

1	TDI review	Sampling area: indicates the sampling position of the curve. The sampling lines are marked with color numbers. It can mark 8 ROIs at most.	
2	2D grey image review	 Use the trackball; the images in TDI review window and 2D review window are reviewed synchronously, since the two images are frozen at the same time. ROI movement is linked between the TDI (Tissue Doppler Imaging) review window and the 2D imaging reviewing window. 	
3	Display analysis curve	 Y-axis represents the velocity (unit: cm/s) [in strain-time curve, Y-axis represents the strain (%); in strain rate-time curve, Y-axis represents the strain rate (unit: 1/s)]. X-axis represents time (s); Frame mark: a white straight line perpendicular to the X-axis, and can be moved left and right by using the trackball. Click the check box in front of the ROI to display or hide the analysis curve. You can get the current X/Y axis value by moving the cursor onto one point on the curve; and if you press <set> at this time, the frame marker will move to the spot.</set> 	
4	ECG display area	/	

Perform the following procedure:

1. Scan the image with the moves of myocardium on, freeze the image and select the scan scope, or open the image which includes the myocardium moves already.

NOTE:

- The current image (in frozen state) and the saved image can be used in the quantitative analysis.
- Only after the user chooses the image review, the quantitative analysis is available. If the user chooses the static image (only one frame), the quantitative analysis is not available.
- 2. Tap [TDI QA] or press the user-defined key <TDI QA> to enable the function.

3. Mark the interested myocardium area.

One image can save 8 ROIs at most, and draw the corresponding curve in image area. Each ROI has different color; the corresponding curve is painted with each color.

ROI settings:

- Tap [Standard ROI]/[Ellipse ROI] to select a ROI method.
 The cursor moves into the review area (TDI review window or 2D grey review window.
- b. Review to the desired frame.
- c. Move the cursor to one cine review window.
- d. Add a ROI.

When selecting "Standard ROI": Add ROI automatically after capturing the area. ROI size is decided by "Standard Height/Width/Angle".

When selecting "Ellipse ROI": Press <Set> to confirm the start point, and use the trackball and press <Set> to confirm the next point; then use the trackball to adjust the size and press <Set> to complete the drawing.

You can press <Clear> to remove the last ROI.

4. Select the curve: Tap [Speed], [Strain] or [Strain Rate].

For [Strain] or [Strain Rate], rotate the knob under [Strain Dist.] on the touch screen to select the corresponding value for Strain – Time curve or Strain Rate – Time curve.

If needed, tap [ROI Tracking] to enable the function. This function provides a motion compensated ROI as precise time-intensity information can be acquired using active tracking. It can enhance the calculation accuracy as reducing the impact of probe or patient respiratory movement.

NOTE:

- Elliptical ROIs can be positioned in any manner that keeps their center within the image boundaries. In the case that part of the ROI is outside the image boundary, only data from within the image boundary is used for calculating the mean intensity value.
- When the user repositions an ROI, the old trace data is erased from the plot and the trace data for the new position re-plotted.
- 5. Adjust the curve display:
 - X Scale: Rotate the knob under [X Scale] on the touch screen to select the different value to change the display of X scale. The tissue information can be located precisely.
 - Smooth: Adjust the smooth feature of the curves.
- 6. Save the curves, and export the curve data, parameter data.
 - a. Tap [Export] on the touch screen.

The dialog box appears.

b. Select the storage path and type the file name.

E drive is default; and the file type is .CSV.

c. Click [OK] to complete the export.

After being exported successfully, a BMP. file shows on the thumbnail area.

The exported data include:

- Current image;
- Analysis curve data;
- Analysis parameter.
- 7. Tap [Exit] to exit the quantitative analysis.

6 - 32 Operator's Manual

6.11 iScape View

The iScape panoramic imaging feature extends your field of view by piecing together multiple B images into a single, extended B image. Use this feature, for example, to view a complete hand or thyroid.

When scanning, move the probe linearly and acquire a series of B images. The system pieces these images together into a single, extended B image in real time. The system also supports out-and-back image piecing.

After obtaining the extended image, you can rotate it, move it linearly, magnify it, add comments or body marks, or perform measurements on the extended image.

The system provides a color iScape function, so you can get more information from extended images.

⚠CAUTION

- It is provided for reference, not for confirming a diagnosis.
- iScape panoramic imaging constructs an extended image from individual image frames. The quality of the resulting image is user-dependent and requires operator skill and additional practice to become fully proficient. Therefore, the measurement results can be inaccurate. Exercise caution when you perform measurements in iScape mode. A smooth and even speed will help produce optimal image results.

NOTE:

- Guidance and precautions for even movement:
 - Make sure there is enough coupling gel along the scan path.
 - Always move the probe slowly and steadily.
 - Continuous contact is required throughout the length of the extended image. Do not lift the probe from the skin's surface.
 - Always keep the probe perpendicular to the skin's surface. Do not rock, rotate or tilt the probe during the scan.
 - The system accommodates a reasonable range of motion velocity. Do not make abrupt changes in motion speed.
 - Deeper scans generally require reduced acquisition speed.
- Needle mark cannot be displayed in iScape imaging mode.

6.11.1 Basic Procedures

Perform the following procedure:

- 1. Connect an appropriate iScape compatible probe. Make sure there is enough coupling gel along the scan path.
- 2. Press the user-defined key for <iScape View> or tap [iScape] on the touch screen (it is available after enter Power/Color mode).
- 3. Optimize the 2D mode image:
 - In the capture preparation status, tap [B] ([Power]/[Color]) page tab to go for the B mode image optimization. Do measurement or add comment/bodymark to the image if needed.
- 4. Tap [Start Capture] or press < Update > on the control panel to begin the capture.

- 5. Scan slowly to obtain a single extended field of view image. You can also erase and retrace if the image is not satisfactory.
 - During image acquisition, none of the parameters are adjustable, and functions such as measurement, comments and body marks are not available.
 - A green box on the image indicating the boundary between the merged images and the unfinished images.
 - During image slicing, the system gives feedback on the probe's moving speed in the form of colors and words. The meanings are as follows:

Status	ROI Color	Tip
Speed too low	Blue	Moving speed of the probe is too low.
Appropriate	Green	/
Speed too high	Red	Moving speed of the probe is too high.

- 6. The system enters into image review status when the acquisition is completed. You can perform operations such as parameter adjusting.
- 7. Do one of following to end image capture:
 - Tap [Stop Capture] on the touch screen.
 - Press < Update>.
 - Wait until the acquisition completes automatically.

After the acquisition is completed, the panoramic image will be displayed and the system enters iScape viewing mode.

6.11.2 Image Review

After the acquisition is completed, the panoramic image will be displayed and the system enters iScape viewing mode.

In image reviewing mode, you can adjust the following parameters.

Image Parameters Settings

- Image size
 - Tap [Actual Size] on the touch to display the image in its actual size.
 - Tap [Fit Size] on the touch to display the image in an appropriate size according to the current window.
- Tint and Tint map
 - Tap [Tint Map] on the touch to select the map.
- Ruler
 - Tap [Ruler] on the touch screen to hide or show the ruler around the image.
- Color Display (in Power iScape)
 - Tap [Color Disp] on the touch screen to display or hide the color image.
- Color Map (in Power iScape)
 - Tap [Color Map] on the touch screen to select the map, as in Power mode.

Image Zooming

- Rotate <Zoom> to zoom in or zoom out the image.
- Rotate the button clockwise to zoom in the image;

6 - 34 Operator's Manual

- Rotate the button anticlockwise to zoom out the image.
- Roll the trackball to change position of the magnified image.
- Press <Zoom> again to exit zoom mode.
- When the image displayed is bigger than the image area, the thumbnail is automatically displayed.

Rotating the Image

For the convenience of image viewing, you can rotate the image by rotating the knob under [Rotation] on the touch screen in increments of 5°.

Measurement, comments, and body mark

In iScape image review status, you can perform measurement, comment, and body mark.

6.11.3 Evaluate image quality

Many variables may affect the overall image quality. It is important to evaluate the image content and quality before an image is used for diagnosis or measurements.

NOTE:

- iScape panoramic imaging is intended for use by well-trained ultrasound operators or physicians. The operator must recognize image items that will produce a sub-optimal or unreliable image.
- If the image quality cannot satisfy the following criteria, you shall remove the image and capture it again.
 - The Image must be continuous (no part of an image moves suddenly or disappears.)
 - No shadow or absent signal along the scan plane.
 - Clear profile of anatomy through the entire scan plane without distortion.
 - Skin line is continuous.
 - The images are captured from the same plane.
 - There are no large black areas in the image.

6.11.4 Cine Review

Tap [Review Cine] on the touch screen in panoramic image viewing status to enter cine reviewing mode. In cine reviewing mode, a frame marker indicates the sequence of the currently reviewed images in the panoramic image on the left-hand side of screen.

In cine review status:

- Use the trackball to review the captured images frame by frame.
- Tap [Auto Play] to start or end auto play.
- Press the knob under [Auto Play] on the touch screen, the system plays the auto review region automatically.
- In auto play mode, tap [Auto Play] on the touch screen to change the play speed. When the speed is off, the system exits auto play mode.
- Review to a certain image. Tap [Set Begin] to set the start point. Review to another image. Tap [Set End] to set the end point. In auto play mode, the review region is confined to the set start point and end point.
- Tap [iScape] > [Overview] to exit cine review mode. The panoramic image displays.

• In cine review mode, press <Freeze> on the control panel to return to the acquisition preparation status.

6.12 R-VQS

R-VQS (RF-data based quantification on arterial stiffness) tracks movements of the upper and lower vessel walls and measures vessel diameter, displacement, coefficient of hardness and PWV (dimensionless pulse wave velocity).

Hardness coefficient: Arterial stiffness is changed with the blood pressure changing. The bigger the value the higher the stiffness.

PWV (dimensionless pulse wave velocity) represents the transmit speed of pulse wave. The bigger the stiffness parameter the higher the PWV.

NOTE:

Only linear probe under Carotid exam mode supports this feature.

Perform the following procedure:

- 1. Select a probe and carotid exam mode. Perform B real-time imaging and search for carotid vessel. Try to place the vessel on the image horizontally.
- 2. Tap [R-VQS] and use the trackball to locate the ROI box on the target area.

Dotted line of the ROI lies in the middle of the vessel and divides the vessel upper wall and lower wall. Use <Set> key and trackball to change ROI size and position.

Note that ROI should include the upper and lower wall of the vessel.

3. Tap [Start Calc] to start tracking. Upper wall and lower wall are marked by the line in the ROI box

Motion curve of vessel walls display under the image in real time. 6 cardiac cycles are calculated in total with each results display in the result window on the left synchronously.


Where,

Dist = [maximum diameter within 1 s] - [minimum diameter within 1 s]

Diam: Vessel diameter refers to maximum diameter within 1 s.

6 R-VQS (RF-data based quantification on arterial stiffness) values (6 cardiac cycles are calculated in total), standard deviation SD and ROI length will be displayed in the result window on the left.

6 - 36 Operator's Manual

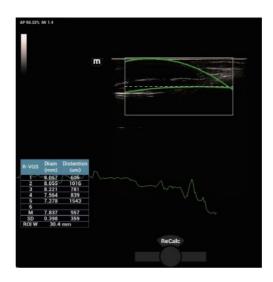

- 4. Adjust parameters.
 - "Speed": Adjust refresh speed of vessel wall motion curve.
 - "Position": Adjust the location of the motion curve upwards and downwards.
 - "Curve Disp(Min)"/"Curve Disp(Max)": Adjust amplitude of vessel wall motion curve.
- 5. Tap [Stop Calc] or press <Freeze> to freeze the image and stop updating motion curve and result data.
- 6. Use the trackball to review the cine file and select desired frame.
 - Tap [Accept Result] to update the result window data to the report.
 Save the single-frame and multi-frame image if necessary.
 - Tap [Cancel Result] to recalculate and perform step 3-5 if necessary.
- 7. Tap [Report] to check report.

Only the last result data will be saved.

If pressure is entered in the patient information page or the report page, Hardness coefficient and PWV result will be displayed on the report.

For details about report operation, refer to "Advanced Volume".

6.13 Smart B-line

The lung acoustic impedance difference increases with the increase of lung liquids. The ultrasound waves produce strong reverberations in the lung at different depth. After multiple reflections, the comet tail sign is formed, which is perpendicular to the pleura plane. Starting from the pleura line, the comet tail sign moves along with the lung and extends to the far field. The reverberation line perpendicular to the pleura plane is called Smart B-line.

Smart B-line is used to detect the B line of the lung in B mode. It supports B-line detecting in both real-time and freeze modes.

NOTE:

- Smart B-line is only available in Single B imaging mode.
- It supports single-frame and multi-frame image file detection in B mode.

6.13.1 Basic Procedures for Smart B-line

Perform the following procedure:


- 1. Select an appropriate probe and exam mode. The system enters the B mode by default.
- Adjust the image parameters to obtain optimized images.
- 3. Tap [Smart B-line] on the touch screen or the user-defined key to enter Smart B-line mode. Tap [Scan Areas] to select different zone combinations for examination.
- 4. Select a desired zone, and tap [Auto Calc].

The system automatically starts tracing the B line sampling area, and automatically recognizes and traces the B line in frame.

If necessary, use the trackball and <Set> keys to adjust the B line sampling area.

5. Press the <Freeze> key to freeze the image.

The system automatically calculates the quantitative index, and the calculation results are displayed on the screen.

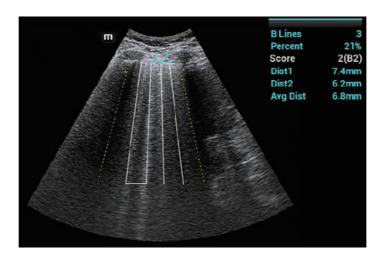

- B Lines: indicates the number of B lines of the current frame. The number can be 1, 2, 3,
 4, or ≥5. When the number is equal to or greater than 5, the system does not display a specific number.
- Percent: indicates the percent of the B lines area against the total sampling area.
- Score: the score is among 0 to 3.

Normal: when there are a lung sliding sign and A line, or isolated B lines (<3), it is marked as N in the brackets and the score is 0.

Moderate: when there are multiple clearly-distributed B lines, it is marked as B1 in the brackets and the score is 1.

Severe: when there are intensively fused B lines, it is marked as B2 in the brackets and the score is 2.

Lung consolidation: when the lung has a symptom that is similar to the liver lesion structure and air bronchogram, it is marked as C in the brackets and the score is 3. When the lung consolidation and pleural effusion occur at the same time, it is marked as C/P in the brackets and the score is 3.

Dist n (B Line distance): indicates the distance between the 2 neighboring lines and is measured in the pleura line area, among which, n corresponds to the number between the 2 B lines.

6 - 38 Operator's Manual

Avg Dist (B Line average distance): indicates the average distance of all B lines.

According to the quantitative index calculated by the system, you can add image and diagnosis information. Tap the check box under the [Image] or [Diagnosis] tab to select items:

- 6. Press the <Save> key to save the single-frame image and B line calculation results.
 - If necessary, press the <Freeze> key again to unfreeze the image. Repeat steps 4-6 to finish calculating other points.
- 7. Tap [Report], and select "Fluid Management" from the drop list box of [Report Type] to check report.

For details about report operation, refer to "Advanced Volume".

6.13.2 Overview

After capturing images, tap [Overview] to enter the Overview screen. The Smart B-line supports displaying two types of lung overviews in the main screen. You can switch the two lung overviews using the corresponding buttons on the touch screen.

- "Image Map": Displays the ultrasound images of all zones, so as to check the overall lung condition. Ever lung zone displays the ultrasound image with the highest percent of the B line area by default.
 - If a zone saves multiple ultrasound images, tap the point corresponds to this zone, and tap [Prev Item] and [Next Item] to switch the image.
- "Color Map": Displays the color map of the lung and ultrasound image of a zone. The color map uses different colors to mark the ultrasound image analysis result of every lung zone. This analysis result is calculated from the ultrasound image with the highest percent of B line area. Tap a point on the touch screen to check the calculation result of the zone related to this point.

6.14 RIMT (Real-time Intima-Media Thickness)

This function is used to calculate the thickness of the carotid intima automatically.

NOTE:

- It is merely available to enter RIMT imaging mode in B single window and dual window when adopting linear probe for carotid exam.
- Do not press the probe after entering RIMT imaging mode when scanning the image in real time.
- RIMT inside ROI is highlighted in red, yellow and green. There is no gap between the filling area and the vascular wall. The green color indicates the normal acceptable value. The red color or yellow color indicates the abnormal unacceptable value.

Perform the following procedure:

- Select the probe first. Perform B mode in carotid exam mode. Detect the patient's carotid in B
 mode. Keep the acoustic beam vertical with the anterior and the posterior of the vascular and
 make the anterior and the posterior of the intima visible at the carotid stenosis to obtain a
 premium image.
- 2. Tap [RIMT] to activate the function. Rotate the knob under [Side] to select left or right carotid.
- 3. Use the trackball to locate ROI over the target area. The dotted line of the ROI is in the middle of the blood vessel. Press <Set> to confirm the position and size of the ROI.

- 4. Tap [Start Calc] to measure RIMT of left carotid and right carotid. 6 RIMT values (each RIMT value represents maximum IMT value within one cardiac cycle), RIMT average value (arithmetic mean value of the 6 RIMT values), SD (standard deviation of the 6 RIMT values) and ROI length are displayed in the result pane.
- 5. Tap [Accept Result] or press <Set>, the image is frozen. You may save single frame image and results to the result pane.
 - Tap [Cancel Result] to recalculate RIMT. Perform step 4 to reset the RIMT.
- 6. Tap [Report] to view the report. Only last acceptable data, including RIMT on left and right carotid, is in the data sheet.

You can perform:

- Deleting data: select RIMT data from the data sheet. Tap [Delete Rows] to remove the RIMT data of the left and the right carotid.
- Viewing graphic: tap [Trend] to view the RIMT graphic. The data on the graphic is same with these in data list. The RIMT average value, SD and ROI length of the exams are displayed at the bottom of the graphic (including the current exam).
- Previewing the report: tap [Preview] to show IMT. The RIMT average value, SD and ROI length of the exams are displayed.

For details about report operation, refer to "Advanced Volume".

6.15 Tissue Tracking Quantitative Analysis

ACAUTION

Tissue Tracking Quantitative Analysis images are provided for reference only, not for confirming diagnoses.

Apart from TDI imaging function, the system also provides tissue tracking QA function for myocardial movement evaluation.

By tissue tracking QA function, the ultrasound system will scan each pixel position by frame within the cardiac cycle, and then use region matching method and auto-correlation searching method to trace each spot and calculate the movement, so as to determine myocardial motion in a more quantitative way.

NOTE:

Only use the probes that support stress echo function under the cardiac mode to start Tissue Tracking QA function.

6.15.1 Basic Procedures for Tissue Tracking QA

Perform the following procedure:

- 1. Open a saved B mode cardiac cine file.
 - A cin. format file which contains more than 1 cardiac cycle (with 2 R waves) and ECG signal.
- 2. Select [TTQA] or press the user-defined key to activate the function. The system automatically identifies the section and traces it. Then, the system displays the endocardial and epicardial boundaries of the ED frame.
 - You can use the section button to specify the section type.

6 - 40 Operator's Manual

- You can retrace the reference points, or make fine adjustments to the points.
- You can adjust the [Thickness] and [Track Point] of the myocardium.
- 3. Select [Start Tracking] to start the tracking function. Adjust the parameters if necessary.

Select [Edit] to display the cursor. Use the trackball and press <Set> to re-select the trace reference points (inner dots of the curve). Move the cursor to the exact boundary position and press <Set> again to set the right place. Select [Start Tracking] to start tracking again.


- 4. Select [Accept & Compute] to calculate and display the curve.
 - Adjust the parameters if necessary.
- 5. Select [Bull's Eye] to see the result.
- 6. If necessary, press <Save> key to save the result.
- 7. If necessary, repeat steps 3-8 to track the next section.

NOTE:

The screen displays the result of the current section, and the bull's eye graph shows the average value of all the tracked sections.

- 8. Tap [Data Export] to export analyzed data.
- 9. Tap [Exit] to exit.

6.15.2 Screen Display of Tissue Tracking QA

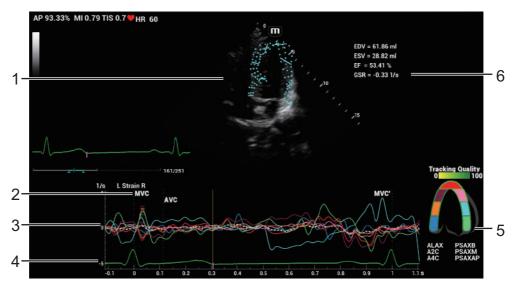

1	Displays image used to generate trace curve	
2	Displays corresponding time of AVO (aortic valve open)/AVC (aortic valve close)/MVO (mitral valve open)/MVC (mitral valve close).	

3	Display curve: Velocity/	Each curve on the image is matched with a certain segment
	Displacement/Strain/Strain Rate.	in the cardiac segmentation model (6), identified by different colors.
		• Velocity curve: X-axis represents time (s); Y-axis represents velocity (cm/s).
		• Displacement curve: X-axis represents time (s); Y-axis represents displacement (mm).
		• Strain curve: X-axis represents time (s); Y-axis represents deformation of the tissue (%).
		• Strain-rate curve: X-axis represents time (s); Y-axis represents strain by time (s ⁻¹).
4	Displays ECG trace	/
5	Displays cardiac segmentation model, and each segment name is illustrated beneath the model.	 In the figure,
		The segment boundary color indicates the tracking quality.

6 - 42 Operator's Manual

6 Displays measurement and calculation results

- EDV: Maximum value of the end diastolic volume during the trace.
- EDA: Maximum value of the end diastolic area (Left Ventricular) during the trace.
- ESV: Maximum value of the end systolic volume (Left Ventricular) during the trace.
- ESA: Maximum value of the end systolic area (Left Ventricular) during the trace.
- FAC (for short axis section): Fractional Area Change= (EDA — ESA)/EDA
- EF (for long axis section): Ejection fraction
- HR: Heart rate
- Global strain of all segments.
- Displays when strain rate curve is acquired.
- Global strain rate of all segments.
- Displays when strain rate curve rate is acquired.

Also on Bull's Eye figure, the system displays TPSD value: Time to Peak Standard Deviation (TPSD):

Where, standardized value of time to peak data: $\{TP_i \mid i \in [1, N]\}$. (N is the number of time to peak data) Average value of standardized value of time to peak data: \overline{TP} , and the standard deviation is

$$TPSD = \sqrt{\frac{\sum_{1}^{N} \left(TP_{i} - \overline{TP}\right)^{2}}{N}}$$

6.15.3 Select Image and Cardiac Cycle

You can select images with a better image quality so as to guarantee the analysis result.

Switch the cine file

- 1. Tap [Review] to enter the review state on touch screen.
- 2. Double-click the target file.
- 3. The system closes current displayed file and switch to the newly selected file.

Switch cardiac cycle within the cine file

Tap [Cycle] to select when opening a cine which includes multiple cardiac cycles.

6.15.4 Myocardial Boundary Tracing

Tracing

The system provides 2 kinds of tracing method for 2 kind of sections. Long axis section (A4C, A2C, ALAX): 3-point method and manual tracing method are both available. Short axis section (PSAX B, PSAX M, PSAX AP): only manual tracing is available.

• 3-point method

As shown in the following figure, after operation by pressing <Set> to place 3 points on the image, the system generates the trace automatically.





Manual trace method

Press <Set> and move the cursor by using the trackball along the boundary to add the trace points gradually, after trace is finished, press <Set> twice to finish tracing.

NOTE:

At least 6 points should be determined by you before the system generates automated trace. Press <Set> to make the traces on the image clockwise or anticlockwise.

Retracing

If current trace is not satisfactory, tap [Reload] on the touch screen to clear the trace and to start another tracing.

During the tracing drawing, press <Clear> to clear already traced drawing.

Make fine adjustment to the trace

You can make fine adjustments to the trace after it is completed.

Perform the following procedure:

- 1. Under tracing curve adjusting status, the cursor turns into \Box .
- 2. Move the cursor to the editable point, press <Set>.
- 3. Use the trackball to drag the curve to desired position, press <Set> again to set the point to the new position.
- 4. Repeat step $2\sim3$ above to finish all points that need adjustment.

NOTE:

Under tracking status, tap [Edit] on the touch screen to enter the status.

6.15.5 Basic Operations of TTQA

Switch among the operation controls

- [Start Tracking]: tap to start tracking.
- [Accept & Compute]: tap to start calculation and display the curve.
- [Exit]: tap to exit tissue tracking.
- [Parameter]: rotate to select the curve type.
- [Bull's Eye]: touch to turn on/off bull's eye and peak data table.
- [Auto Play]: change the speed of the play.

View Selection

Before tracing, touch the corresponding keys to select for the view.

6 - 44 Operator's Manual

- [A4C]: apical four chamber.
- [A2C]: apical two chamber.
- [ALAX]: apical long-axis view, also called 3-chamber view.
- [PSAXB]: short axis view of base section, short axis view of mitral valve.
- [PSAXM]: short axis view of base section, short axis view of papillary muscle.
- [PSAXAP]: short axis view of apex.

Parameter Adjustment

- [Thickness]: adjusts the tracing thickness, i.e., the distance between the endocardium wall and the tracking points on the epicardium.
- [Track Point]: adjusts the number of points within the segment.
- [Cycle]: select the next cycle.
- [Display Effect]: turns on/off the arrow vector graphical display of the myocardial movement.
- [Velocity Scale]: adjust the scale length of the velocity.
- [Display Style]: display the endometrial, the epicardium, the myocardial or all.
- [Tracking Cycles]: select the cycles to be tracked.
- [Average Cycles]: obtain the average parameter curves of the tissue.
- [Cycle Select]: select among different cycles.

Time Mark

According to the status of the current section, tap the corresponding key on the touch screen to check the matching time.

- [AVO]: displays aortic valve open time.
- [AVC]: displays aortic valve closure time.
- [MVO]: displays mitral valve open time.
- [MVC]: displays mitral valve closure time.

Curve Display

Select [Parameter], the system provides different curves of different segments for observation.

- General
 - Speed curve: The X-axis represents time (s); the Y-axis represents velocity (cm/s).
 - Displacement curve: The X-axis represents time (s); the Y-axis represents displacement (cm).
- Long axis section
 - Volume: The X-axis represents time(s); the Y-axis represents volume (ml).
 - Strain curve (Longitudinal, Transversal): The X-axis represents time (s); the Y-axis represents strain deformation of the tissue (%).
 - Strain-rate curve (Longitudinal, Transversal): The X-axis represents time (s); the Y-axis represents strain by time (s⁻¹).
- Short axis section
 - Area curve: The X-axis represents time(s); the Y-axis represents area (cm2).
 - Strain curve (Radial, Circumferential): The X-axis represents time (s); the Y-axis represents strain deformation of the tissue (%).
 - Strain-rate curve (Radial, Circumferential): The X-axis represents time (s); the Y-axis represents strain by time (s^{-1}) .

- Circumferential Rotation curve: The X-axis represents time (s); the Y-axis represents rotation of the tissue (Deg).
- Circumferential Rotation Rate curve: The X-axis represents time (s); the Y-axis represents rotation by time (Deg/s).

Torsion & Torsion Rate Curve

The system provides left ventricular torsion data based on short axis sections of PSAX AP and PSAX B. Torsion is acquired by calculating difference of apex and base of the heart.

Torsion = PSAX AP Rot. - PSA XB Rot.

- The X-axis represents time (s).
- The Y-axis represents tortion by time (Deg/s).

6.15.6 Bulleye

After tracking, the system can display Bull's Eye graph, so as to judge reverse movement or scope of myocardium.

1. Tap [Bull's Eye] on the touch screen to turn on the function:

You can acquire:

- Time to peak value and peak value of the 17 segments (similar to 16 segments);
- Display measurement result EDV/ESV/EF/TPSD.
- 2. Rotate the knob under [Parameter] on the touch screen to see different parameter bull's eye graph.

"-" will display in the table to indicate those segments that are not well tracked.

6.15.7 Measurement/Comment

Under tissue tracking QA mode, only Time measurement is available. For details, please refer to Operator's Manual "Advanced Volume".

Comments and Body Mark operations are the same as in other modes.

6.15.8 Data Export

The system provides data exporting function, so that you can export calculation result for analysis (for instance, SPSS analysis).

Tap [Data Export] on the touch screen, to export analyzed data of each segment.

6.15.9 FH Tissue Tracking QA

FH Tissue Tracking QA is used to analyze ventricular shape and contractility in a cardiac cycle, so as to realize fetal heart quantitative analysis.

NOTE:

FH Tissue Tracking QA does not support Bull's eye.

- 1. Open a saved B mode fetal echo cine file. Or press <Freeze> under fetal echo related exam mode (the frame rate should be higher than 40).
- 2. Tap [TTQA] on the touch screen:

You can determine the image of interest by previewing the image, set the ROI and zooming the image.

6 - 46 Operator's Manual

- 3. You can tap [Free Xros M] to enter Free Xros M mode and adjust the sampling line to help you observe the image and determine the heart rate cycle.
- 4. If necessary, use the trackball to move the frame mark, and tap [MVC] or [MVC'] to set the frame as the starting tracking point or ending tracking point of a needed cardiac cycle.
- 5. Use the cursor to set the reference point:
 - Manually enter multiple points (at least 6 points) clockwise using the cursor to set and double press the <Set> key to confirm the last reference point.
- 6. After reference points are set, the system will display the boundary of the endocardium, myocardium, and epicardium. Adjust the thickness if necessary.
 - If the traced result is poor, tap [Reload] on the touch screen to re-trace the reference points, or make fine adjustments to the points using the cursor.
- 7. Tap [Start Tracking] on the touch screen to start the tracking function. Adjust the parameters if necessary.
 - Tap [Edit] on the touch screen to display the cursor. Roll the trackball and press <Set> to reselect the trace reference points. Move the cursor to the exact boundary position and press <Set> again to set the right place. Click [Start Tracking] to start tracking again.
- 8. Tap [Accept & Compute] on the touch screen to calculate and display the curve. Adjust the parameters if necessary.
- 9. Tap [Data Export] on the touch screen to export analyzed data.
- 10. Tap [Exit] on the touch screen.

6.16 Fusion Imaging

6.16.1 Overview

MARNING

The Fusion Imaging is contraindicated to the person wearing the internal pacemaker, cochlear implant or nerve stimulator. People wearing the implant or intra-corporeal devices should keep one-meter away when the magnetic generator starts working.

Ultrasound Fusion Imaging completes the matching of multiple modalities and overlapping for ultrasound images and 3-dimensional data, such as pre-operative computed tomography (CT)/ magnetic resonance imaging (MRI) 3-dimensional data/positron emission computed tomography (PET) 3-dimensional data/ultrasound 3-dimensional data, etc. With the benefits of high spatial resolution, wide field of view and free-interference of the air, it offers adequate diagnostic information to the doctor.

Spatial Positioning: Import CT/MR/PET/freehand volume data to the Ultrasound System. CT/MR/PET/freehand volume data will be set as a CT/MR/PET/freehand 3-dimensional cubic image. After the doctor registers the ultrasound real-time image with a certain plane of CT/MR/PET/freehand image, the Ultrasound System receives the probe position information from "positioning (probe) sensor". The Ultrasound System shows the CT/MR/PET/freehand image aligned with the ultrasound image on account of the magnetic spatial navigation function.

Lesion Viewing and Marking: to show the lesions marked on the ultrasonic planes, the ultrasound image and CT/MR/PET/freehand image are displayed simultaneously via the spatial positioning device based on the old lesion marks on CT/MR/PET/freehand image. The lesion marks on CT/

MR/PET/freehand image appear on the ultrasound image in real time. It helps the doctor spot the old lesion mark and perform the surgical plan to the tumor ablation.

Clinical applications: the lesions not-easily-detected in the ultrasonic exams; the panorama of the large lesion not-fully-displayed in therapeutic ultrasound; surgical operations to tumor ablation; biopsy and ablation to the liver neoplasms (enabled in the biopsy to renal tumor, lung neoplasms and prostate).


6.16.2 Magnetic Positioning System

NOTE:

- Place the set of the magnetic positioning system away from the electromagnetic interference sources, such as power filter, signal indication, magnetically activated metal materials, cell phone in the use of the devices.
- Connect the magnetic positioning system when the magnetic positioning system controller is OFF.
- Exit Fusion imaging before reconnecting/disconnecting sensor from the magnetic positioning system controller. Power off the ultrasound system to turn off the magnetic positioning system controller before reconnecting/disconnecting magnetic transmitter.
- Mindray does not provide the sterile sheath. Users should prepare it according to the own needs.

Plug the auxiliary output power supply cable, USB data cable, magnetic generator and sensor(s) to the magnetic positioning system respectively following the arrow's guide.

6 - 48 Operator's Manual

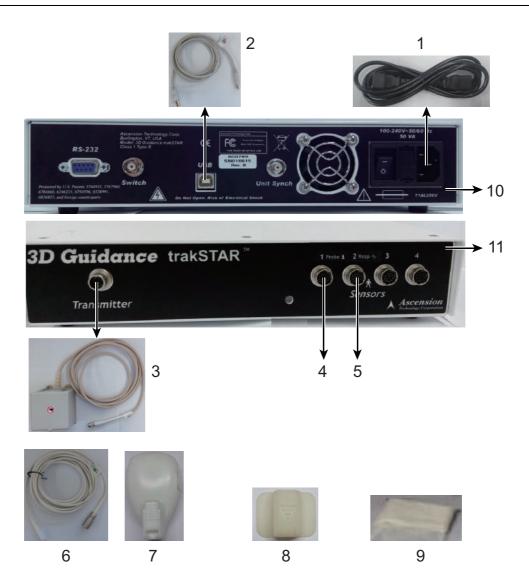

1	Auxiliary output power supply cable	2	USB Data cable
3	Magnetic generator	4	Positioning (probe) sensor port
5	Respiratory compensation sensor	6	Sensor (2)
7	Probe positioning sensor port	8	Motion (abdomen) sensor support
9	sterile sheath	10	Magnetic positioning system (rear)
11	Magnetic positioning system (front)		•

The description of the magnetic positioning system is given in details. See the table below.

No.	Device Name	Port	Description
1	Auxiliary output power supply cable	Power supply port	Plug the auxiliary output power supply cable to the port of the magnetic positioning system, and connect the power supply.
2	USB data cable	USB port	Plug one end of the USB data cable to the USB port of the magnetic positioning system, and another end to the USB port of the Ultrasound System.
3	Magnetic generator	Transmitter port	Plug the magnetic generator to the Transmitter port. Place it around the patient's shoulder or two sides of the patient's abdomen. The magnetic generator should be frontal-faced with the lesion. The frontal face of the magnetic generator keeps 15-60 cm from the target within the scope 30 cm up/down and towards probe.
			NOTE:
			Keep the magnetic generator away from the metal devices or electromagnetic interference.
4-9	/	Probe positioning sensor port Respiratory compensation sensor	Plug two sensors to probe positioning sensor port and respiratory compensation sensor port respectively.

6 - 50 Operator's Manual

NI.	D	D	Description			
No.	Device Name	Port	Description			
4-9	Name	Probe positioning sensor port Respiratory compensation sensor	3. Fix the probe positioning sensor (2 in the figure) which is already plugged in the probe positioning sensor port to the cavity of the probe positioning sensor support (1 in the figure) following guide.			
			NOTE: Note: if failed to plug the probe positioning sensor following guide, it may lead to non-correlation of spatial positioning. 4. Probe positioning sensor sterile sheath: wear the probe			
			sterile sheath after probe sensor and probe positioning support are installed.			
			5. Respiratory compensation sensor: fix the respiratory compensation sensor which is already plugged in the respiratory compensation sensor port to the cavity of the respiratory compensation sensor support following guide.			
			6. Respiratory compensation sensor sterile sheath: wear the sterile sheath after the respiratory compensation sensor and respiratory compensation sensor support are installed.			
			7. Respiratory compensation sensor support: stick the respiratory compensation sensor support against the top left of the patient's abdomen with the medical plasters (below left costal arch, right above the navel, the area where the skin moves apparently with the respiration).			
10- 11	Magnetic positioni ng system	/	Place the magnetic positioning system behind the Ultrasound System. Power on the magnetic positioning system to enable the positioning function.			

Magnetic devices positioning:


6 - 52 Operator's Manual



1	Sensor	2	Magnetic generator	3	Magnetic positioning
					system controller

6.16.3 Screen Description


You should connect the magnetic devices, and then enter Fusion Imaging. The Fusion Imaging screen appears.

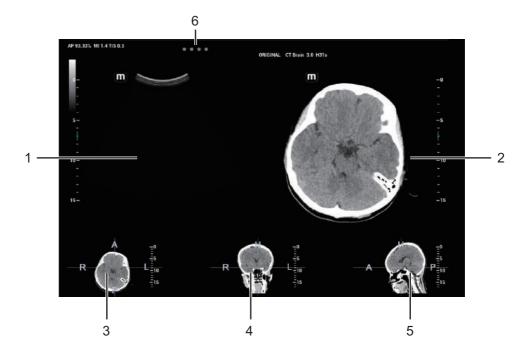

No.	Image	Description
1.	Ultrasound Display	When Fusion Ratio is among -1 to 0, the Ultrasound System registers CT/MR/PET/freehand image to ultrasound image. The fusion display appears then.
2.	Fusion Display	When Fusion Ratio is among 0 to 1, the Ultrasound System registers ultrasound image to CT/MR/PET/freehand image. The fusion display appears then.

No.	Image	Description
3.	Transverse plane	R, L, A, and P imply the right, left, anterior and posterior of the patient.
4.	Coronal plane	R, L, H, and F imply the right, left, head and foot of the patient.
5.	Sagittal plane	H, F, A, and P imply the head, foot, anterior and posterior of the patient.
6.	Indicator	Four indicators (1 st indicator is on positioning (probe) sensor and 2 nd indicator is on motion (abdomen) sensor. 3 rd indicator is on Needle Navigation Guiding sensor. 4 th indicator are reserved functions.) Check the indicator becomes green in use. Different indicator color: Blinks green: excellent. Blinks yellow: mediocre. Blinks red: poor. Stays grey: no signal activated. (The positioning function of the magnetic positioning system is not enabled.) NOTE: If the signal of the sensor becomes poor, check the connections of the magnetic devices. Reset the distance/orientation among the magnetic generator, sensors and the patient. Exclude the interference from the metal devices (ward beds made of metal materials) or the electromagnetic devices.

The position for each plane is shown below:

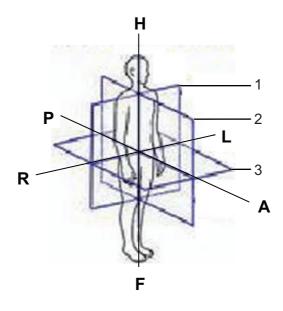

1	Coronal plane	2	Sagittal plane	3	Transverse plane
---	---------------	---	----------------	---	------------------

6.16.4 Basic Procedures

Perform the following procedure:

1. Select a proper probe and a correct exam. Enter real-time B/Color/Power/Contrast mode (non-cardiac Contrast Imaging mode).

6 - 54 Operator's Manual

- 2. Get magnetic positioning system prepared. Connect the magnetic positioning system. Power on the magnetic positioning system controller.
- 3. Activating the magnetic positioning:
 - a. Tap [Fusion] on the touch screen or user-defined key to enter Fusion Imaging mode (see also Chapter 12 Setup for key preset operations). Tap [Tracking System] on the touch screen. The positioning function of the magnetic positioning system is activated when the soft key becomes highlighted (it is usually activated by default).
 - b. Checking indicator. The Fusion Imaging works when the indicator becomes green.
- 4. Acquire/import CT/MR/PET/freehand volume data. Refer to "6.16.5 Acquiring/Importing Volume Data".

You can load PET volume data and CT volume data, and tap [Multi Data Regi] to register the PET image with CT image. Tap [Mark on Multimodality] to make marks on CT and PET images. Tap [Exit]. Then tap [Multi Data] to select "PET-CT". The PET-CT volume data will be used in later registering with ultrasound image.

NOTE:

- The Ultrasound System sets CT/MR/PET/freehand volume data to 3-dimensional display automatically. One of anatomical planes (2-dimensional image) appears on the screen.
- After freehand volume data is imported or acquired, the system registers freehand volume data with the ultrasound plane automatically. Do not move the magnetic generator and the patient for any circumstances after the freehand volume data is imported or acquired. Otherwise, the registration display for freehand image and the ultrasound image is affected.
- 5. The brightness and the grey level of loaded data can be completed via Window Width and Window Level. Set Window W and Window L.
- 6. Obtain an optimum plane as the registration plane from CT/MR/PET image.

NOTE:

Registered with the ultrasound plane). (For freehand volume data, skip steps 6-8.

It is suggested that the plane concentrated with blood vessels, organs, tissue margins, lesions is optimum for registering.

Tap [View Type] to change CT/MR/PET plane (transverse plane/coronal plane/sagittal plane). The pan (using the trackball), the shift or the rotation (along Z-axis) can be completed on CT/MR/PET plane until an optimum plane for registering appears.

Refer to "6.16.10 Rotating/Scrolling CT/MR/PET/Freehand Image" for CT/MR/PET image operations.

7. Obtain an ultrasound plane consistent with CT/MR/PET plane (taking as the registration plane) from human body in ultrasonic scan.

NOTE:

- It is usually easier to obtain an optimum plane when the probe sweeps.
- The registration is only approved when the image is frozen after pressing <Freeze>.
- 8. Data registering (first time registering).
 - a. Tap [Registration] to activate the registration. Tap [View Type] to select.
 - b. To register the ultrasound image with the CT/MR/PET image, perform the following procedures to set CT/MR/PET image.

- The icons for different plane operations appear after pressing <Set> for multiple times
- Tap [View Type] to change the active plane of CT/MR/PET image (sagittal plane, transverse plane, coronal plane). Varied planes can be panned, scrolled or rotated through the axis.
- Rotate CT/MR/PET image axially (rotate the <C> knob to cycle through Z-axis).
 Refer to "6.16.10 Rotating/Scrolling CT/MR/PET/Freehand Image" for CT/MR/PET image operations.
- Rotate [Fusion Ratio] to adjust the display ratio that the ultrasound image registers with the CT/MR/PET image. The ultrasound image and CT/MR/PET image are displayed well.
- Rotate <Zoom> on the control panel to zoom in or zoom out CT/MR/PET image;
- Rotate the knobs beneath [Offset X] and [Offset Y]. Pan the CT/MR/PET image.

NOTE:

- After tapping [Registration] each time, Tap [View Type]. It is convenient for panning or scrolling CT/MR/PET image.
- Do not move the magnetic generator and the patient for any circumstances after the registration accomplished. Otherwise, the registration display for CT/MR/PET image and the ultrasound image is affected.
- c. Tap [Confirm Registration] to complete registering. The ultrasound image and CT/MR/PET image appear synchronously after the registration accomplishment.

9. Checking registration effect:

After completing 8th step (first registration), move the probe and adjust the probe scan angle and position. View the synchronous effect of varied planes (coronal plane, sagittal plane, transverse plane) from the ultrasound image and CT/MR/PET/freehand image.

Synchronous display effect: The Ultrasound System represents the ultrasound image and CT/MR/PET/freehand image synchronously after the ultrasound image and CT/MR/PET/freehand image are registered first time with the magnetic spatial positioning and in the aid of positioning (probe) sensor receiving the spatial message from the probe.

10. Fine tuning (second time registering):

If the ultrasound image and CT/MR/PET/freehand image are not registered precisely after first-time registering, perform the fine tuning operations below:

- a. Tap [Fine Tuning] on the touch screen. Press <Freeze> or tap [Freeze US] and [Freeze MPR] to freeze the image.
 - Unfreeze the ultrasound image (tapping [Freeze US] to dim the soft key).
 - For CT/MR/PET/freehand image is frozen, whereas the ultrasound image is not, take CT/MR/PET/Freehand image as the comparison reference (keeping CT/MR/PET/ freehand image still); tune the probe scan orientation and position to obtain the ultrasonic plane which is identical with that on the CT/MR/PET/freehand image (the ultrasonic plane moved).
 - Or, unfreeze the CT/MR/PET/freehand image (tapping [Freeze MPR] to dim the soft key).
 - For the ultrasound image is frozen, whereas the CT/MR/PET/freehand image is not, take the ultrasound image as the comparison reference (keeping ultrasonic plane still); tune the probe scan orientation and position to obtain the CT/MR/PET/

6 - 56 Operator's Manual

Freehand plane which is identical with that on the ultrasound image (the CT/MR/PET/Freehand plane moved).

b. Tap [Confirm Registration] to complete the fine tuning.

NOTE:

- Use the plane concentrated with the patient's lesions to perform the fine tuning.
- The adjusting levels of the CT/MR/PET/Freehand plane and the ultrasound plane become finer after entering the fine-tuning. The ultrasound image and CT/MR/PET/Freehand image can precisely be registered after several times of fine tuning.
- Freeze the ultrasound image and CT/MR/PET/freehand image simultaneously after the fine tuning. Tap [Confirm Registration] to make the fine tuning work.
- 11. Respiration compensation (it is suggested that the respiration compensation should be operated according to your demands).

The respiration compensation can possibly enhance the fusion accuracy of the ultrasound image and CT/MR/PET/Freehand image, and reduce the aspiration motion effects to the image.

Refer to "6.16.7 Respiratory Compensation".

- 12. Conduct the ultrasonic exam and operation after the registration is completed.
- 13. Freeze the ultrasound image to save the single frame image or multi-frame cine.

Contrast Fusion Imaging

Contrast Fusion Imaging displays contrast ultrasound and multimodal data (CT/MR/PET-CT) in a registered state based on B mode Fusion Imaging providing a more comprehensive imaging information that helps in observing blood flow and microcirculation.

Perform the following procedure:

- Tap [Contrast] to enter Contrast Fusion Imaging after the Fusion Imaging is registered.
 Set fusion ratio. Adjust the display ratio of two split windows that the contrast image registers with CT/MR/PET/freehand image.
- 2. Contrast Fusion Dual Live:

Select [Contrast] > [Dual Live] to adjust the fusion ratio. Adjust the display ratio that tissue image registers with CT/MR/PET/freehand image (see Window 1 and window 2). Adjust the



display ratio that contrast image registers with CT/MR/PET/freehand image (see window 3 and window 4).

3. Inject the contrast agent. Enable the timer, and save the dynamic image. Refer to "9 Contrast Imaging".

Data registration of same patient/body part in different phases

When different phases of CT/MR/PET data from the same patient/body part exist and one CT/MR/PET data has been registered already, system will register the data by previous information if other phases data are imported.

6.16.5 Acquiring/Importing Volume Data

NOTE:

- Only support DICOM CT/MR/PET volume data, and cine format freehand volume data.
- The following CT/MR/PET volume data not accepted:
 - Slices less than 2.
 - Discontinuous or corrupted data.
 - Slice space not equal.
 - Slice distance is 0.
 - Data from varied alignment (tissue, plane).
- The liver enveloped in CT/MR/PET/freehand volume data.
- The registration effect will be better if the CT/MR/PET volume data already bears the data of Contrast Imaging with the ultrasound image.

Acquiring Volume Data

Acquiring volume data from network server

NOTE:

• It is only applied to the Ultrasound System that is configured with DICOM software package.

6 - 58 Operator's Manual

- The storage path should be short and clear for network server obtaining. Space or Chinese character is not allowed.
- Refer to "15 DICOM/HL7" to configure DICOM.

Perform the following procedure:

- a. Configure DICOM service and Query/Retrieve service.
- b. Load volume data to iStation.
- Acquiring volume data from external storage medium.

Perform the following procedure:

- a. Save volume data to USB disk, portable hard disk, optical disk, etc.
- b. Press <F2 iStation> to enter the iStation page. Select from the drop-down list of the data source, such as USB.
- c. Select the volume data disk from the drive drop-list (or portable hard disk, optical disk). Click [OK]. The icon appears after the volume data is acquired successfully.


NOTE:

- The icon at the right lower corner of the screen shows the progress of the task. Click the icon to see the progress.
- The icon appears after all tasks are completed, which implies that the patient data are loaded to the ultrasound system successfully.
- The dialog box does not appear for:
- If any file (Ultrasound patient data) is named with "LV" in the external storage medium, please rename the file, and conduct step 2. The dialog box given above appears then. If DICOMDIR volume data or backup file of the Ultrasound patient data is in the root directory of USB disk (portable hard disk, optical disk), the Ultrasound System does not pop up the path. However, volume data or patient data is loaded to iStation database.
- d. Press <Esc> to return to iStation page. Press <F2 iStation> again to enter the iStation page. You can see the volume data which is loaded successfully.

Importing Volume Data

Acquire volume data to iStation. Then, import the data to Fusion exam with the procedures below.

- 1. Press <Fusion> or user-defined <Fusion> key to enter Fusion Imaging mode. Tap [Load Volume Data]. The page appears as shown below. Select the CT/MR/PET/Freehand volume data, and click [OK].
- 2. Check "US--Patient Information" and "CT/MR--Patient Information". The information should be from same one patient (the name, the gender and DOB also should be from same one patient). Click [Accept] to load volume data.

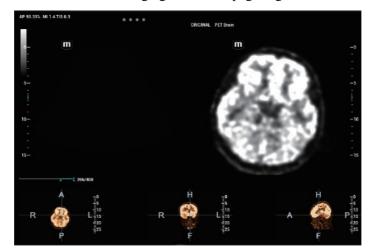

Volume data is loaded to Fusion Imaging exam. The page is given below:

Acquiring Freehand Volume Data

Except importing existing volume data, the operator can also acquire freehand 3D cine on fusion imaging mode.

6.16.6 Marks

Mark tumor position, lesion position on CT/MR/PET/Freehand image. Be sure of the lesion appearing on US and CT/MR/PET/Freehand image at the same time after the registration is completed.


TIP:

Mark the tumor or lesion on CT/MR/PET/Freehand image after CT/MR/PET/Freehand data is loaded. Generally, it is available to mark the tumor or lesion before/during/after the registration.

Perform the following procedure:

1. Tap [Mark on Volume Data] to enter the page. Select [Add Marks]>[Display Marks] to activate the mark.

6 - 60 Operator's Manual

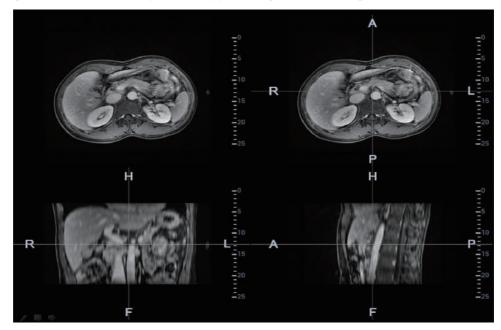

Tap [Axial]/[Coronal]/[Sagittal] to toggle the top-left reference plane.

2. Press <Cursor> to show the cursor. Mark on the axial plane (top-right)/coronal plane (bottom-left)/sagittal plane (bottom-right). The procedures to make marks are given below:

NOTE:

- The Ultrasound System adds 3-dimesnsional sphere mark to CT/MR/PET/Freehand volume data. Set the target mark based on your sphere center and sphere radius.
- At least two CT/MR/PET/Freehand planes should be marked when performing manual tracing.
- a. Select "Manual tracing" or "Circle tracing" in the "Mark" drop-down list.

 Circle tracing: Press <Set> to locate the center at the core of the lesion. Roll the trackball to adjust the radius. Envelop the tumor or the lesion with the circle. Double press <Set> to complete adding the mark.
 - Manual tracing: roll the trackball to manually envelop the lesion. Rotate the <4D> key to scroll the CT/MR/PET/Freehand image and continue to mark the lesions. After lesions of all the desired CT/MR/PET/Freehand planes are marked, tap [Accept Slice Trace] to add marks.
- b. Rotate [Ablative Margin] to add the ablative margin for this mark. See also "Ablative Margin" description below.

NOTE:


- The tumor infiltrates the neighboring organs, which leads to the tumor boundary unclear. The ablation scope is larger than practical tumor boundary's. The enlargement scope is called ablative margin.
- The ablative margin is about setting a safe boundary on the lesion which is already marked. It also implies another boundary mark outside the lesion mark on image.
- The ablative margin reminds of the narrowest boundary for surgical ablation. It takes significant effect on ablating the tumor.

c. Mark the tumor (a maximum of 20 tumors can be marked). The color of the mark can be green, blue, or red in turn. These colors appear in circle. The sphere diameter and ablative margin appear in the result window.



3. Click [Esc] to exit. Enter Fusion Imaging page. Move the probe to view the mark situation in varied planes.

The mark in the following figure is enveloped with three circles. There are real-time tumor, mark tumor (completed in step 3), and ablative margin from inside to outside.

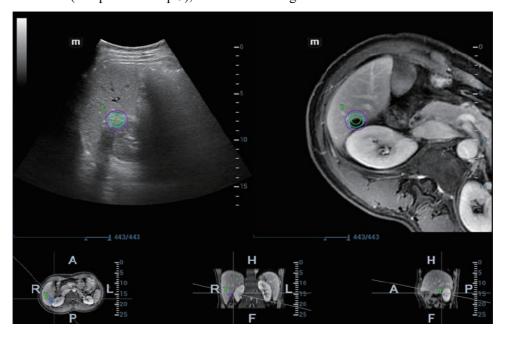

TIP:

It is not allowed to conduct other operations, such as, freezing, measuring, adding body mark, at the exception of adding the mark on the plane.

6 - 62 Operator's Manual

Saving/Loading the Mark

• Saving the mark

Enter tumor mark page. Mark varied tumors on CT/MR/PET/Freehand image. Tap [Save Marks] to type the mark name. Click [OK].

Save the tumor mark of the patient. It is convenient to load the tumor mark when conducting the tumor ablation for the patient.

NOTE:

"Mark Group Name" is not permitted to have same name in all exams (including the exam ended) of one patient.

• Loading the mark

Tap [Load Marks]. All mark groups of previous exams of this patient are displayed. Select the mark group. Click [Import]. The marks are loaded to the CT/MR/PET/Freehand plane (in general, the marks saved in one week are loaded).

Moving the mark

Select one tumor mark from the result window (the cross appearing in the circle). Move the cursor inside the circle. The cursor becomes arrow-shaped. Press <Set> to select the mark. Move the mark to the desired position. Press <Set> to relocate the mark.

Removing the mark

- Select one mark from the result window (the cross appearing in the circle). Tap [Delete Cur.] to remove the tumor mark.
- Tap [Delete All] to remove all tumor marks.

NOTE:

The button <Clear> is disabled when tumor mark is activated.

Displaying/Hiding the mark

- Tap [Display Marks] to activate it. All tumor marks appear on CT/MR/PET/Freehand image.
- Tap [Display Marks] to dim it. All tumor marks hide on CT/MR/PET/Freehand image.

Adding the comment

It is available to add the comment before adding tumor mark or after tumor mark is added.

6.16.7 Respiratory Compensation


TIP:

Stick respiration sensor to the patient's abdomen before entering Fusion Imaging mode.

Respiration Compensation sets a motion model for the movement regularities of the liver, and compensates the CT/MR/PET/freehand image in real time. The fusion dynamic accuracy is enhanced apparently.

Perform the following procedure:

- 1. Enter Fusion Imaging mode. Tap [Display Resp Curve] to activate it (it is highlighted by default). The respiratory curve appears on the image.
- 2. Keep the patient breathing regularly. Tap [Capture US & Resp] to capture the cine until the respiration curve becomes stable. Keep the probe still when capturing the cine. The progress

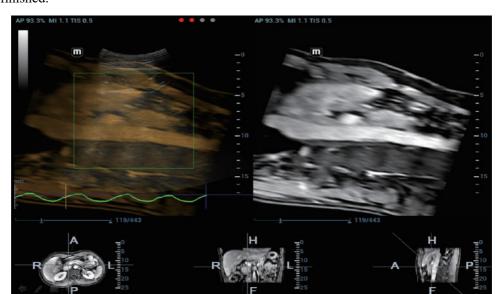


bar appears on the screen. The ultrasound cine plays automatically after the capturing is finished.

NOTE:

The Ultrasound System selects one premium phase of respiration curve automatically after the capturing is finished. It is prepared for the motion modeling. You can set the start frame and end frame to select one phase of the respiration curve.

Respiration Curve Description:

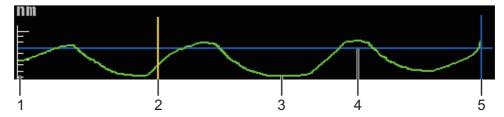


No.	Description
1.	Respiration Curve Scale (respiration depth).
2.	Set Modeling start (start point of motion modeling of the respiration curve).
3.	The green curve is the respiration depth in real-time respiration.
4.	The blue curve is the respiration depth at last registration.
5.	Set Modeling End (end point of motion modeling of the respiration curve).

3. Tap [Set Modeling ROI] to highlight it (it is activated by default). Move the trackball to set ROI position and size.

Set ROI position and size. Envelope the liver with the ROI.

6 - 64 Operator's Manual

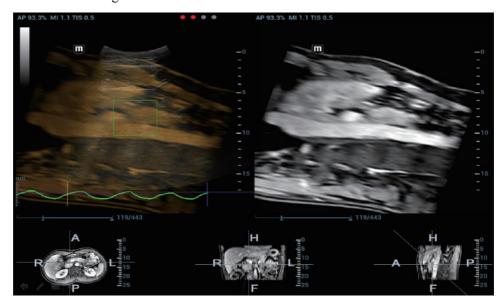

Press <Set> again to adjust ROI position and size, and to set the start frame and end frame of the motion modeling.

4. Tap [Motion Modeling]. If modelling succeeds, the system will play the cineloop automatically, and ROI moves along with the motion of the respiration curve.

NOTE:

- RMQF scale is 0~1. 0 represents the poor motion modeling; 1 represents the premium motion modeling.
- Conduct step 3~4 repeatedly based on your demands. Set motion modeling repeatedly until a premium one appears.
- 5. Tap [Motion Compen] to activate it. Move the probe. The Ultrasound System shows the CT image which is processed by respiration compensation (Fusion Imaging with the respiration compensation).



6. Save multi-frame cine.

Respiration Range

The aspiration curve appears due to the active respiration depth. The respiration curve beyond the scale becomes the straight line.

Rotate the knob beneath [Resp Range]. Respiration curve scale and the unit appear on the right-axis.

6.16.8 Freehand 3D

NOTE:

The effect of freehand 3D image acquisition is dependent on the technique of the operator. Thus, there is a risk of low registration accuracy.

Perform the following procedure:

- 1. Select a proper probe and correct exam. Enter real-time B/Contrast mode (non-cardiac Contrast Imaging mode).
- 2. Get magnetic positioning system prepared. Connect the magnetic positioning system. Power on the magnetic positioning system controller, and check if the indicator becomes green.
- 3. Tap [Freehand 3D] on B-mode/Fusion-mode/Contrast-mode tab of the touchscreen. Entering freehand 3D mode under fusion imaging mode is preferred.
- 4. Capture images using linear scan or rocked scan.
 - Linear scanning
 Move the probe across the surface slowly at a constant speed.



Rocked scanning

Rotate the probe once from the left to the right side (or from the right to the left) slowly at a constant speed to include the entire desired region.



5. After the acquisition is completed, the freehand 3D cine is automatically saved.

If the freehand 3D cine is captured under fusion imaging mode, the system automatically registers the ultrasound image with the freehand volume data after the acquisition is completed. Do not move the magnetic positioning system and the patient for any circumstances after the freehand 3D cine is captured. Otherwise, the registration display for freehand image and the ultrasound image is affected.

6.16.9 Parameter Settings

The parameters of the Fusion Imaging are described below:

6 - 66 Operator's Manual

Nav System

Tap [Tracking System] to enable or disable the function.

CT/MR/PET/freehand image and the ultrasound image build up the coordinate relation. The sensor indicator becomes green (navigation signal state indicator).

Fusion Ratio

Adjust the display ratio that the ultrasound image registers with the CT/MR/PET/freehand image. Rotate the knob beneath [Fusion Ratio] to set the ratio.

The adjusting range is $-1 \sim 1$ in increments of 0.1.

- 0~1 represents that the ultrasound image registers with the CT/MR/PET/freehand image; the change of the fusion ratio appears on the right window side.
 - The larger the value is, the better the display effect becomes for the ultrasound image registering with the CT/MR/PET/freehand image; and vice versa. 0 only relates to CT/MR/PET/freehand image on the right window side and 1 only relates to ultrasound image on the right window side.
- -1~0 represents that the CT/MR/PET/freehand image registers with the ultrasound image; the change of the fusion ratio appears on the left window side.

The larger the value is, the poorer the display effect becomes for the CT/MR/PET/freehand image registering with the ultrasound image; vice versa. -1 only relates to CT/MR/PET/freehand image on the left window side and 0 only relates to ultrasound image on the left window side.

Image Magnification

The lesion or tumor ultrasound and CT/MR/PET/freehand image becomes clearer and easier to register via <Zoom> key.

Rotate <Zoom> to zoom in or zoom out the image. The parameter "Z" on the right side of the image refers to the magnification value.

Toggling CT/MR/PET/Freehand Anatomical Plane

The Ultrasound System sets CT/MR/PET/freehand volume data to 3-dimensional image automatically after importing CT/MR/PET/freehand volume data. There are transverse plane, coronal plane, sagittal plane displaying from left to right at the bottom of the screen.

It is available to toggle and register among three planes.

Tap [View Type] to select the CT/MR/PET/freehand anatomical planes (among the sagittal plane, transverse plane, coronal plane).

Window Width (Window W)/Window Level (Window L)

It is available to set CT/MR/PET/freehand image contrast via the window width.

It is available to set CT/MR/PET/freehand image grey scale via the window level.

· Window Width

Rotate [Window W] to set the value in increment of 1.

The larger the window width is, the poorer the image contrast becomes.

Window Level

Rotate [Window L] to set the value in increment of 1.

The darker image on CT/MR/PET/freehand image may be missed if the window level becomes larger. The image with brighter grey scale may appear then.

The darker scale on CT/MR/PET/freehand image may appear on the screen if the window level becomes smaller.

Tap [Window W/L Set by Trackball]. Move the trackball to set the window width and window level.

Move the trackball left; the window width becomes smaller, and the window level becomes larger; the image contrast becomes more visible.

Move the trackball right; the window width becomes larger, and the window level becomes smaller; the image contrast becomes poorer.

Reset Width (Reset W)/Reset Level (Reset L)

It initializes the window width and window level of the CT/MR/PET/freehand image.

Tap [Reset Window W/L] to initialize the width/level of the CT/MR/PET/freehand image.

Reset CT/MR/PET/Freehand

It initializes CT/MR/PET/freehand image when CT/MR/PET/freehand image is cycled axially, panned, scrolled or zoomed, etc., after CT/MR/PET/freehand volume data is imported to Ultrasound System.

Tap [Reset CT/MR] to initialize the CT/MR/PET/freehand image.

Tint Map

This function provides an imaging process based on color difference rather than gray distinction for CT/MR/PET/freehand image.

Rotate the knob under the [Tint Map] item on the touch screen to select the map. The system provides 8 different color effect maps.

Press the knob under the [Tint Map] item on the touch screen to turn on/off the function.

Single Window

If the feature is enabled, only the image at the upper left is displayed on the image area. Tap [Single Window].

Rotate 180°

This function is to rotate CT/MR/PET volume data 180 degrees before registration. Tap [Rotate 180°].

B Display

This function is to set whether to display B-mode image under Color fusion imaging mode.

Tap [B Display].

- If [B Display] is highlighted, the B-mode image is displayed.
- If [B Display] is not highlighted, the B-mode image is hidden.

6.16.10Rotating/Scrolling CT/MR/PET/Freehand Image

The Ultrasound System sets the CT/MR/PET/freehand volume data to 3-dimensional image after the CT/MR/PET/freehand image is imported to iStation.


Each of any CT/MR/PET/freehand anatomical planes (2-dimensional) appears on the screen via rotating or scrolling the CT/MR/PET/freehand image.

Rotating CT/MR/PET/Freehand Cubic Image

Rotate the knob <M>, the knob <PW>, the knob <C> to cycle the CT/MR/PET/freehand cubic image through X-axis, Y-axis and Z-axis. The 2-dimensional CT/MR/PET/freehand anatomical plane cycles simultaneously.

6 - 68 Operator's Manual

The relations of X-axis, Y-axis and Z-axis are given below:

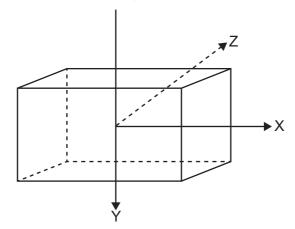

- Rotate the knob <M> clockwise to cycle CT/MR/PET/freehand image clockwise through X-axis.
- Rotate the knob <PW> clockwise to cycle CT/MR/PET/freehand image clockwise through Y-axis.
- Rotate the knob <C> clockwise to cycle CT/MR/PET/freehand image clockwise through Z-axis.

Offset X/Offset Y CT/MR/PET/Freehand Image

- It is available to offset CT/MR/PET/Freehand image through X-axis and Y-axis and obtain a proper position to register.
- Rotate [Offset X]/[Offset Y] to offset the CT/MR/PET image.

Scrolling CT/MR/PET/Freehand Image

It is available to scroll one certain plane (sagittal/transverse/coronal) of CT/MR/PET/Freehand image on the Ultrasound System and obtain a desired CT/MR/PET/Freehand plane to register.

- Rotate the <4D> key clockwise. The transverse plane moves towards the patient's head. The R~L axis and A~P axis on the transverse plane move towards the patient's head.
- R~L axis, A~P axis correspond with the axe of coronal plane and sagittal plane. R~L axis of coronal plane and A~P axis of sagittal plane move towards the cephalosome.

6.16.11Measuring

It is available to conduct the general measurements on the image that the ultrasound image registers with the CT/MR/PET/freehand image.

6.16.12Comment and Body Mark

It is available to conduct the comment and the body mark on the image that the ultrasound image registers with the CT/MR/PET/freehand image.

6.17 Smart Fetal HR (Heart Rate)

NOTE:

• This feature is available only under Fetal Echo (High Flow), OB1 Fetal Echo, Fetal Echo (Low Flow) exam modes.

During image acquisition, the user is recommended to stably hold the ultrasound probe to
acquire fetal heart ultrasound video. If the Smart Fetal HR measurement is not satisfactory
(e.g., the heart rate cycles are not marked accurately on the M-mode image), the user can
manually modify the sampling lines of heart rate cycles on the M-mode image or change the
number of heart rate cycles. The fetal heart rate measurement result will be updated
simultaneously.

This feature is to measure the fetal heart rate automatically on M mode.

Perform the following procedure:

- 1. Perform B-mode scanning under Fetal Echo (High Flow), OB1 Fetal Echo, Fetal Echo (Low Flow) exam mode.
- 2. Tap [Smart FHR], and the button is highlighted.
- 3. Press <M> on the control panel, and the system acquires M-mode image automatically. The M mode image and the sampling line are displayed on the screen.
 - If necessary, tap [Smart FHR Cycle] to set the number of heart rate cycle.
- 4. Press <Freeze> on the control panel. The heart rate cycles are marked on the M-mode image. And the fetal heart rate measurement result is displayed on the screen.
 - If necessary, tap [Smart FHR Cycle] to set the number of heart rate cycle, and the measurement result is updated simultaneously.

6.18 Smart VTI

Smart VTI (Velocity-Time Integral) is used to calculate the CO (cardiac output) of the LVOT (left ventricular output tract), so as to quickly evaluate the cardiac function.

NOTE:

Smart VTI supports B mode image calculation in real time.

Perform the following procedure:

- 1. Select a phased probe and "Adult Cardiac" exam mode.
- 2. Move the probe to capture an appropriate image of the long axis view of the left ventricular near the sternum.
- 3. Press the <Measure> key to enter the application measurement. Select the "LVOT Diam" item and the measurement cursor is displayed on the main screen.
 - a. Move the cursor to the starting point and press <Set> to set the starting point.
 - b. Move the cursor to the end point.
 - c. Press <Clear> to cancel setting the starting point for measurement and <Update> to switch the active end and fixed end of the caliper.
 - d. Press <Set> to set the end point.

For more information about measurement, see Advanced Volume.

- 4. Press the <Freeze> key to unfreeze the image. Move the probe to capture an appropriate image of the apical five chamber view.
- 5. Tap [Smart VTI] on the touch screen or the user-defined key to enter the Smart VTI mode.

The system will:

Automatically trace the color VOI, and PW sampling line and sampling volume.

6 - 70 Operator's Manual

- Automatically recognize the cardiac cycle: when there are ECG inputs, the ECG signals
 are preferred; when there are no ECG signals, the system automatically starts calculation.
- Trace the LVOT spectrum in a cardiac cycle in real time to gain the VTI, HR, and CO results of the LVOT.
- 6. If necessary, adjust the color VOI, and PW sampling line and sampling volume:
 - Use the trackball and <Set> keys to adjust the color VOI position and size, and the PW sampling line position.
 - Tap the PW tab to enter the PW mode, and adjust the PW sampling volume.

After adjustment, the LVOT spectrum tracing and calculation results display in real time.

7. Press the <Freeze> key to freeze the image, and check the Smart VTI calculation results.

If necessary, you can edit the LOVT spectrum manually:

- a. Tap [Edit VTI] on the touch screen.
- b. Press the <Cursor> key to activate the cursor.
- c. Move the cursor to the spectrum tracing line and press the <Set> key.
- d. Use the trackball to trace a line.

After tracing, the calculation results display in real time.

- 8. Tap [Save VTI] to save the Smart VTI calculation results of the current cardiac cycle to the report.
- 9. Tap [Graph] to check the quantitative index trend curve.
 - VTI, SV, and CO have different trend curves and are differentiated by colors. A maximum of 6 sets of Smart VTI results can be saved and displayed.
- 10. Tap [Report], and select "Fluid Management" from the drop list box of [Report Type] to check report.

For details about report operation, refer to Advanced Volume.

6.19 Smart IVC

Smart IVC is used to automatically measure the IVC inner diameter and calculate the change rate in the B mode image. Measure the IVC (Inferior Vena Cava) in real time, and the system automatically tracks and measures the changes of IVC inner diameter. It can be used to assist in treatments, such as volume estimation and fluid infusion.

NOTE:

Smart IVC supports calculation in both real time and freeze modes.

- Enable Smart IVC in real time. The calculation starts from the current frame and ends after the image is frozen.
- Enable Smart IVC in freeze mode or from the cine file. The calculation starts from the current frame and ends at the last frame. If the cine length is no longer than 10 seconds, it is allowed to calculate in retrospective from the current frame after the cine length reaches 10 seconds.

Perform the following procedure:


- 1. Select an appropriate probe and exam mode.
- 2. Move the probe to gain an appropriate IVC long axis image.

- 3. Tap [Smart IVC] on the touch screen or the user-defined key to enter Smart IVC mode and start calculation.
 - a. Tap to select a breath type: "Spontaneous Breath" or "Mechanical Ventilation".
 - b. Select [Change Resp Time] > [Resp Time] to set a respiratory time.

The system measures the IVC inner diameter of the image in every frame, calculates the maximum and minimum IVC diameters, and draws a quantitative index change curve in real time.

- 4. If necessary, you can adjust the IVC sampling line manually:
 - a. Tap [Edit Line] on the touch screen.
 - b. Tap [Angle] on the touch screen to adjust the sampling line angle, and use the trackball to adjust the sampling line position.
 - c. Press the <Update> key to start calculating IVC again.
- 5. Press the <Freeze> key to freeze the image and finish calculating IVC.

The calculation results and quantitative trend curve are displayed on the main screen. Tap [Diagnostic Info] on the touch screen to add diagnostic information to the image quickly.

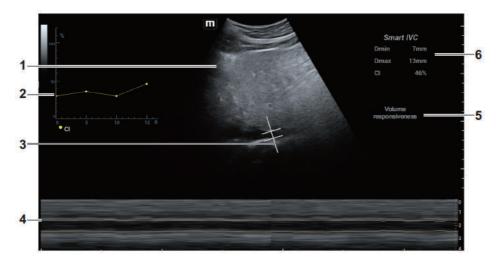

1.	B Mode Image	/
3.	IVC CI (Collapsibility Index), DI (Distensibility Index), IVCV trend curve IVC Sampling Line	Corresponds to the selected breath type: • Spontaneous Breath: displays the IVC CI curve. • Mechanical Vent: displays the IVC DI curve and IVCV curve.
4.	IVC Trending Line	The horizontal axis represents the time, which is displayed in the below Free Xros M image, and is traced along the IVC vessel wall.
5.	Diagnostic Information	Displays the added diagnostic information.

6 - 72 Operator's Manual

6.	Calculation Results Window	•	Displays the calculation results within the current calculation range.
		•	Dmax: indicates the maximum IVC inner diameter within a respiratory cycle.
		•	Dmin: indicates the minimum IVC inner diameter within a
		•	respiratory cycle.
		•	IVC CI = (Dmax-Dmin)/Dmax
		•	IVC DI = (Dmax-Dmin)/Dmin
		•	IVCV = (Dmax-Dmin)/[(Dmax+Dmin)/2]

- 6. Tap [Save Data] to save the calculating IVC results to the report.
- 7. Tap [Report], and select "Fluid Management" from the drop list box of [Report Type] to check report.

For details about report operation, refer to Advanced Volume.

6.20 IOTA (International Ovarian Tumor Analysis)

ACAUTION

It is provided for reference, not for confirming a diagnosis.

The IOTA function is used to estimate and analyze the benignancy or malignancy probability of patients with ovarian adnexa tumors, using the ADNEX (Assessment of Different NEoplasias in the adneXa) model.

Based on the clinical and ultrasound indexes input by doctors, the system automatically calculates the probability of benign tumors, borderline tumors, stage I ovarian cancer, stage II-IV ovarian cancer, and malignant metastatic tumors respectively, and then visualizes the results in the ultrasound report.

Perform the following procedure:

- 1. Select an appropriate probe and gynecology exam mode.
- 2. Tap [IOTA] on the touch screen to enter the editing page of the IOTA ADNEX model.
- 3. Input the evaluation indexes.

When entering diameter values, you can directly input the value or perform measurements to obtain the value.

- Tap [Calculate] to generate the ADNEX model.
 The ADNEX model includes probability tables and histograms differentiated by colors.
- 5. Tap [Send to Report] to send the analysis results into the gynecology report.

6.21 iWorks (Auto Workflow Protocol)

The main objective of ultrasound workflow automation (iWorks) is to speed up exam times and reduce the excessive number of user interface manual key strokes that can lead to repetitive strain injuries over time. It automates a clinical workflow in common exam protocols in a logical "step by step" manner. It also prevents missing important parts of examinations as well as decreasing exam times.

A Protocol Event contains series workflow events (annotation comments, body marks and measurements) and image modal commands to assist the user in routine ultrasound examinations.

NOTE:


The system provides different protocol events based on the different application regions.

Perform the following procedure:

- 1. Input the patient information.
- 2. Tap [iWorks] on the touch screen or press the user-defined key for "iWorks" to enter the protocol selection screen, and tap the corresponding protocol button to enter the status.
 - After the system enters the iWorks screen, the available protocol is displayed on the right of the screen.
- 3. Perform the scanning and saving according to the screen prompt.
- 4. Perform measurements or add comments/body marks to the image according to the screen prompt.
- 5. After a view scanning is complete, tap [Next] on the touch screen to switch to the next view according to the screen prompt.
- 6. Repeat steps 3 to 5 to acquire all the necessary images.
- 7. After all views are finished, the system will prompt you to exit iWorks. Tap [Yes] to exit.

6.21.1 Screen Display

The monitor displays the following screen:

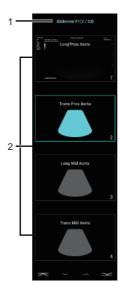

1	Displays the protocol name, and the number of views contained.
2	Displays the view steps in the protocol.
	The current active view with a solid frame around the image.

6.21.2 View Operation

In iWorks status, you can perform view selection, repeat, replacement and delete operations using the touch screen.

For some views, the system switches to the relevant imaging modes if necessary.

6 - 74 Operator's Manual

The comment for the current view has been automatically added to the bottom-left corner of the image, ready for you to scan the specified anatomy.

View Selection

Tap [Prev]/[Next] to select the view to be scanned. The current view is surrounded by a solid frame.

View Operation

In the current active view, you can perform image scanning, measurements, and adding comments and body marks, etc. Operations are the same as those for manual operation. See the relevant chapters for details.

Repeat View

If the current view has been performed, you can touch [Repeat] to insert another template of the current view and then perform an extra examination. If the current view has not been performed, you can touch [Repeat] to insert another template of the previous view.

View Replacement

The previous image will be deleted and replaced by the new image.

Delete View

Tap [Prev]/[Next] to select the view to be deleted. Tap [Delete] to delete the selected view.

6.21.3 Manual Examination

Suspend - Exit the protocol so the user can run the system manually. This is used when an unusual or atypical workflow is required.

- Start manual examination: tap [Suspend] to pause the current iWorks protocol. The system enters manual examination status.
- Return to iWorks: tap [Resume iWorks] to return to automated status. You can continue the previous iWorks scan.

6.21.4 Insert

Insert is a specialized protocol event within iWorks and iWorks OB. It assists with the workflow for documenting and measuring common pathological (disease) states (i.e. Mass, Cyst, Stenosis, Thrombus) that occurs outside a routine, normal examination.

Perform the following procedure:

- 1. Tap [Insert] on the touch screen to enter the status.
- 2. Select the necessary protocol and the system adds the protocol events to the current protocol.
- 3. Perform measurements or add comments/body marks to the image if necessary.

6.21.5 Create

The ultrasound system supports creating a user-defined iWorks protocol based on user's habits. Perform the following procedure:

- 1. Tap [Create] on the touch screen.
- 2. Press the knob under [Start] to start creating an iWorks protocol.
 - During creating, the red button of REC on the touch screen is blinking.
 - Press the knob under [New Group] to add more groups.
 - Press the knob under [Pause] to pause the creating.

- Press the knob under [Continue] to continue the creating.
- 3. Press the knob under [Stop] to enter Protocol Setup and Review page.
 - You can rename Groups, Views, or Protocols.
 - Select type from the drop-down list as Sequence, Random, or Insert Protocol.
 - Tap or click [Save] to temporarily save the creating.
- 4. Tap or click [Generate Protocol] to generate a user-defined iWorks protocol.

6 - 76 Operator's Manual


NOTE:

3D/4D imaging is largely environment-dependent, so the images obtained are provided for reference only, not for confirming a diagnosis.

7.1 Overview

The ordinary 2D imaging has the limitations on viewing the overall structure and different planes of the target. However, 3D imaging can obtain the reference information by overall observation.

7.1.1 Terms

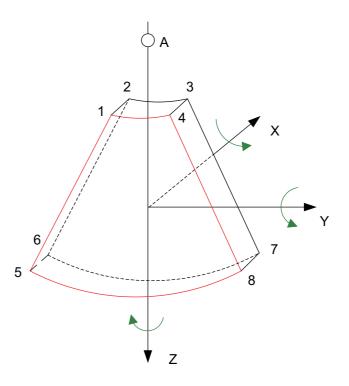


A View point

- Volume data: to obtain the data collection of three-dimensional object via the sequence reconstruction to two-dimensional object.
- 3D image Volume Rendering (VR): the 3D image on the screen.
- View point: the position for viewing volume data/3D image.
- MultiPlaner Rendering (MPR): a tangent plane of the 3D image that obtained by algorithm.Of
 which, XY-paralleled plane is C-plane, XZ-paralleled plane is B-plane, and YZ-paralleled
 plane is A-plane.YZ-paralleled plane is B-section. The probe is moved along the X-axis.

- ROI (Region of Interest): a volume box used to determine the height and width of scanning volume.
- VOI (Volume of Interest): a volume box used to display 3D image (VR) by adjusting interesting region in MPR.

7.1.2 ROI and VOI

After the system enters 3D/4D imaging, a B image with ROI displays on the screen. A line (shown in the following figure) that shows the upper edge position of VOI is inside ROI.

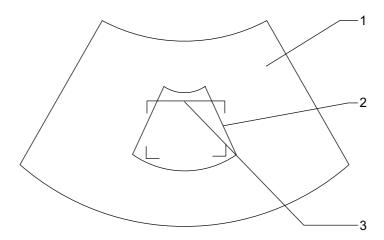

1	B image	2	ROI
3	Cut plane		

- ROI adjustment: roll the trackball to change the ROI size and position, press <Set> to toggle between setting the size (dotted line) and position (solid line).
- Curved VOI adjustment: change the curved shape of the nearest VOI section (front section), to
 facilitate observation for the interested volume data. It can be adjusted both in acquisition
 preparation status, and in A, B, C sections of review/ 4D imaging status, while a triangle of
 control point on the curved VOI is displayed.

Depending on the view direction, the orientation and the shape (line or dot) of curved VOI vary:

View	Curved VOI
U/D	At the upper part of curved VOI
D/U	At the lower part of curved VOI
L/R	At the left part of curved VOI
R/L	At the right part of curved VOI
F/B	Displays as a dot
B/F	Displays as a dot

NOTE:

To define a ROI, please remove the useless data as to reduce the volume data and shorten the time for image storing, processing and reconstruction.

7 - 2 Operator's Manual


7.1.3 About the probes

A 2D imaging probe can be applied for Smart 3D imaging, however, to realize Static 3D imaging, 4D imaging, STIC, iPage, SCV, CMPR, Color 3D or Niche, a volume probe should be selected.

7.1.4 MPR


MPR represents three different views of 3D image.

In the quad display format view, the screen displays 3 MPRs (A, B and C) and the 3D image.

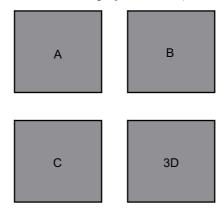


A	A window	В	B window
С	C window	3D	3D window (VR)

On the touch screen, the current window's icon is highlighted; as shown in the figure below, A window is the currently activated window.

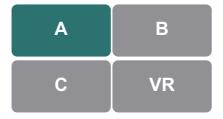

A, B, C sectional images are corresponding to the following sections of 3D image.

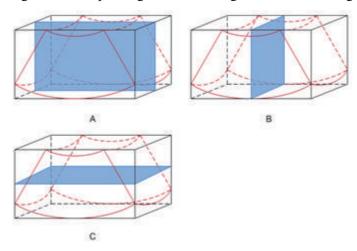

- Section A: corresponds to the 2D image in B mode. Section A is the sagittal section in fetal face up posture, as shown in the figure A above.
- Section B: it is the horizontal section in fetal face up posture, as shown in the figure B above.

• Section C: it is the coronal section in fetal face up posture, as shown in the figure C above.

The upper part of the 3D image in the 3D window is corresponding to the orientation mark on the probe, if the fetal posture is head down (orientating the mother's feet), and the orientation mark is orientating the mother's head, then the fetus posture is head down in the 3D image, you can make the fetus head up by rotating the 3D image by taping [180°] on the touch screen.

ACAUTION

The ultrasound images are provided for reference only, not for confirming a diagnosis. Please use caution to avoid misdiagnosis.

7.1.5 Free View

With this function, probe scanning direction can be controlled just by changing the probe scanning angle, the interested image can be easily found without any actual probe position and direction change. It not only reduces the operations, but most importantly, it decreases the discomfort of patients resulted from probe moving.

When the intra-cavity 4D probe is activated, the parameter [Free View] can be adjusted on the B image touch screen for adjusting the probe angle.

Range: -45° to $+45^{\circ}$.

In increments of 5°.

7.1.6 Wire cage

When you view a 3D/4D image on the display monitor, it's sometimes difficult to recognize the orientation. The system displays a three-dimensional drawing to illustrate the orientation for help. Of which, the blue plane presents the image acquisition where started, while the red plane presents the image acquisition where ended. Besides, a yellow plane in the wire cage presents the position of the MPR.



7.2 Note before Use

The quality of images reconstructed in the freehand 3D mode is closely related to the fetal condition, angle of a B tangent plane and scanning technique. The following Smart 3D description uses the fetal face imaging as an example, the other parts imaging are same as 3D/4D imaging.

NOTE:

- In accordance with the ALARA (As Low As Reasonably Achievable) principle, please try to short the sweeping time after a good 3D imaging is obtained.
- A region with qualified image in B mode may not be optimal for 3D imaging. E.g. adequate AF isolation for one section plane of 2D image doesn't mean the whole desired region is isolated by AF for 3D imaging.
- More practices are needed for a high success of qualified 3D imaging.
- Even with good imaging condition, to acquire an approving 3D image may need more than one scanning.

7 - 4 Operator's Manual


Fetal Condition

Gestational age

Fetuses of 24~30 weeks old are the most appropriate to 3D imaging.

Fetal body posture

Recommended: Cephalic face up (figure a) or face aside (figure b); NOT recommended: Cephalic face down (figure c).

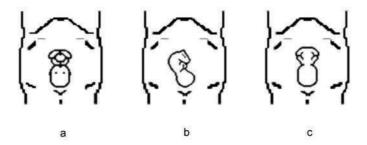

- Amniotic fluid (AF) isolation
 - The region desired is isolated by amniotic fluid adequately.
 - The region for imaging is not covered by limbs or umbilical cord.
- The fetus keeps still. If there is a fetal movement, you need a rescan when the fetus is still.

Angle of a B tangent plane

The optimum tangent plane to the fetal face 3D imaging is the sagittal section of the face. To ensure high image quality, you'd better scan maximum face area and keep edge continuity.

Image quality in B mode (2D image quality)

Before entering 3D capture, optimize the B mode image to ensure:

- High contrast between the desired region and the amniotic fluid surrounded.
- Clear boundary of the desired region.
- Low noise of the amniotic fluid area.


Scanning technique (only for Smart 3D)

- Stability: body, arm and wrist must move smoothly, otherwise, the restructured 3D image distorts.
- Slowness: Move or rotate the transducer slowly. The speed of linear scan is about 2 cm/s and the rotation rate of the fan scan is about 10°/s 15°/s.
- Evenness: move or rotate the transducer at a steady speed or rate.
- Method

Capture images using Linear scan or Rocked scan.

Linear scanning

Move the probe across the surface.

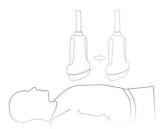

Rocked scanning

Rotate the probe once from the left to the right side (or from the right to the left) to include the entire desired region.




Scanning plane and probe movement

Move the probe across the body surface.

The arrow in the figure below indicates the movement of the probe.

You can move the probe in the opposite direction to the arrow.

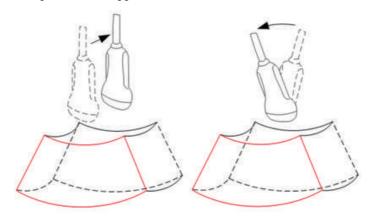

7.3 Static 3D

Static 3D provides single frame image acquisition of 3D images. During the scanning; the probe performs the scanning automatically.

7.3.1 Basic Procedures for Static 3D Imaging


Perform the following procedure:

7 - 6 Operator's Manual


- 1. Select the proper probe and exam mode; make sure there is sufficient gel on the probe for scanning.
- 2. Obtain a 2D image, and optimize the image if necessary.
- 3. Press the user-defined <3D> key to enter Static 3D acquisition preparation status, and define the ROI and curved VOI.

Methods to adjust the ROI:

- Roll the trackball to change the ROI size, position and curved VOI, press the right <Set> key to toggle among setting the ROI position, size or curved VOI. Press the left <set> key to adjust VOI angle.
- Tap [Flip VOI] to flip VOI. Tap [Reset VOI] to reset the angle of VOI to the original status.
- Enter touch screen mapping mode. For details, see "2.8.4 Touch Screen".
 Draw a circle on the desired area. Move ROI over the circle to adjust the size and position of ROI. Roll the trackball or press <Set> to adjust ROI.

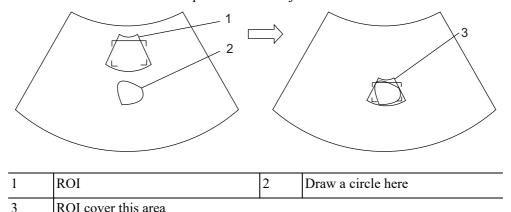

Move the cursor over the VOI, and move the cursor to the desired area to adjust the VOI curve.

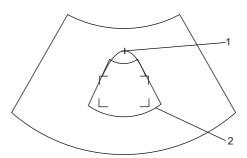

1	Cross cursor on the VOI curve	2	ROI
---	-------------------------------	---	-----

To setting the ROI, make sure:

- Set ROI on the 2D image with the largest section area of the fetal face.
- Set ROI a little larger than the fetal head.

NOTE:

To define a ROI, please try to cut the useless data as to reduce the time for image storing, processing and reconstruction.

4. Select the 3D/4D scenario, and set the quality and angle parameter.

5. Press < Update > to start capturing 3D.

During the acquisition, a progress bar is displayed to indicate the acquisition progress.

The system enters into 3D image review status when the acquisition is completed.

In image review status, you can perform operations like VOI setting, parameter adjustment, comments, image saving, image cutting, etc. For details, see "7.3.3 Static 3D Image Viewing".

6. Exit static 3D.

Press or press user-defined <3D> key to exit Static 3D mode. It returns to B mode.

7.3.2 Static 3D Acquisition Preparation

Use the touch screen to select render mode in acquisition preparation status.

Parameters of Static 3D Acquisition Preparation

Туре	Parameter	Description
Parameter adjusting	3D/4D Scenario Setting	Select 3D/4D scenario based on different scenario application.
	Quality	To adjust the image quality by changing the line density. Image quality can affect the imaging speed that the better the image quality is, the longer the time needs. Tap [Quality] on the touch screen, or, rotate the corresponding knob below the touch screen.
Ang	Angle	To set the motion angle the probe covered during a fan sweep.
STIC	Based on the movements of the fetus, rebuilt and show the anatomical structure within a physical movement by using the interconnection between the time and the space.	

7.3.3 Static 3D Image Viewing

To enter/exit image viewing

- Enter: The system enters image viewing when 3D image acquisition is finished.
- Exit: Press <Freeze> or <Update> to return to image acquisition preparation status and to exit image reviewing.

3D/4D Scenario

This function provides users multiple groups of preset 3D/4D parameters based on different application scenarios to quickly obtain expected image effect.


Tap [3D/4D scenario] to select a desired scenario and subpreset (rendering mode) under each scenario to view images. The parameters of each rendering mode are preset to different values.

Default scenarios and rendering modes of each probe and exam mode are different. You can customize the 3D/4D scenario in QSave. For details, see "6.1.2 Quickly Saving Image Settings".

7 - 8 Operator's Manual

Activate MPR

On the [VR] subtab, tap [A], [B], [C] or [VR] to activate sectional plane image (MPR) or 3D image (VR).

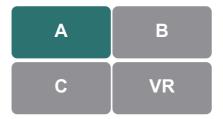


MPR Viewing

In actual display, different colors of the window box and the section line are used to identify the section A, B and C.

- The color of window A is blue, and the color of the lines (representing section A) displayed in the other two windows is blue as well.
- The color of window B is yellow, and the color of the lines (representing section B) displayed in the other two windows is yellow as well.
- The color of window C is orange, and the color of the lines (representing section C) displayed in the other two windows is orange as well.

Positions of the other two sectional planes are indicated in the selected plane. You can roll the track ball to change the position.

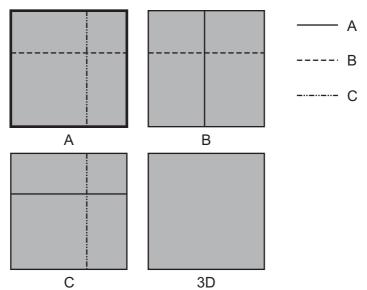

MPR Only

Tap the [MPR] subtab on the touch screen to display section images. And the adjustable image parameters are changed into MPR parameters automatically.

Only A, B and C section images are displayed, and 3D image is not displayed.


Asymmetric

Tap on the [Adv.] subtab to display section images along with 3D image.

View Direction

The Region of Interest (ROI) contains the section of the volume you want to render. You can adjust the view direction of the ROI.

The system supports the observation of 3D/4D image from 6 directions.

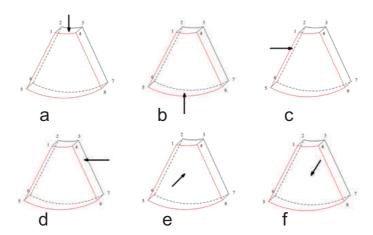

a Up/Down	b Down/Up	c Left/Right
d Right/Left	e Front/Back	f Back/Front

Select [Up/Down], [Left/Right] or [Front/Back] on the [Adv.] subtab to select the direction of the figure a, c and e.

Tap [Flip] on the [VR] subtab to observe by the converse direction of the current direction, which is equivalent of the 180° rotarion of current VOI.

Adjust VOI

Adjusting the VOI box size and position is to select the volume data needed to restructure the 3D image and improve the reconstruction effect.

- VOI On
 - 3D image (VR) image displays VOI information.
 - a. In image viewing status, set [VOI] to be "On".
 - b. Select a desired section plane by tapping [A], [B] or [C] or [VR].
 - c. Roll the trackball to adjust VOI position, size and curved VOI, and press <Set> to toggle among the adjusting status; or you can rotate <4D> knob on the control panel to adjust section image position.
- VOI Off
 - 3D image (VR) image displays ROI information.
 - set [VOI] to be "Off", then the ROI image is displayed on the screen, roll the trackball to observe section images.

Accept VOI

This function is usually used for section image observation and to determine the relative position of the section image to the VR.

- 1. Set [VOI] to be "Fixed".
- 2. Select a desired MPR image by taping [A], [B] or [C].
- 3. Roll the trackball to view the current active section image, and the other section images change correspondingly. Or you can rotate the 4D knob to adjust the relative position of section image.

7 - 10 Operator's Manual

In Accept VOI status, when the 3D image is active or the section image which is perpendicular to the view direction is active, center point of the 3D image displays, and you can adjust the position by rolling the trackball.

The adjustment of Rendering Parameters

In image viewing status, you can render the image by adjusting the relevant parameters.

Tap [VR] or [MPR] on the touch screen to select the VR parameter or MPR parameter.

- Tap the [VR] subtab, adjust parameters of 3D image (VR).
- Tap the [MPR] subtab, adjust parameters of sectional image.

You can adjust:

Parameter	Description
Threshold	 To set the threshold for 3D image rendering.3D image is rendered on the signal above thresholds by eliminating noise via the Threshold parameter. Lower threshold can eliminate lower range noises and echo, which will contribute to a clearer and smoother image. Available only in Surface rendering mode.
Opacity	 To adjust the transparency value for 3D image rendering. It implies the transparency of the light. The higher the value is, the tougher the surface becomes. The lower the number is, the more transparent the gray scale information will be. Available only in Surface rendering mode.
Smooth	 To set the smoothness of 3D image. 0 refers to no smooth effect. NOTE:
	Insufficient smoothness can result in a fuzzy image; however, too much smoothness will lead to image distortion.
Brightness	 To set the brightness of image. 0% represents the minimum brightness, while 100% represents the maximum.
	NOTE:
	The adjustment for 3D (VR) and MPR.
Contrast	 Set the contrast scale of the image (contrast). As long as the contrast becomes larger, the bright spot and dark spot on the image change as well.
	NOTE:
	The adjustment for 3D (VR) and MPR.
Tint	Enable/disable tint map. The color of image changes according the tint value.
Quick Rotation	Tap [0°], [90°], [180°], or [270°] to rotate the 3D image quickly.

Parameter	Description
3D iClear	• Function: Use the 3D self-adaptation filter to strengthen the space continuity of the tissue structure, and provide speckle noise suppression, and improve the image contrast effect, so as to optimize the volume image data.
	Select VR image. Adjust 3D iClear to optimize VR image.
	Select MPR image. Adjust 3D iClear to optimize MPR image.
Face+	Optimize the signal of the face area to reduce the noise of the AF area and improve the signal-noise ratio of the face area, make the face more fullness to easily obtain the image of fetal face.
VR Refine	Optimize the signal-noise ratio and the contrast of VR image.
MagiClean	Reduce the noise and keep the boundary of the image more clearly. Available only in Surface rendering mode.
Depth VR	Superimpose the tint map basic on the VR image to improve the stereoscopic sensation and the contrast of the image.
Hyaline	Function: Improve the transparency in iLive rendering mode to observe the tissue, such as cyst.
	• Adjust method: The merging ratio of two render modes between Hyaline and iLive is 100%.
	Effect: Adjust the merging ratio of two render modes between Hyaline and iLive
Thickness	Adjust the rendering thickness of the section.

Reset Curve

Parameter		Description
Reset	Ori	To reset the volume rotation, shifting and zooming of 3D image to original status.
	All	To reset the parameters, rendering rotation, VOI and image effect.
	Curve	To reset the curve to be the original beeline.

Render Mode

The rendering manners can be applied to both gray and inversion modes.

Function: to inverse the echo of the 3D image, so as to enhance observation for low-echo region, applicable for vessel, cyst and etc.

When the function is turned on, the rendering mode parameters change into the corresponding inverse parameters.

Surface	Set Surface as 3D image rendering mode. Applicable for surface imaging, such as fetus face/hand or foot.	
	NOTE: You may have to adjust the threshold to obtain a clear body boundary.	

7 - 12 Operator's Manual

Max	Set Max as 3D image rendering mode, displays the maximum echo intensity in the observation direction. This is helpful for viewing bony structures.
Min	Set Min as 3D image rendering mode, displays the minimum echo intensity in the observation direction. This is helpful for viewing vessels and hollow structures.
X Ray	Set X-ray as 3D image rendering mode. Displays the average value of all gray values in the ROI. This is used for imaging tissues with different structure inside or tissues with tumor.
iLive	Add the light rendering effect based on the general rendering effect. iLive cannot be selected as sub render mode. When it is set as main render mode, the sub render mode is disabled.

Rotate the Image

NOTE:

You can view the back of the VR by rotating it 180°. The back view image may not be as vivid as the front. (Here we call the initial view of the VR the "front"). It is recommended to re-capture rather than rotate the VR if a certain desired region is obscured in the VR.

Axial rotation

Axial rotation is to rotate the 3D image around the X, Y or Z axis.

Rotate the corresponding knobs to make the image rotate:

- To rotate along X-axis: rotate <M> button on the control panel clockwise, the image rotates right along the X-axis, and rotate the button anticlockwise, the image rotates left.
- To rotate along Y-axis: rotate <PW> button on the control panel clockwise, the image rotates right along the Y-axis, and rotate the button anticlockwise, the image rotates left.
- To rotate along Z-axis: rotate <C> button on the control panel clockwise, the image rotates right along the Z-axis, and rotate the button anticlockwise, the image rotates left.

Or, enter the touch screen mapping mode and hide the tool bar. Rotate the image by touching the image window and move slowly.

- To rotate along the X-axis: flip from top to bottom and the image rotates right along the X-axis. Swipe from bottom to top and the image rotates to the left.
- To rotate along the Y-axis: swipe from left to right and the image rotates right along the Y-axis. Swipe right to left and the image rotates to the left.

Auto Rotation

Perform the following procedure:

- a. In 3D viewing mode, tap the [Auto Rotation] subtab under [Tools] tab on the touch screen, system enters into auto rotation preparation state.
- b. Select [Left/Right] or [Up/Down] to set the auto rotation direction.
- c. Select the angle under rotation range to set the auto rotation range.
- d. Set Start position and End position:Start position: roll the trackball to view to a certain position, tap [Set Start].
- e. Set rotation mode: tap \rightarrow for single direction rotation; tap \rightleftharpoons for bidirectional rotation.

End position: roll the trackball to view to a certain position, tap [Set End].

- f. Select [Step] to set the auto rotation increment.
- g. Tap to start auto rotation. Select [Speed] to adjust the rotation speed.

Inversion

Function: vessel shape is correct with the capture target. The vessel wall is smooth and clear.

Surface Enhancement

This function is to make the edge structure of the image and surface details clearer, so as to enhance the overall contrast.

Operation: Select [Surf. ENH] to adjust the enhancement level.

The higher the level is, the clearer the edge structure of the image is.

When the level is higher than 0 and [Move Light] is highlighted, image close to the light source is clearer, and image away from the light source is darker.

Move the light

This function is to adjust the position of the light source as VR is considered. The image becomes clearer as keeping closer to the light.

Adjustment: roll the trackball and change the light position to make fine adjustments after tapping [Move Light].

Image Zooming

Adjust the zoom factor of 3D image, the section images will be zoomed in/out accordingly. Switch the current window to 3D window.

- Rotate <Zoom> to change the magnification factor.
- Zoom in or out by pinching or stretching in mapping mode.

Sync

This function is to switch the direction of the image to the direction that is perpendicular to the current active plane, so as to get a better observation.

Comments and Body Mark

Add comments and body marks on MPR and 3D image.

The operations are the same with these in B mode.

Image Editing

Image cutting is a more elaborate function than VOI adjusting to optimize the 3D by clipping (removing) the part blocked the region of interests.

NOTE:

- In image cutting status, image parameter cannot be edited. There displays a cutting cursor +, and the system enters "Accept VOI" status.
- The editing function is only available on 3D image.

Perform the following procedure:

- 1. Enter image cutting status by taping [Tools] tab page.
- 2. Select an edit/erase tool:
 - Polygon: Press <Set> to position the start point, roll the trackball to set a region and press
 Set> to trace the region. When the start point and the end point coincide, the region is

7 - 14 Operator's Manual

- selected or you can press <Set> twice to finish tracing. Move the cursor to the region you want to edit and press <Set> again to edit.
- Contour: Press <Set> to position the start point, roll the trackball to trace the region.
 When the start point and the end point coincide, the region is selected or you can press <Set> twice to finish tracing. Move the cursor to the region you want to edit and press <Set> again to edit.
- Rectangle: Press <Set> to fix the rectangle position, roll the trackball to change the size, and press <Set> again to finish rectangle drawing.
- Rubber: Press <Set> to position the start point and roll the trackball to select the region.
 Press <Set> when ends are required. You can repeat the step to erase all parts blocking the interesting region.

You can select [Eraser Diam.] to adjust the eraser diameter.

To undo one operational step, tap [Undo] on the touch screen and to undo all operational steps, tap [Undo All] and start a new editing operation.

Measurement

2D related measurement can be performed. For details, please refer to "Advanced Volume".

NOTE:

Capturing preparation does not support the measurement.

Image Saving

- Image saving:
 - In the 3D Review mode, press <Save> (with user-defined saving function) to save the
 current image and volume data to the patient information management system in the set
 format.
 - Save cine: in 3D viewing mode, press the user-defined save key to save CIN-format clip to the hard drive.
- Image review:

Open an image file to enter the image review mode. In this mode, you can perform the same operations as what you can in review mode.

7.4 Color 3D

Color 3D imaging provides more visualized flow information, especially in heart and kidney application, which helps in observing cardiovascular diseases.

7.4.1 Basic Procedures for Color 3D

- 1. Enter into color 3D image acquisition preparation status:
 - a. Obtain a feasible Power/Color image with the volume probe.
 - b. Press the user-defined <3D> key, or <4D> key to enter 3D/4D image acquisition preparation status.
- 2. Set the acquisition, displaying related parameters, select acquire mode.
- 3. Press < Update > to begin image acquisition.
- 4. After the acquisition is completed, the system enters into image view status; you can perform operations like image edit and storage.

5. Save image as necessary.

7.4.2 Operation Controls

Display

You can choose to display only color images or gray scale images, or to mix them.

Priority

To determine color information displayed on gray scale images.

Threshold

To eliminate color noise and motion artifacts.

Affects MPR as well as VR.

Opacity

To set the transparency value for VR rendering.

Smooth

To smooth the Color image and erase artifacts by time averaging.

Mix

To adjust mix percentage of gray scale information and color information. When display format is 2D&C, you can adjust this parameter.

Image Zooming

Same as in 3D/4D mode.

Comment & Body Mark

Operations are the same as those in the other modes.

MPR Measurement

2D related measurement can be performed on MPR. For details, please refer to "Advanced Volume".

NOTE:

You cannot perform measurement on acquisition preparation status.

7.5 4D

4D provides continuous, high volume acquisition of 3D images.

The probe performs the scan and renders the image automatically without the move of the probe.

Image acquisition operations of 4D are basically similar with that of Static 3D, the only difference is: in static 3D mode, only a single frame 3D image captured, while in 4D mode, continuous, high volume acquisition of 3D images are provided.

7.5.1 4D Procedures

Perform the following procedure:

1. Select the proper probe and exam mode; make sure there is sufficient gel on the probe for scanning.

7 - 16 Operator's Manual

- 2. Obtain a 2D image, and optimize the image if necessary.
- 3. Press the <4D> key to enter 4D image acquisition preparation status.
- 4. Adjust ROI size and position and the VOI. The operations are same with these in static 3D mode.

NOTE:

To define a ROI, please try to cut the useless data as to reduce the time for image storing, processing and reconstruction.

- 5. Select the render mode, and set the quality and angle parameter.
- 6. Press < Update > to enter the 4D real-time imaging status.
- 7. Press <Freeze> to freeze the image, you can perform image editing, rotation, comment and body mark adding and etc.
- 8. Exit 4D imaging.
 - Press < Update >. The system returns to 4D image preparation state.
 - Or press to exit 4D mode.

7.5.2 4D Acquisition Preparation

Set the parameters before the acquisition. The settings for 4D mode are same with static 3D's.

7.5.3 4D Image Review

The settings for 4D mode are same with static 3D's.

4D image Review on Frozen State

In 4D real-time display mode, press <Freeze> on the control panel to enter the frozen mode.

Tap [Auto Play] to switch between auto play cine or manual play cine on cine page. Rotate the knob under [Auto Play] to select the play speed. Move the track ball to select the frame, tap [Start Frame] and [End Frame] to set the start frame and end frame, tap [Start Frame] to jump to the first frame.

NOTE:

The operation of 4D image on frozen state is same with these in static 3D.

4D Image Saving

- In the 4D Review mode, press <Save> (with user-defined saving function) to save the current image to the patient information management system in the set format.
- Save cine: in 4D viewing mode, press the user-defined save key to save CIN-format clip to the hard drive.

3D/4D Fast Switching

Press the user-defined <3D> key to enter 3D acquisition. After completing the acquisition, the image is obtained.

Press the <4D> key to enter 4D review mode. The active image can be obtained.

7.6 Smart 3D

The operator moves the probe to change its position/angle when performing the scanning. After the scanning, the system carries out image reconstruction, and then displays a single frame of 3D image.

If the system is only set up with Smart 3D module, press the user-defined <3D> key to enter Smart 3D imaging mode.

NOTE:

- 4D probe does not support Smart 3D imaging.
- In Smart 3D image scanning, if the probe orientation mark is oriented to the operator's finger, perform the scan from right to left in linear scan, or rotate the probe from left to right in rocked scanning. Otherwise, the VR direction will be wrong.

7.6.1 Smart 3D Procedures

Perform the following procedure:

- 1. Select the proper probe and exam mode; make sure there is sufficient gel on the probe for scanning.
- 2. Obtain a 2D image, and optimize the image if necessary.
- 3. Press the user-defined <3D> key to enter Smart 3D image acquisition preparation status.
- 4. Adjust ROI size and position and the position of VOI.
- 5. Select the render mode. Set the scan method and the movement of the probe (angle and distance).
- 6. Press < Update > to start 3D imaging.
- 7. The system enters into 3D image review status when the acquisition is completed; or, you can finish the acquisition ahead by pressing <Freeze> or <Update>.

NOTE:

In image review status, you can perform the same operations as in Static 3D. For For details, see "7.3.3 Static 3D Image Viewing".

- 8. Exit Smart 3D
 - Press < Update > or < Freeze > to return to Smart 3D acquisition preparation status.
 - Or press to exit the mode.

7.6.2 Smart 3D Acquisition Preparation

Parameter	NOTE			
3D/4D Scenario Setting	Select 3D/4D scenario based on different scenario application.			
Method	Select the image acquisition method. The speed is related to scanning distance or angle.			
Distance	To set the distance the probe covered from one end to the other end during the linear sweep.			
Angle	To set the motion angle the probe covered during a fan sweep.			
Acquiring Time	To set the acquiring time of the Smart 3D acquisition.			

The smart 3D acquisition preparation is same with these in Static 3D and 4D.

7 - 18 Operator's Manual

7.7 STIC (Spatio-Temporal Image Correlation)

MARNING

Diagnoses made only by assessing this 3D/4D acquisition are not permitted. Every diagnostic finding has to be evaluated in 2D as well.

STIC function provides sectional images of high spatial resolution as well as good time resolution, which is mainly used in fetal heart observation and cardiac hemodynamic exams.

Acquired images are post processed to calculate a Volume Cine sequence representing one complete heart cycle.

In order to achieve a good result, try to adjust the size of the volume box and the sweep angle to be as small as possible. The longer the acquisition time, the better the spatial resolution will be.

The user must be sure that there is minimal movement of the participating persons (e.g., mother and fetus), and that the probe is held absolutely still throughout the acquisition period.

Movement will cause a failure of the acquisition. If the user (trained operator) clearly recognizes a disturbance during the acquisition period, the acquisition has to be cancelled.

ACAUTION

- One or more of the following artifacts in the data set indicate a disturbance during acquisition. In all of the following cases the data set has to be discarded and the acquisition has to be repeated.
 - Sudden discontinuities in the reference image B: These are due to motion of the mother, the fetus or fetal arrhythmia during acquisition.
 - Sudden discontinuities in the color display: Motion of the mother, the fetus or fetal arrhythmia affects the color flow in the same way it affects the gray image.
 - Fetal heart rate far too low or far too high: After acquisition the
 estimated fetal heart rate is displayed. If the value does not match the
 estimations based on other diagnostic methods at all, the acquisition
 failed and has to be repeated.
 - Asynchronous movement in different parts of the image: e.g., the left part of the image is contracting and the right part is expanding at the same time.
 - The color does not match the structure in the display format of grey mode: The color displays above or beneath the actual vessels.
 - Color "moves" through the image in a certain direction: This artifact is caused by a failure in detecting the heart rate due to low acquisition frame rate.
 - Use higher acquisition frame rate for better result.
- It is not allowed to perform the STIC fetal cardio acquisition if there is severe fetal arrhythmia.

NOTE:

The system also supports color STIC 3D flow image function.

Perform the following procedure:

1. Obtain a feasible 2D image (fetus heart).

To observe a small structure, zoom in the interested part (Usually Res Zooming is applied for good image quality).

- 2. Press the user-defined <3D> key, or <4D> key to enter 3D/4D acquisition preparation mode.
- 3. Tap [STIC] to enter STIC acquisition preparation mode.
- 4. Set the acquisition, displaying related parameters.
 - Select the parameter package.
 - Set the acquiring time and angle according to the target size and the motion conditions.
 For fetus of 20-30 weeks, the acquisition time range are: 10 12.5s, and the angle range are: 10-20°.

For gestation age of more than 20-30 weeks, the acquisition time should be about 15s, and the angle should be about 30° .

5. Adjust the size and position of the sample box to contain the interested region within the sample box.

However, the box should be small enough to contain only the heart, not the whole thorax.

In order to archive a good result, try to adjust the volume box and the sweep angle to be as small as possible. The longer the acquisition time, the better the spatial resolution will be.

- 6. Press < Update > to begin image acquisition.
 - Keep the probe still, the volume acquisition proceeds automatically and the acquired images are displayed.
 - To avoid external interference to the image, make sure that there is minimal movement of the mother.
 - In case of motion of the mother, the fetus or probe position change, cancel the current acquisition and begin for a new acquisition.

After the calculation, the estimated heart rate is shown on the screen.

- 7. Judge if the shown estimated heart rate is reasonable.
 - If the result is not reasonable, tap [REJECT HR] to perform the acquisition again.
 - Tap [ACCEPT HR] to accept the result and go to image review.
 - Tap [REJECT HR] to reject the HR but save the volume data.

Operations in review mode are the same as that of 4D cine review mode; please refer to the details in 4D chapter.

After STIC acquisition, press <Set> to switch between cine auto play mode and manual mode.

7.8 iLive

iLive brings you a better imaging experience by adding a light rendering effect to the traditional method. It supports the point lighting mode, parallel lighting mode as well as the torch lighting mode, allowing human tissue texture to be revealed more clearly.

7 - 20 Operator's Manual

NOTE:

iLive is available under Smart 3D, Static 3D and 4D modes.

To Activate iLive

Perform the following procedure:

- Enter 3D/4D image viewing status, or double-click the saved 3D/4D cine file in the iStation or Review screen.
- 2. Tap [iLive] under the [Adv.] page on the touch screen to turn the function on, and adjust the parameters.

Imaging using iLive

Perform the following procedure:

- 1. Select the imaging mode:
 - Use the ordinary probe and press the user-defined <3D> key to enter Smart 3D.
 - Or, use 4D probe and press the user-defined <3D> key, or <4D> key to enter 4D mode or Static 3D mode.
- 2. Select the render mode to be iLive by touching the touch screen, and set the related parameters (quality and angle, etc.).
- 3. Press < Update > to begin acquisition.
- 4. The system finishes acquisition and enters the image viewing screen.
 - In image review status, you can perform operations such as VOI setting, image editing, comment adding, body mark adding, etc.
- 5. Or press $\langle B \rangle$, the user-defined $\langle 3D \rangle$ key, or $\langle 4D \rangle$ key to exit the mode.

Operation Controls

Adjustable parameters for iLive are on the [Adv.] tab.

Shading

Adjusts the effect of shadowing and scattering. When the selected level is 0, the rendered image will be bright and sharp, and the shadow border will be clear while the area of the shadow will be relatively small. As the level increases, the rendered image will become warmer but the details remain the same. Also, the shadow border will be smoother while the shadow area will be large.

Light source adjustment

You can make fine adjustments by tapping [Move Light] and rolling the trackball to adjust.

Grad View

After this function is activated, VR details will be revealed and enhanced.

Other operation controls and adjusting methods are similar to those in 3D/4D mode.

Lighting Mode

- 1. Tap on the [iLive] item to enter the iLive settings interface.
- 2. Tap the desired lighting mode.

If necessary, adjust parameters for the selected lighting mode.

3. Tap [Return] to apply the selected lighting mode.

Operation Controls for Lighting Mode Settings

Parameter	Description			
VL Saturat.	Adjust the saturation for light 1/2/3.			
VL Hue	Adjust the color for light 1/2/3.			
VL Dist	Adjust the distance for light 1/2/3 when the light source is set to torch or point. The larger the distance, the more the illuminated part on the surrounding area of the image; vice versa.			
VL Angle	Adjust the angle for light 1/2/3 when the light source is set to torch. The larger the angle, the larger the scope of light beam, and the larger the illuminated area; vice versa.			
Copy to	Copy the lighting mode to customized lighting mode "User 1" or "User 2".			
Reset Classic/ IntPoint/ ExtPoint/ Parallel/ Torch/ 3-Light/ User 1/ User 2	Reset the lighting mode to the original status.			
Rotation	Roll the trackball to view sectional images as necessary. Rotate <m>, <pw>, <c> to perform axial rotation or rotate the <4D> knob to adjust the nearest VOI section (cut plane) position.</c></pw></m>			

7.9 3D Layout

The function compiles the 3 MPRs together according to their relative positions, to provide a much clearer interior anatomical structure.

NOTE:

This function is provided by the [Niche] option, and does not support Smart 3D image data.

Niche

Perform the following procedure:

- 1. Select the [Tools] > [3D Layout] tab on the touch screen, then tap [Niche].
- 2. Tap [A]/[B]/[C]/[Niche] to select the reference plane as Plane A, Plane B, Plane C or Niche.
- 3. Set the view direction for niche display mode using the touch screen: from the front of the reference image or from the back.
- 4. Roll the trackball to view sectional images as necessary. Rotate <M>, <PW>, <C> to perform axial rotation or rotate the <4D> knob to adjust the nearest VOI section (cut plane) position.

3Slice

Perform the following procedure:

- 1. Select [Tools] > [3D Layout] tab on the touch screen, then tap [3Slice].
- 2. Tap [A]/[B]/[C]/[3Slice] on the touch screen to select the reference plane.
- 3. Roll the trackball to view sectional images as necessary. Rotate <M>, <PW>, <C> to perform axial rotation or rotate the <4D> knob to adjust the nearest VOI section (cut plane) position.

7 - 22 Operator's Manual

7.10 3D Reference Point

The function enables operators to define one or more reference points on MPRs, which are then projected to VR image. It is helpful for operators to better understand the corresponding spatial relations of VR image and MPRs.

- 1. Select the [VR] > [3D Ref] tab on the touch screen.
- 2. Tap [Input] on the touch screen, and a green cross mark appears on the screen.
- 3. Move the mark to the desired point and press the <Set> key to set the reference point.

You can move the cursor onto the reference point and use the trackball and the <Set> key to move the reference point.

- 4. Tap [Display] to select the display mode.
 - [Point]: only the reference point is displayed.
 - [H Line]: The reference point and the horizontal line crossing the reference point are displayed.
 - [V Line]: The reference point and the vertical line crossing the reference point are displayed.
- 5. If necessary, tap [Delete] to delete the corresponding reference point.
- 6. After the four reference points are defined, you can Tap [Delete All] or [Hide All] to delete or hide all the reference points.
- 7. Tap [Return] to exit.

7.11 3D-Print Format

The system supports to export 3D facial and limb data to external storage devices. Users can view the 3D contour model of fetus on the external electronic devices at any time. Users can also send the 3D print file to the 3D printing vendor to print the entity model.

Perform the following procedure:

1. Obtains 3D or 4D single volume data. Select [3D Print].

The primary screen switches to the dual-window mode. The left window is VR and the right window is the grid model.

When you enter into 3D print for the first time, the system will automatically generate a grid model.

- 2. Select [Quality] to generate models with low, medium and high quality.
- 3. After changing the printing quality, select [Generate Mesh] to generate a grid model again.
- 4. After the grid model is generated, the system supports rotating, translating, and zooming VR and grid models simultaneously.
- 5. Select [File Format] to choose to export file format.

The following formats are supported:

- stl: STL Format
- obj: Stanford Polygon Format
- ply: Alias Wavefront Format
- off: Polygon File Format
- 3mf: 3D Manufacturing Format
- 6. Select [Save mesh to USB] and export the 3D print files.

NOTE:

- If you want to view the 3D print files on the mobile phone, please download and install "EMB3D" application program first.
- The Windows 10 computers supports to view 3D print files directly (except files in off format).

7.12 Smart Volume

ACAUTION

The Smart Volume result is provided for reference only, not for confirming diagnoses.

The system provides three fast volume calculation methods that can be used to calculate the volume of tissue structure or lesions. The methods are as follows.

- Smart-V ROI: The method uses computer technology to define and enclose a boundary of the
 target within the ROI area (the computer technology allows the ultrasound system to fit an
 ellipsoid that can be most approximate to the target) and then calculate this volume. It can be
 used to measure the volume of mass, gestational sac, bladder or gall bladder.
- Smart-V Trace: The method uses computer technology to enclose a boundary of the target traced by the operator and then calculate this volume. It can be used to measure the volume of endometria or cerebellum.
- Smart-V Vocal: The operator traces the boundary of the target on planes generated by rotation. Then the system fits a 3D contour based on the contours traced by the operator, and calculate this volume. It can be used to measure the volume of targets except for those in long and thin shape.

NOTE:

- To ensure the accuracy of the result, ensure that the VOI position and size setting has entirely enclosed the target and is approximate to the target before using the Smart Volume function.
- Smart Volume is not available for Smart 3D image.

7.12.1 Basic Procedure

Smart-V ROI

Perform the following procedure:

- 1. Acquire necessary 3D/4D data.
- 2. Tap [Smart-V] > [Smart V ROI] on the touch screen to enter Smart V ROI interface, and the system is in the "Adjust ROI" status ([Edit ROI] button is highlighted).
- 3. Set ROI position and size.
 - a. Select a desired MPR image by tapping [A], [B] or [C].
 - b. Roll the trackball to adjust ROI position and size, and press <Set> to switch between the adjusting status.
- 4. Tap [Calc], the system starts to calculate.
- 5. Auto calculation is finished:

7 - 24 Operator's Manual

- There are yellow solid curves enclosing target region on each MPR image (A, B, C) window.
- 3D image (VR) displays image of the target region in red;
- The calculation result is displayed on the lower left part of the screen.
- 6. Modify the contour of the calculated area and recalculate its volume, if necessary.
- 7. Calculate the volume of the shell.

Tap [Shell] and rotate the knob under [Thickness] to set the shell of the contour and its thickness. The calculation result is displayed on the lower left part of the screen.

NOTE:

To ensure the accuracy of the result, please make sure that the ROI position and size setting has entirely enclosed the target and is approximate to the target before using the Smart Volume function.

Smart V Trace

- 1. Acquire necessary 3D/4D data.
- 2. Tap [Smart-V] > [Smart V Trace] on the touch screen to enter Smart V Trace interface, and the system is in the "Trace On MPRs" status.
- 3. Rotate the knob under [Trace Mode] to select the desired trace mode.
- 4. Tap [Calc], and the system starts to calculate.
- 5. Auto calculation is finished:
 - There are yellow solid curves enclosing target region on each MPR image (A, B, C) window.
 - 3D image (VR) displays image of the target region in red;
 - The calculation result is displayed on the lower left part of the screen.
- 6. Modify the contour of the calculated area and recalculate its volume, if necessary.
- 7. Calculate the volume of the shell.

Tap [Shell] and rotate the knob under [Shell Thickness] to set the shell of the contour and its thickness. The calculation result is displayed on the lower left part of the screen.

NOTE:

To ensure the accuracy of the result, please make sure that the traced contour has entirely enclosed the target and is approximate to the target before using the Smart Volume function.

Smart-V Vocal

- 1. Acquire necessary 3D/4D data.
- 2. Tap [Smart-V] > [Smart V Vocal] on the touch screen to enter Smart V Vocal interface, and the system is in the "Reference Line" status.
- 3. Use [Slice Num] to set the number of slices.
- 4. Set the reference line on one of the three MPRs by using the trackball and the set keys.
- 5. Rotate the knob under [Trace Mode] to select the desired trace mode.
- 6. Trace the contour on slices. The trace should cross the two round points of the reference line.

 Tap [Next Slice]/[Previous Slice] to go to the next or previous slice.
- 7. After contours are traced on all the slices, tap [Calc], and the system starts to calculate.

- Auto calculation is finished:
 - There are yellow solid curves enclosing target region on each MPR image (A, B, C) window
 - 3D image (VR) displays image of the target region in red;
 - The calculation result is displayed on the lower left part of the screen.
- 9. Modify the contour of the calculated area and recalculate its volume, if necessary.
- 10. Calculate the volume of the shell.

Tap [Shell] and rotate the knob under [Shell Thickness] to set the shell of the contour and its thickness. The calculation result is displayed on the lower left part of the screen.

NOTE:

To ensure the accuracy of the result, please make sure that the traced contour has entirely enclosed the target and is approximate to the target before using the Smart Volume function.

7.12.2 Result Display

After calculation, the following result will be displayed on the lower left part of the screen.

Whereas, L, W and H represent 3 diameter lengths of the fitting ellipsoid.

V represents calculated volume value.

MG represents Mean gray value; VI represents Vascularization Index; FI represents Flow Index; VFI represents Vascularization Flow Index.

7.12.3 Operation Controls

Edit

After the calculation, you can modify the contour of the calculated area and recalculate its volume.

- For Smart-V ROI and Smart-V Trace:
 - Tap [Edit off] to enable the editing function.
 - Tap [Add] and then trace an enclosed area manually, and the area to be calculated will be enlarged to include the traced area.
 - Tap [Delete] and then trace an enclosed area manually in the already calculated area, and the area to be calculated will be narrowed down to exclude the traced area.
 - Rotate the knob under [ROI Range] to set ROI range. The operator can only trace the contour inside the ROI.
 - Tap [Undo] or [Redo] on touch screen to undo or redo previous editing. Tap [Undo All] to undo all editing steps.
 - Tap [ReCalc] to calculate the volume based on the new contour.
- For Smart-V Vocal:
 - Tap [Edit off] to enable the editing function. Then you can modify the contour on each slice.
 - Use [Win Format] to select the display format of slices.
 - Tap [Update Vol] to calculate the volume based on the new contour.

MPR Thickness

Rotate the knob under [Thickness] to adjust the thickness of MPRs. The bigger the value is, the more the thickness information appears.

7 - 26 Operator's Manual

Trace Mode

- Trace
 - a. Rotate the knob under [Trace Mode] to select [Trace].
 - b. Rotate the trackball to place the cursor and press right <Set> key to fix the starting point, move the cursor along the target to trace the outline, and press right <Set> twice to finish tracing. During tracing, press left <Set> to cancel a series of tracing, or you can roll the trackball backwards to delete latest tracing.

Press <set> key to display "Cancel" status on the track ball region, move the track ball to cancel the trace.

Spline

- a. Rotate the knob under [Trace Mode] to select [Spline].
- b. Rotate the trackball to place the cursor and press right <Set> key to fix the starting point, move the cursor along the area of interest and press right <Set> to anchor several reference points; or press left <Set> to cancel a series of lines.
- c. Press <Set> twice to set the end point of the spline.

Press <set> key to display "Cancel" status on the track ball region, move the track ball to cancel the spline.

Smart Trace

- a. Rotate the knob under [Trace Mode] to select [Smart Trace].
- b. Rotate the trackball to place the cursor and press right <Set> key to fix the starting point, move the cursor along the target to trace the outline, and press right <Set> key twice to finish tracing. During tracing, press left <Set> to cancel a series of tracing, or you can roll the trackball backwards to delete latest tracing.

Control Point

This mode can be used only after tracing is finished, and not support Smart-V ROI method.

- a. Rotate the knob under [Trace Mode] to select [Control Point].
- b. Rotate the trackball to place the cursor on the finished trace and press right <Set> key to select the point, move the cursor to the desired position, and press right <Set> key to fix the point. During tracing, press left <Set> to cancel the point moving.

Press <set> key to display "Cancel" status on the track ball region, move the track ball to cancel the trace.

Display 2D or Color 3D

Tap [Display] to select 2D display or 2D+Color 3D display.

Calculation

After tapping [Calc] or [ReCalc] to be on, the system starts calculation.

Reset Curve

Tap [Smart-V Reset Ori] to reset the volume rotation, shifting and zooming to original status.

7.13 iPage⁺

iPage⁺ is iPage+SCV function. iPage (Multi-Slice Imaging) is a "Visualization" mode for displaying sectional images. The data is presented as slices through the data set, which are parallel to each other. When SCV (Slice Contrast View) function is turned on, the system expands the parallel section images into a slice region with a specified thickness, and draws this region with 3D rendering effect to enhance the image.

NOTE:

iPage⁺ imaging is not available in Smart 3D mode.

7.13.1 Operating Procedures

iPage operation


- 1. Acquire necessary 3D/4D data.
 - Single-frame VR:
 - 4D mode: freeze the system, and then roll the trackball to select the image.
 - Static 3D: a frame of image is acquired after the acquisition is finished automatically.
 - Multi-frame 3D images: acquire multiple 3D images in 4D imaging mode.
- 2. Perform operations like rotation, VOI adjusting to the image to find the interested region.
- 3. Tap [iPage⁺] on touch screen.
- 4. Check A/B/C sectional planes, and select the reference image.
- 5. Confirm if the slices displayed are the target planes, if not, re-select the reference image again.
- 6. Observe the interested structure through multiple slices.
 - Select the proper image layout and space according to the size of the target structure.
 - To observe the details or the tiny part of the interested region, do image zooming please.
- 7. Rotate the 3D image to observe the slices of other orientations. Repeat step 6 if necessary.
 - If the target orientation and region cannot be observed even after image rotation, tap [Reset Ori] to reset the 3D image.
- 8. Do operations like comment to the interested region.
- 9. Save images as necessary.

iPage+SCV operation

Adjust the parameter [Thickness] when SCV imaging is needed.

7 - 28 Operator's Manual

7.13.2 Basic Screen & Operation

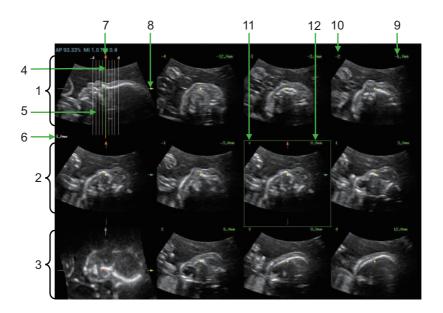

1	A plane (the current reference image)	2	B plane	3	C plane
4	Central slice line (Current active slice)	5	Slice line	6	Space between two slice lines
7	Y-axis	8	X-axis	9	Slice position (to the central slice)
10	Slice order number	11	Central slice mark	12	Active slice be highlighted in green

Layout

The system supports several types of displaying layout: 2*2, 3*3, 4*4 and 5*5, touch the corresponding icon on the touch screen to select, and the selection [Slices Number] changes accordingly.

Reference image

Tap [A], [B], or [C] to select the reference image.

Slice and slice line

- Central slice: the central slice line corresponding plane are the central slice, which is marked with a green "*" at the upper left corner of the image.
- Tap **|||** to place the slice lines vertically, and touch **=** to place the slice lines horizontally.
- Active slice: the green slice line corresponding plane is the active slice, which is marked with a green box. The default active slice is the central slice.
- Slice order number: indicating the order of the slices, the order of central slice is "0", the slices before the central slice are marked with negative integral numbers, and the slices after the central slice are marked with positive integral numbers.
- Slice position (to the central slice): displayed at the upper left corner of each image, indicating the position of each image (such as -6mm, -3mm, 3mm, 6mm).

• Coordinate axis: indicated on the A, B, C three reference images, match together with the central slice line, and will move accordingly with the central slice line.

Slice shifting

Roll the trackball to shift the crossing point of central axis up/down, left/right, and the slice lines will shift accordingly with the crossing point.

Rotate the knob under [Range Pos] on the touch screen to fine-tune slice lines horizontally.

Slice position

Rotate the knob under [Slice Position] to move the active slice line (green) either forward or backward within the range, then the corresponding slice will be highlighted in green.

Spacing

The value is displayed at the upper left side of the slice, unit: mm. Adjust it through touch screen selection [Spacing].

Slices number

Change slices number as necessary using the knob under [Slices Number] on the touch screen.


Thickness

TIP:

Thickness can not be larger than Spacing.


Rotate the knob under [Thickness] to adjust the SCV thickness. When the thickness value is larger than zero, the SCV function is on.

Figures below are the effect before and after the SCV function is turned on. You can see the body structure within the range of the thickness is added to the image after the SCV function is on.

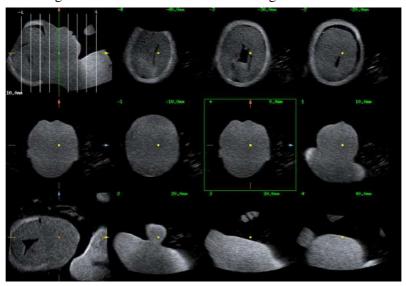

Before

7 - 30 Operator's Manual

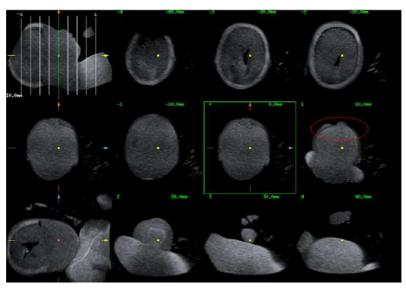

After

Image rotation

Rotate <M>, <PW>, <C> to perform axial rotation or rotate <4D> knob to adjust the nearest VOI section (cut plane) position.

Hide/show reference image

The system displays 3 standard sectional images (A plane, B plane, C plane) on the left side indicating the position of the slice lines; tap to hide the 3 reference images, and then slices are displayed on the whole image area.

Quick switch to single display

Select a certain slice, double click <Set> to see the slice full screen, and double click <Set> again to return to the original display format.

Reset Ori.

Tap [Reset Ori] to reset the orientation and zoom status of the image.

7.14 SCV⁺

SCV⁺ is SCV (Slice Contrast View) +CMPR (Curved MPR).

SCV imaging can reduce speckle noise and improve contrast resolution as well as enhance signal-noise ratio, which helps in discovering diffuse pathology in organs.

The curved MPR function allows straightening of a curved surface/anatomy. In clinical application, this is usually used for imaging fetal spine.

NOTE:

SCV⁺ imaging is not available in Smart 3D mode.

7.14.1 Basic Procedures

SCV operation


Perform the following procedure:

- 1. Acquire necessary 3D/4D data.
- 2. Tap [SCV⁺] tab on the touch screen to enter SCV imaging, and the system displays three section images in A, B and C window.
- 3. Rotate the knob under [Thickness] on the touch screen to adjust imaging thickness.
- 4. Save images as necessary.

SCV+CMPR operation

Perform the following procedure:

- 1. Enter SCV⁺.
- 2. Tap [A], [B] or [C] to select current window.
- 3. Tap [CMPR] to turn on the CMPR function. Window A on main screen displays the current window and three other windows are blank.
- 4. Select reference section, perform rotation and shifting operations to adjust image.
- 5. Tap [1], [2], or [3] button in [Active Quadrant].
- 6. Select trace options: tap [Line], [Trace] or [Spline].
- 7. Draw on the reference image. You can draw three curves at most and the CMPR imaging for the curve are displayed in the selected [1], [2] or [3] window respectively as shown in figure below.

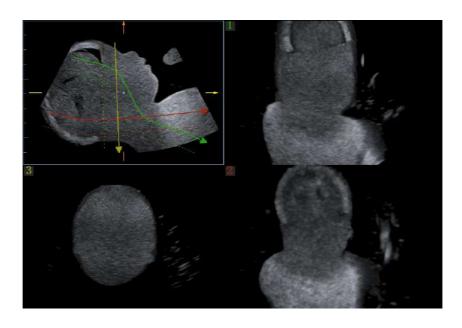

- 8. Perform rotation and shifting operation to reference line.
- 9. Save images as necessary.

7.14.2 Operation Controls

SCV

· Current Quadrant

7 - 32 Operator's Manual

Tap [A Plane], [B Plane] and [C Plane] to select current active section image.

• Reset

Click [Reset All] in Reset field to reset parameters, orientation and zooming status.

CMPR

Trace Options

Line

Perform the following procedure:

- a. Tap [Line] on the touch screen.
- b. Rotate the trackball to place the cursor and press right <Set> key to fix the starting point, rotate the trackball to extend the line and press right <Set> key again to finish drawing; or you can press left <Set> key to reset starting point.
- c. Rotate the knob under [Line Extension] on the touch screen to adjust the line length.
- d. After line is finished, press left <Set> key to change line position.
- e. Tap [Reset Curve] to cancel current drawing. Press <set> key to display "Cancel" status on the track ball region, move the track ball to cancel the line.

Trace

Perform the following procedure:

- a. Tap [Trace] on the touch screen.
- b. Rotate the trackball to place the cursor and press right <Set> to fix the starting point, move the cursor along the target to trace the outline, and press right <Set> again to finish tracing. During tracing, press left <Set> to cancel a series of tracing, or you can roll the trackball backwards to delete latest tracing.
- c. After tracing, press left <Set> key to change tracing outline position.
- d. Tap [Reset Curve] to cancel current drawing. Press <set> to display "Cancel" status on the track ball region, move the track ball to cancel the trace.

Spline

Perform the following procedure:

- a. Tap [Spline] on the touch screen.
- b. Rotate the trackball to place the cursor and press right <Set> to fix the starting point, move the cursor along the area of interest and press right <Set> to anchor several reference points; or press left <Set> to cancel a series of lines.
- c. Press <Set> twice to set the end point of the spline.
- d. After tracing, press left <Set> to change tracing outline position.
- e. Tap [Reset Curve] to cancel current spline. Press <set> to display "Cancel" status on the track ball region, move the track ball to cancel the spline.

SCV Fusion

Tap [SCV Fusion] and rotate the knob under [SCV Fusion] to set the render modes and mix ratio. Only when [Thickness] is on, [SCV Fusion] can be adjusted.

Other Operations

Single image zoom

Toggle <3D> to view single SCV image.

Zoom in

Same as these in 3D/4D mode.

Rotation

Rotate <M>, <PW>, <C> to perform X/Y/Z rotation or rotate <4D> knob to adjust the nearest VOI section (cut plane) position.

Comment and Body Mark

Same as these in other modes.

• Section image (MPR)/CMPR measurement.

2D related measurement can be performed on MPR/CMPR. For details, please refer to "Advanced Volume".

7.15 Smart Planes CNS

The doctor finds fetus's sagittal view by judgments on image features, and then makes an observation. The fetus's s sagittal view is hard to be detected or cannot be detected sometimes because of the fetus's move inside.

Taking the key anatomical tissues and organs' features from 3D data of fetus's intracranial, Smart Planes CNS is a mode-wise technology, which detects the middle of the fetus's sagittal view, transverse plane of thalami, transverse plane of lateral ventricles and transverse plane of cerebellum. It helps the doctors find the sagittal view rapidly and is easy for doctors accessing the anatomical structure on sagittal view. (such as corpus callosum, cerebellar vermis, etc.).

NOTE:

Smart Planes CNS does not support smart 3D mode.

7.15.1 Basic Procedures for Smart Planes CNS

Perform the following procedure:

- 1. Acquire necessary 3D data.
- 2. Tap [S-Planes CNS]. There are four views detected by the system, which includes TCP, TTP, MSP and TVP.



3. Adjust the parameters to obtain the image.

7 - 34 Operator's Manual

4. Tap [MSP]. There are A/B/C images appearing on the screen. The sagittal plane of the fetus appears on window C.

Rotate A, B or C plane respectively, or rotate <4D> to adjust each plane.



NOTE:

To ensure the correctness of the result, please make sure the cerebral midline on the anatomical plane is displayed clearly and ROI enclose the whole cranial region.

- 5. Tap [OK] to accept the edit to the MSP. The system recalculates the TCP, TTP and TVP according to MSP's position. The position and the angle for TCP, TTP and TVP appear on MSP plane.
- 6. Tap [TCP]/[TTP]/[TVP] to select the plane, and rotate <M>, <PW> or <C> knob to rotate the image plane along with X/Y/Z axis. The angle value appears on the right of the image.
- 7. Rotate the reference line on the MSP plane.
 - a. Press <Cursor> to show the cursor. Move the cursor over the red line of the MSP plane.
 Press left <Set> to select the red reference line after the cursor becomes hand-shaped.
 Then, the red reference line becomes dotted line.
 - b. Move the trackball left or downwards. The reference line rotates anticlockwise along the center. TCP image rotates clockwise along the Y-axis, and the value of Y-axis becomes bigger.
 - c. Move the trackball right or downwards. The reference line rotates clockwise along the center. TCP image rotates anticlockwise along the Y-axis, and the value of Y-axis becomes smaller.
 - d. The operations to green reference line and blue reference line are the same. TTP rotates along Y-axis when green reference line rotating. TVP rotates along Y-axis when blue reference line rotating.
- 8. Tap [Auto Measure] to show the caliper and the measurement number. The measurement results appear on the right of the screen.

NOTE:

• There are 6 measurements:

TCP supports the measurements on TCD, cerebral fossa pool.


TTP supports the measurements on BPD, OFD, HC.

TVP plane supports the measurement on LVW.

- The automatic measurement results appear only for these having the same characteristics on the planes.
- Once the automatic measurements are completed, the operations to axial rotation, reference line rotation, parameter adjustment, MSP editing, zooming/panning, dual/ quad-split display will remove the measurement results.
- Tap [Edit] to modify the measurements. The caliper becomes green.
 Or, press <Set> to activate the caliper (becoming green).
- b. Move the trackball and press <Update> to modify the length and the position of the caliper.
- c. Press <Set> to confirm the caliper. The caliper becomes white. [Edit] is off.
- 9. Tap [Auto Comment], the system adds the orientation and the organ comments to the desired area according to the active ultrasound image.

NOTE:

- The orientation comments describe the location of the plane, referring to A (anterior), P (posterior), L (Left), R (right), U (up), D (down).
- Organ comments describe the position of the organ, referring to CSP (cavum septum pellucidum), T (thalamus), CH (cerebellar hemisphere), CV (cerebellar vermis), CM (cisterna magna), LV (lateral ventricles).

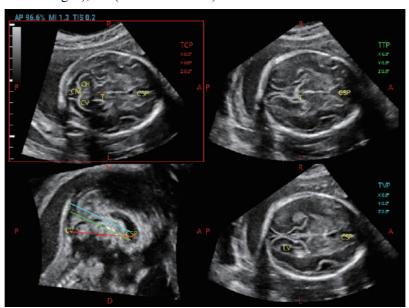

- a. Rotate [Font Size] knob to adjust the font size of the comment.
- b. see "14.2 Comments" for adding, moving or deleting the comments.
- c. Save the image.
- d. Tap [Auto Comment] again to clean them.
- 10. Tap [Save to Report] to save the measurements to the report.
- 11. Add the comment and body mark on the plane. Perform the measurement, and save the single frame/multi-frame image.

7.15.2 Smart ICV

Smart ICV is used to measure fetal cerebral volume.

7 - 36 Operator's Manual

NOTE:

To ensure the accuracy of the result, please make sure that the traced contour has entirely enclosed the target and is approximate to the target before using the Smart ICV function.

Perform the following procedure:

- 1. Acquire necessary 3D/4D data.
- 2. Tap [Smart ICV] to enter Smart ICV interface, and the system measures the volume of fetal cerebral automatically.
- 3. If necessary, calculate the volume of the shell.

Tap [Shell] and rotate the knob under [Shell Thickness] to set the shell of the contour and its thickness.

- 4. If necessary, modify the contour of the calculated area and recalculate its volume.
 - a. Tap [Edit] to enable the editing function.
 - b. Use [Trace Mode] to select the desired trace mode. Trace the contour on slices. The trace should not cross the reference line.
 - Tap [Win Format] to select the display format of slices.
 - Tap [Next Slice]/[Previous Slice] to go to the next or previous slice.
 - Tap [Undo], [Redo] or [Undo All] to undo, redo or cancel previous editing.
 - c. Tap [Update Vol] to calculate the volume based on the new contour. If necessary, tap [Undo], [Redo] or [Undo All] to undo, redo or cancel previous measurement.
- 5. Tap [Accept Result], and the measurement results are saved in the report.

7.15.3 Other Operations

Parameter adjusting

- Brightness
 - Adjusting the brightness of the images.
 - Rotate [Brightness] to adjust the parameter.
- Thickness
 - Rotate [Thickness] to adjust the parameter.
 - The bigger the value is, the more the thickness information appears.
- 3D iClear
 - Tap [3D iClear] to adjust the parameter.
 - The bigger the value of iClear is, the less the noise becomes.

Reset

All planes

Acquire 3D data. Tap [S-Planes CNS] to enter the automatic detection of the mode. Reset the following operations:

- Tap [All Planes] to reset the planes. The position and the angle to TCP, TTP, TVP, MSP and reference line return to the initial condition.
- Tap [All Planes] to reset the planes. The position to TCP, TTP, TVP, MSP and reference line returns to the last MSP condition. The angle to CP, TTP, TVP, MSP and reference line returns to 0°.

Current plane

Acquire 3D data. Tap [S-Planes CNS] to enter the automatic detection of the mode. Reset the following operations:

- Tap [Current Plane] to reset the plane. The position of the current plane returns to the initial condition. The angle of the current plane returns to 0°.
- Tap [Current Plane] to reset the current plane. The position and the angle to the current plane returns to the last MSP condition.

Other related Operations

- Hiding the reference
 - Tap [Hide Lines] to hide or show the reference line.
- Hiding the measurement
 - Tap [Hide Measure] to hide or show the measurement.
- Switching between the single and quad-split display
 Tap [Single]or [Quad] between the single and quad-split display.

7.16 Smart FLC (Smart Follicles Calculation)

ACAUTION

- Smart FLC result is provided for reference only, not for confirming a diagnosis.
- Smart FLC is not available in Smart 3D mode.

7.16.1 Basic Procedures

Perform the following procedure:


- 1. Acquire necessary 3D/4D data and freeze.
- 2. Tap [Smart FLC] tab to enter Smart FLC, and the system is in the "Edit ROI" status ([Edit ROI] button is highlighted).
- 3. Set the position and size of the ROI box.
- 4. Tap [Calc] on the touch screen.
- 5. Auto calculation is finished:
 - Section image (A, B, C) is enclosed with colored lines and the color corresponds to the follicle in VR window.
 - 3D image (VR);
 - Results on the right of the screen are displayed in a table.

V: Volume

d1, d2, d3: diameters of the follicle

MD: Follicle Diam

7 - 38 Operator's Manual

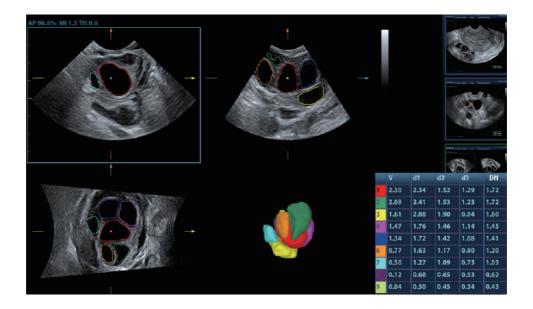

NOTE:

To ensure the correctness of the results, please select an image with clear follicle boundary when entering smart FLC.

7.16.2 Operation Controls

Edit ROI

Same as the operation in ROI editing in Smart-V.

Edit/ Undo

Select the button in the [Edit] area to turn on the editing function. It supports dividing, merging, adding and deleting of the follicle.

Tap [Undo], [Redo] or [Undo All] to undo, redo or cancel previous editing.

Zoom

Same as those in 3D/4D mode.

Annotation and Body Mark

Same as those in other modes.

Measurement

2D related measurement can be performed on MPR. For details, please refer to "Advanced Volume".

Save the image

The Smart FLC supports saving single-frame image only, does not support saving multi-frame cine file.

7.17 Smart Planes FH (Smart Planes on Fetal Heart)

By using this fetal heart automatic recognition feature, you can observe anatomical structures of fetal heart quickly.

TIP:

Smart Planes FH is an option and not available under STIC or Smart 3D mode.

7.17.1 Basic Procedures

Perform the following procedure:

- 1. Acquire necessary 3D/4D data of fetal heart and save the file. Open the saved cine file.
- 2. Tap [S-Planes FH] and [Navigate] to enter the screen. The system detects a rta and displays A/B/C plane automatically. A refers to four-chamber view, B refers to a ortic horizontal section and C refers to a ortic vertical section.
- 3. Change the A plane slightly for a better observation by rotating X/Y/Z-axis or shifting operation.
- 4. Select the crossing in the four-chamber view.

Refer to the four-chamber view on the left as an example. The red "+" symbol represents the crossing point. Press <Cursor> to acquire the cursor and move the cursor onto the crossing in A plane and press <Set>. The system then displays four-chamber view, left ventricular outflow tract view, right ventricular outflow tract view, LAV-DA view, 3VV-T view and stomach bubble view.

- 5. Adjust the view if necessary, you can perform shifting, axis rotation or quick adjustment.
- 6. Adjust image parameters such as brightness, contrast and slice.
- 7. Save the file.

7.17.2 Operation Controls

Axis rotation and shifting

Rotate $\langle M \rangle / \langle PW \rangle / \langle C \rangle$ knob to rotate the view along X/Y/Z-axis.

Rotate the <4D> key to scroll the view.

Quick adjustment

After corresponding views are displayed, select the view and tap [Quick Adjust] to adjust the view.

If four-chamber view, 3VV-T view or stomach bubble view is selected, tap [Quick Adjust] to scroll the view along Z-axis.

If current view is left ventricular outflow tract view (LVOT), tap [Quick Adjust] to move the view along Y-axis.

If current view is LAV-DA view or right ventricular outflow tract view (RVOT), tap [Quick Adjust] to move the view along X-axis.

Reset

[Reset All]: tap to undo all operations on A/B/C plane and go back to status in step 4.

[Reset Ori]: tap to undo all orientation adjustments on A/B/C plane and go back to status in step 4.

[Reset All/Current View]: tap to restore operations on all views or current view and go back to status in step 4.

Parameter adjusting

Parameters under Smart Plane FH are similar to those under Static 3D mode.

7 - 40 Operator's Manual

7.18 Smart Face

NOTE:

Smart Face is only used for obtaining fetal face features, not for confirming a diagnosis.

This feature allows the system to recognize fetal face and remove the shading obstacle data automatically, then display the face in a recommended viewing angle.

Perform the following procedure:

- 1. Acquire Static 3D image or frozen 4D single-frame image of fetal face.
- 2. Tap [Smart Face] to enter the function and the system adjust fetal face angle (fetal head facing up) automatically and remove the shading obstacle data.

7.18.1 Parameter adjusting

Parameters under Smart Face are similar to those under Static 3D mode.

Tap \equiv to enter Setup screen.

MixRender/SubTint

NOTE:

This function is available only under "Surface" mode.

The higher the merge value, the clearer the shading obstacles on the image.

Tap [MixRender] to select the levels between 0-3. Tap [SubTint] to select the obstacle display color. If the value is set 0, no obstacle data will be displayed.

Eraser

NOTE:

This function is available only under "Surface" mode.

Clearing effect in the center of the eraser sphere is strongest, and this effect weakens along the sphere center to the edge.

Tap [For-Rubber] to erase existing data on the screen.

Tap [Re-Rubber] to restore those removed shading data.

- Use [EraseSize] to select the size: Small, Middle, Large.
- Tap [Undo] to undo the operation in sequence and tap [Undo All] to undo all erase effects.

AutoDirect

This feature allow you to optimize to a best observing angle of view within one step.

The recommended angle: fetal head is facing up and the face is at the front with [Direction] to be up/down.

FaceContact

The higher the value, the more adjacent the VR image is to the fetal face, and the more obstacles cleared.

The lower the value, the further the VR image is to the fetal face, and the less obstacles cleared. Rotate [FaceContact] to adjust the parameter.

VR Orientation

Rotate the image quickly. Adjust in VR Orientation: 0°, 90°, 180°, 270°.

7.19 Volume CEUS

It is only to view the microbubbles injection of a certain plane once in the 2D ultrasound contrast imaging, however it is possible to view stereo microbubbles injection in the 3D ultrasound contrast imaging.

3D contrast injection imaging is used to characterize focal liver lesions. 3D ultrasound contrast imaging shows the arrangement of the tumor blood vessels from early phase enhancement to late phase enhancement and displays the changes of the enhancement type in multi-plane way. There is also another significant clinical application for 3D ultrasound contrast imaging. It is applied in the oviduct to judge its clearness.

Perform the following procedure:

- 1. Choose the volume probe and the exam mode. Scan the image. Optimize the image. Ensure the tumor, the lesion, ovary inside the image.
- 2. Tap [Contrast] to enter contrast imaging in 2D scan mode. Adjust the parameter to obtain the premium image.
- 3. Press the user-defined <3D> key, or <4D> key to enter the acquisition preparation of the volume CEUS. Set the ROI position/size and VOI. Select the rendering mode. Set the scan angle/quality, etc.
 - Inject the contrast agent in step 2 or step 3. Turn the timer on. Obverse the contrast image.
- 4. Press < Update > to start capturing volume CEUS image.
 - During the acquisition, a progress bar is displayed to indicate the acquisition progress.
 - The system saves the single frame image when the acquisition is completed and enters the review status of 3D image. Tap [Contrast]/[Tissue] on the touchscreen. The image on the main monitor is switched between the contrast image and the tissue image.
 - It is available to perform operations on VOI setting, parameter adjustment, image editing, image comment, image measure and image saving, etc. in image review. see "7.3.3 Static 3D Image Viewing" for details.
- 5. Repeat step 2-4 to obtain the contrast images if necessary.

7.20 Smart Scene 3D

NOTE:

- Smart Scene 3D is not available in Smart 3D mode.
- This feature is available only under GYN, OB2 or OB3 exam mode.

In 3D/4D acquisition preparation status, this feature can adjust ROI size and position automatically and activate appropriate render modes according to the recognized anatomical structure of some organs.

For OB2/OB3 exam mode, spine, brain, long bone and face can be recognized. For GYN exam mode, endometrium can be recognized.

Perform the following procedure:

- 1. Enter 3D/4D acquisition preparation status.
- 2. Tap [Smart Scene 3D] under 3D/4D Scenario Setting to enable the feature.

7 - 42 Operator's Manual

- If necessary, select the desired organ type manually.
- If necessary, tap [Refresh] to reset the ROI.
- If necessary, adjust the ROI size and position manually.
- 3. Press <Update> to begin 3D/4D acquisition.

7.21 Smart ERA

ACAUTION

Smart ERA result is provided for reference only, not for confirming a diagnosis.

This feature recognizes and segments endometrium automatically in 3D ultrasound image data. Based on the results of segmentation, endometrium is automatically rendered in coronal view with size-related measurements (such as thickness and volume).

7.21.1 Basic Procedures

Perform the following procedure:

- 1. Acquire necessary 3D/4D data and freeze the image.
- 2. Tap [Smart ERA]. The system measures the volume and thickness of endometrium automatically. The measurement results are displayed on the lower left corner.
- 3. If necessary, tap [Seg View] -> [Edit] to modify the auto-recognized contour. Then tap [Update Vol] to calculate the volume based on the new contour.
 - Or, tap [Render View] -> [Edit Thickness] to edit the endometrium thickness caliper.
- 4. Select the shell type by using the drop-down list beside [Shell] and rotate the knob under [Shell Thickness] to set the thickness of the shell.
- 5. Tap [Accept Result], and the measurement results are saved in the report.
- 6. Save the image if necessary.

NOTE:

To ensure the correctness of the results, please select an image with clear endometrium boundary when entering Smart ERA.

7.21.2 Operation Controls

Edit

- Tap [Add] and then trace an enclosed area manually, and the area to be calculated will be enlarged to include the traced area.
- Tap [Delete] and then trace an enclosed area manually in the already calculated area, and the area to be calculated will be narrowed down to exclude the traced area.
- Rotate the knob under [Trace Mode] to select the desired trace mode.
- Tap [Undo] or [Redo] on touch screen to undo or redo previous editing. Tap [Undo All] to undo all editing steps.
- Tap [Win Format] to select the display format of slices.
- Tap [Hide] to hide the traced contours.
- Tap [Next Page]/[Previous Page] to go to the next or previous page of slices.

Trace Mode

- Trace
 - a. Rotate the knob under [Trace Mode] to select [Trace].
 - b. Rotate the trackball to place the cursor and press right <Set> key to fix the starting point, move the cursor along the target to trace the outline, and press right <Set> twice to finish tracing. During tracing, press left <Set> to cancel a series of tracing, or you can roll the trackball backwards to delete latest tracing.

Spline

- a. Rotate the knob under [Trace Mode] to select [Spline].
- b. Rotate the trackball to place the cursor and press right <Set> key to fix the starting point, move the cursor along the area of interest and press right <Set> to anchor several reference points; or press left <Set> to cancel a series of lines.
- c. Press <Set> twice to set the end point of the spline.

Smart Trace

- a. Rotate the knob under [Trace Mode] to select [Smart Trace].
- b. Rotate the trackball to place the cursor and press right <Set> key to fix the starting point, move the cursor along the target to trace the outline, and press right <Set> key twice to finish tracing. During tracing, press left <Set> to cancel a series of tracing, or you can roll the trackball backwards to delete latest tracing.

Thickness Editing

Tap [Edit Thickness] to activate thickness caliper, roll the trackball to the desired position, and press the <Set> key to finish the measurement. During the measurement, press <Update> to switch the activated endpoint.

Thickness

On the Render view mode, rotate the knob under [Thickness] to adjust the thickness of MPRs. The bigger the value is, the more the thickness information appears.

On the Segment view mode, rotate the knob under [Thickness] to adjust the thickness of CMPR. The bigger the value is, the more the thickness information appears.

Current Active Window

On the Render view mode, tap [Ref. Img], [CMPR] or [3D] to activate the corresponding window. On the Segment view mode, Tap [A], [B], [C] or [Volume] to activate the corresponding window.

Render View /Segment View

Tap [Render View] to enter render view mode. The reference image of CMPR is displayed on the upper left window, the 3D image is displayed on the lower left window, and the CMPR image is displayed on the right window.

Tap [Seg View] to enter segment view mode. Sectional images A, B and C and the 3D image are displayed on the upper left window, upper right window, lower left window and lower right window respectively.

Direction Inversion

On the render view mode, tap [Direction], and the 3D image and CMPR image turn upside down. The direction of the reference line on the reference image is reversed.

7 - 44 Operator's Manual

Sync

On the render view mode, tap [Sync to CMPR], and the system enters SCV+ imaging mode.

Scrolling the CMPR Image

Rotate the <4D> knob to scroll the CMPR image.

Display 2D or Color 3D

On Color 3D mode, tap [Display] to select 2D display or 2D+Color 3D display.

Undo Last

The reference line on the reference image consists of line segments. On the render view mode, tap [Undo Last] to delete last line segment.

Reset Curve

On the render view mode, tap [Reset Curve] to delete the reference line from the reference image.

Reset Orientation

Tap [Reset Ori] to reset the volume rotation, shifting and zooming to original status.

Zoom

Same as 3D/4D image zooming.

Comments and Body Marks

Operations are the same as those in the other modes.

MPR measurement

2D related measurement can be performed on MPRs and CMPR. For details, please refer to [Advanced Volume].

Save the image

Smart ERA supports saving single-frame image.

7.21.3 Result Display

After calculation, the following result will be displayed on the lower left part of the screen.

On render view mode, V represents calculated volume value, and Endo represents the thickness of endometrium.

On segment view mode, L, W and H represent projected lengths of the three axes of the endometrium; V represents calculated volume value; MG represents Mean grey value; VI represents Vascularization Index; FI represents Flow Index; VFI represents Vascularization Flow Index.

This page intentionally left blank.

8 Elastography

ACAUTION

It is provided for reference, not for confirming a diagnosis.

8.1 Strain Elastography

It is produced based on the slight manual-pressure or human respiration in 2D real-time mode. The tissue hardness of the mass can be determined by the image color and brightness. Besides, the relative tissue hardness is displayed in quantitative manners.

8.1.1 Basic Procedure for Strain Elastography

Perform the following procedure:

- 1. Perform 2D scan to locate the region.
- 2. Tap [Elasto] > [StrainE] on the touch screen or press the user-defined key for <StrainE> to enter the elastography mode.

The system displays two dual B+E windows in real time. The left one is 2D image, and the right one is elasto image.

3. Adjust ROI according to the lesion size.

Press <Set> to switch between the solid line and the dotted line status.

- When the ROI box is solid line, use the trackball to change its position.
- When the ROI box is dotted line, use the trackball to change the size.
- 4. Press the probe according to the experiences and actual situation.

The screen displays the pressure curve in real-time:



Where, the X-axis represents time and Y-axis represents pressure.

- 5. Adjust the image parameters to obtain optimized image and necessary information.
- 6. Press or tap [StrainE] to exit, and then return to B mode.

8.1.2 Image Parameters

Smooth

Tap [Smooth] on the touch screen to adjust the parameters. The bigger the value is, the higher the smooth becomes.

Opacity

Adjust the opacity feature of the Elasto image.

Rotate the knob under [Opacity] on the touch screen to complete the adjustment. The bigger the value the stronger the effect.

Invert

Invert the E color bar and therefore invert the colors of benign and malignant tissue.

Tap [Invert] on the touch screen.

Display Format

Adjust the display format of ultrasound image and the Elasto image.

Tap [H 1:1], [V 1:1], [Full] on the touch screen to adjust.

The system provides 3 types of display format:

- H 1:1: Right and left display (the real-time ultrasound image appears on the left, and the elasto image appears on the right);
- "V 1:1": Up down display (the elasto image appears above, and the real-time ultrasound image appears below).
- "Full": The elasto image only displayed.

Map

Select different maps for observation.

Rotate the knob under [Map] on the touch screen or adjust through the mapping-menu item to select the map.

Strain mode

Affect the display effect of adjusting dynamic range.

Tap [Strain Mode] on the touch screen to adjust the parameters.

Strain mode is set to 0, adjust dynamic range, the image difference changes obviously.

Dynamic Range (Dyn Ra.)

Adjust contrast resolution of an image.

The real-time dynamic range value is displayed on the image parameter area in the upper left corner of the screen.

Rotate the knob under [Dyn Ra.] on the touch to adjust the parameters.

The more the dynamic range, the more specified the information, and the lower the contrast with more noise.

E Sensitivity

Increase the image palpability.

Rotate the knob under [E Sensitivity] on the touch screen to adjust the value.

The higher the sensitivity, the higher the image palpability.

Strain Scale

Adjust the bar height of the pressure hint curve to keep the average height of the hint bar on proper position.

Rotate the knob under [Strain Scale] on the touch to adjust.

8 - 2 Operator's Manual

Map Position

Adjust the up/down position of the map.

Tap [Map Position] on the touch screen to adjust the parameter.

When the E Average function is enabled or disabled, the elasto curve is displayed based on different statistical amounts.

8.1.3 Mass Measurement

Press <Measure> to enter measurement status.

You can measure shell thick, strain ratio, strain-hist, etc.

For details, see "Advanced Volume".

8.1.4 Cine Review

Press <Freeze> or open an elastography imaging cine file to enter cine review status.


8.2 STE Imaging (Sound Touch Elastography)

Keep the probe still to produce the elastography image in real-time STE mode. The tissue hardness of the mass can be determined by the image color and brightness. Besides, the relative tissue hardness is displayed in quantitative manners. STE imaging provides you real elasto modulus for quantification analysis.

8.2.1 Basic Procedures for STE Imaging

Perform the following procedure:

- 1. Select a proper probe. Perform 2D scan to locate the region.
- 2. Tap [Elasto] > [STE] on the touch screen. Or press the user-defined <STE> key to enter the STE mode.

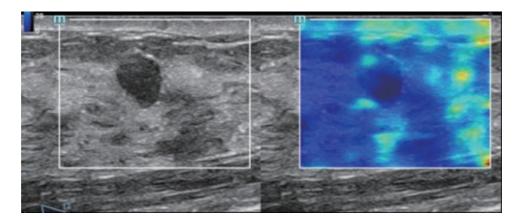

- 3. Adjust the ROI based on the lesion size, and press <Set> to adjust the ROI size and the position. To compare the hardness between the lesion and the normal tissue, the ROI should include the lesion and the normal tissue.
- 4. Keep the probe still to imaging, and adjust the parameter to obtain premium image.
- 5. Freeze the image, and replay the image if necessary.
- 6. Perform the measurement or add comment/body mark to the image if necessary.
- 7. Save the single-frame and multi-frame image.

- 8. Acquire high-quality image if necessary.
- 9. Press on the control panel or tap [STE] on the touch screen to exit the shear wave elastography mode, and return to B mode.

8.2.2 Image Parameters

E Quality

Used to select the transmitting frequency of the current probe, the real-time value of which is displayed in the image parameter area in the upper left side of the screen.

Rotate the knob under [E Quality] on the touch screen to select the different THI frequency value.

Please select the frequency according to the detection depth and current tissue features.

Elas Metric

Used to adjust the elastography metric.

Rotate the knob under [Elas. Metric] on the touch screen to adjust the value on the touch screen.

The metric includes Young's modulus E (unit: kPa), shear modulus G (unit: kPa), and shear wave velocity Cs (unit: m/s).

The current elastic modulus or the shear wave velocity (including the unit) appears on the top of the color bar.

Scale

Used to change the maximum scale to make the map related to the color at the top of the bar. Optimize the elasto modulus, or mirror the elasto wave velocity to the map.

Rotate the knob under [Scale] on the touch screen. The value on the top of the Map changes as the Scale changes.

Parts which exceed maximum elasto modulus or shear wave velocity will be mapped onto the color on top of the color bar at top-left part of the image. Thus if the color in the ROI is mainly the color on top of the color bar, you need to increase the metric range.

Opacity

Used to adjust the opacity feature of the Elasto image.

Tap [Opacity] on the touch screen. The adjusting range: 0 to 5 in increment of 1.

Map

Used to adjust the color map to achieve the switch between the gray map and the color map.

Tap [Map] on the touch screen to select the map.

ROI Adjustment

This feature is used to adjust the ROI position and scale of the lesion detected in STQ imaging.

Rotate the knob under [Fixed ROI] on the touch screen to adjust the fixed size of the ROI, or press the <Set> key and roll the trackball to adjust the ROI position and scale. The ROI includes lesions and surrounding normal tissues.

The "+" sign indicates the ROI center, and the Depth value of the ROI center is displayed at the bottom right corner of the screen.

Display Format

Used to adjust the display format of ultrasound image and the Elasto image, and return to the previous state.

Tap each soft key on the touch screen to complete the adjustment.

8 - 4 Operator's Manual

More accurate result is obtained based on the actual situation.

HQElasto

Turn on high-quality scanning mode to optimize penetration.

Tap [HQElasto] to enable the function and the button will be highlighted.

When the feature is activated, the system turns into single-frame scanning mode. Pressing <Update> acquires one frame image of B and Elasto.

RLB Map

Used to help the user judge the region where it is suitable for elasto measurements based on the distinctive colors in elasto image in quality map.

The RLB Index shows the signal reliability of the STE inside the ROI, and it helps the user judge the effectiveness of the current elasto measurement.

Tap [RLB Map] to select the display mode of the RLB map, B-mode image and elasto image.

- The higher the RLB Index is, the more reliability the signal becomes; vice versa.
- There are three colors showing the RLB Index: Red (low reliability), Yellow (medium reliability) and White (high reliability).
- The color in High area is suitable for the imaging of shear wave elastography.
- The color in Low area is not suitable for the imaging of shear wave elastography (liquid, gas, bone, etc). It can be used as a tool to detect the tissue or the lesion.

RLB View

This feature supports the less qualified region or the region that fails to receive shear waves of the gas or liquid to be displayed in hollow.

Tap [RLB View] on the touch screen to enable the function and the button will be highlighted.

After the RLB View function is enabled, the less qualified region is displayed in hollow. The hollow region can be seen in B images. The hollow region corresponds to the purple region in the reliability image.

M-STB Index/Sensi.

The STE imaging can easily be affected by respiration, pulse of the main artery, or transducer movement, which may cause uncertainty and unreliability. The M-STB Index helps users judge whether the current elasto image is captured in stable state. Based on the judgment, capturing method, capturing part, and patient cooperation can be adjusted accordingly.

Tap [M-STB Index] on the touch screen to enable the function and the button will be highlighted. Then the M-STB Index is displayed at the upper side of the image.

- Grading definition of the M-STB Index: 1 star indicates that the motion interference is extremely strong, and it is not recommended to use the elasto image; 2 stars indicates that the motion interference is relatively strong, and it is not recommended to use the elasto image; 3 stars indicates that the motion interference is general, and it is not recommended to use the elasto image; 4 stars indicates that the motion interference is not strong, and the image can be used; 5 stars indicates that the motion interference is few or slight, and it is recommended to use the elasto image.
- Users can determine the interference degree of the currently-captured elasto image according to the M-STB Index.

Tap [M-STB Sensi.] on the touch screen to set the grading threshold of the M-STB Index.

The stronger the sensibility of the motion stability is, the higher the judgment accuracy of the motion interference becomes.

Smooth

This feature is used to reject the noise and smooth the image.

Tap [Smooth] on the touch screen to adjust the parameter.

The bigger the level is, the higher the smooth effect achieves.

Persistence

This feature is used to superimpose and average adjacent elasto images, so as to optimize the image.

Tap [Persistence] on the touch screen to adjust the parameter.

The bigger the value is, the higher the frame optimization effect achieves.

The persistence function can remove image noise and optimize image effect to gain a more detailed image.

FS Mode

This feature is used to improve the frame rate. Tap [FS Mode] on the touch screen to enable the function and the button will be highlighted.

Invert

Invert the map to satisfy the different doctors to define the benign lesion or malignant lesion.

Tap [Invert] to enable the function (the soft key is highlighted).

iLayering

To increase the layer display in elasto images. Tap [iLayering] to enable the function.

Filter

To filter the noise of the elasto image.

Tap [Filter]. The higher the level is, the smaller the noise of the elasto image becomes, and the clearer the edge of the field target appears.

The system restarts scanning B image and E image after the filtering is completed.

Map Position

This feature is used to adjust the up/down position of the map.

Tap [Map Position] on the touch screen to adjust the parameter.

Select/Bad

It is used to remove the desired frame from stress curve. The removed frame will not be calculated in STE indices.

Rotate the knob under [Select/Bad] on the touch screen to select the desired frame, and press the knob to set the desired frame to "On".

8.2.3 Measuring

Press <Caliper> to enter general measurements. You can perform the measurements of Elas., Elas. Ratio, Directional Ratio, Elas. Hist and etc.

Press <Measure> to enter application measurement. You can perform measurements on Isthmus and Mass, etc.

For details, see "Advanced Volume".

8 - 6 Operator's Manual

8.2.4 Cine Review

Press <Freeze> to freeze the image and enter cine review state.

Or, click the cine to enter the cine review state.

8.3 STQ Imaging (Sound Touch Quantification)

8.3.1 Basic Procedures for the STQ Imaging

Perform the following procedure:

- 1. Select a proper probe. Perform 2D scan to locate the lesion.
- 2. Tap [Elasto] > [STQ] on the touch screen. Or press the user-defined <STQ> key to enter the STQ mode.



- 3. Adjust the ROI based on the lesion size and the position.
- 4. Press <Update> to generate the acquisition. Place the probe still with stable force (not pressing, sweeping or moving the probe) to acquire the image. Adjust the B image parameters to obtain a premium image.

The stress curve shows at the bottom of the screen after entering the real-time acquisition.

The following indices display besides end of the curve in real-time:

- Elasto modulus inside the ROI of the current frame;
- The mean value, maximum value, minimum value, SD value of shear velocity;
- Depth value of the active elasto modulus.
- 5. Freeze the image, and replay the image if necessary.
- 6. Save the single-frame and multi-frame image.
- 7. Reacquire the image if necessary.

Operator's Manual 8 - 7

8. Press on the control panel or tap [STQ] on the touch screen to exit the elastography imaging mode, and return to B mode.

8.3.2 Image Parameters

ROI Adjustment

Used to adjust the ROI position and scale in STQ imaging.

Rotate the knob under [Fixed ROI] on the touch screen to adjust the ROI fixed size.

The cross "+" shows the center of the ROI, and the depth appears at the right bottom of the screen.

Elas. Metric

Display the changes of elasto metric's average value inside the ROI by elasto curve. It is convenient to the doctor to choose the stable measurement result.

The square height of the elasto curve (Y-axis represents elasto metric; X-axis represents the time) represents the average value of the elasto metric for current frame.

Rotate [Elas. Metric] knob to adjust the value of the elasto metric.

The metric includes Young's modulus E (unit: kPa), and shear modulus G (unit: kPa).

E Avg

Used to optimize the measurement result via equalizing the elasto metric of the current frames and the previous frames. Decrease the image noise.

Rotate [E Avg] knob to adjust the value.

Off represents the E Avg is disabled. The larger the scale is, the more the frames of the elasto metric are equalized.

Decrease the image noise.

E Bar

This feature supports the elasto curve to be displayed based on different statistical amounts.

M-STB Index/Sensibility

The STE imaging can easily be affected by respiration, pulse of the main artery, or transducer movement, which may cause uncertainty and unreliability. The M-STB Index helps users judge whether the current elasto image is captured in stable state. Based on the judgment, capturing method, capturing part, and patient cooperation can be adjusted accordingly.

Tap [M-STB Index] on the touch screen to enable the function and the button will be highlighted. Then the M-STB Index is displayed at the upper side of the image.

- Grading definition of the M-STB Index: 1 star indicates that the motion interference is extremely strong, and it is not recommended to use the elasto image; 2 stars indicates that the motion interference is relatively strong, and it is not recommended to use the elasto image; 3 stars indicates that the motion interference is general, and it is not recommended to use the elasto image; 4 stars indicates that the motion interference is not strong, and the image can be used; 5 stars indicates that the motion interference is few or slight, and it is recommended to use the elasto image.
- Users can determine the interference degree of the currently-captured elasto image according to the M-STB Index.

Tap [M-STB Sensi.] on the touch screen to set the grading threshold of the M-STB Index.

The stronger the sensibility of the motion stability is, the higher the judgment accuracy of the motion interference becomes.

8 - 8 Operator's Manual

Scale

Used to optimize the display effect of the elasto average metric inside ROI via changing the Y-axis size.

Rotate the knob under [Scale] on the touch screen to adjust the value.

If elasto metric average value inside ROI of a certain frame image exceeds the maximum scale on the elasto curve, elasto metric will display in the maximum scale value.

HQElasto

Enable the high-quality scan mode and optimize the penetrability.

Tap [HQElasto] to enable the function. The soft key becomes highlighted.

Press <Update> to acquire the high-quality image. It produces single-frame B image and ROI elasto metric data.

The measurement, comment and body mark is not available in HQElasto status.

Filter

This feature is used to filter the noise of the elasto image.

Tap [Filter] on the touch screen.

The higher the level is, the smaller the noise of the elasto image becomes, and the clearer the edge of the field target appears.

The system restarts scanning B image and E image after the filtering parameter is adjusted.

Smooth

This feature is used to reject the noise and smooth the image.

Tap [Smooth] on the touch screen to adjust the parameter.

The bigger the level is, the higher the smooth effect achieves.

Persistence

This feature is used to superimpose and average adjacent elasto images, so as to optimize the image.

Tap [Persistence] on the touch screen to adjust the parameter.

The bigger the value is, the higher the frame optimization effect achieves.

The persistence function can remove image noise and optimize image effect to gain a more detailed image.

Map Position

This feature is used to adjust the up/down position of the map.

Tap [Map Position] on the touch screen to adjust the parameter.

When the E Average function is enabled or disabled, the elasto curve is displayed based on different statistical amounts.

Lesion

It is used to distinguish elastography data of the different lesion region.

Rotate the knob under [Lesion] on the touch screen to adjust.

Select/Bad

It is used to remove the desired frame from stress curve. The removed frame will not be calculated in STQ indices.

Operator's Manual 8 - 9

Rotate the knob under [Select/Bad] on the touch screen to select the desired frame, and press the knob to set the desired frame to "On".

8.4 Fatty Liver Lab


Fatty Liver Lab is a tool kit specifically designed for fatty liver applications, including USAT (UltraSound ATtenuation analysis) and HRI⁺ (HepatoRenal Index Plus).

NOTE:

- Input the fatty liver related parameters in the Abdomen tab of the patient information page. For details, see "5.1.1 New Patient Information".
- Keep the patient breathing smoothly.

8.4.1 **USAT**

It is used to measure the acoustic attenuation coefficient value of the target liver region and display its 2D spatial distribution, according to the ultrasonic echo signal.

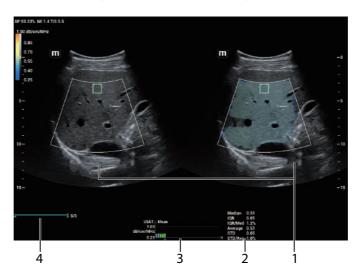

1. The left window is the B mode image, and the right window is the USAT image.

8 - 10 Operator's Manual

2. Measurement result window

• Single frame

Mean: indicates the mean value.

Max: indicates the maximum value.

Min: indicates the minimum value.

SD: indicates the standard deviation value.

• Multiple frames

Median: indicates the middle value.

IQR (Interquartile Range): indicates the 1st quartile subtracted from the 3rd quartile.

Average: indicates the average value.

STD: indicates the standard deviation value.

3. Histogram area

- The horizontal axis represents time, while the vertical axis represents USAT value.
- The rectangle histogram above the horizontal axis represents the USAT value of every frame. The metric unit can be adjusted through "Att.Metric".
- The triangle icon under the horizontal axis indicates the histogram of the current frame.
- The dotted line that is parallel to and above the horizontal axis represents the maximum USAT value. The maximum value can be adjusted through "Scale".
- When the measured USAT value exceeds the maximum USAT value, the maximum USAT value is displayed. The value type can be adjusted through "E bar".
- 4. Progress bar to play the frames.

Perform the following procedure:

- 1. Select an appropriate probe and exam mode.
- 2. In B mode, move the probe and adjust the parameters to acquire the image of the target area.
- 3. Tap [Fatty Liver Lab] > [USAT] to enter the USAT mode.

The dual-split window with a square ROI is displayed.

- 4. Adjust the ROI position and size to the target area, as well as the scan time if necessary.
- 5. Press < Update > to start acquisition.
- 6. After the acquisition is completed, the system calculates and displays the measurement curve and statistic results. The image is in freezing mode.
- 7. Rotate the knob under [Frame Average] on the touch screen to select the number of frames. The system calculates and updates the measurement curve and statistics results in real time.
 - The histograms of the selected frames for statistics are displayed in green, while the histograms of the unselected frames are displayed in blue.
- 8. In the freezing mode, you can press the <Set> key to activate the ROI and adjust the ROI position and size again. The system calculates and updates the measurement curve and statistics results synchronously. Press the <Set> key again to confirm the results.
- 9. Rotate the knob under [Select/Bad] on the touch screen to select the current frame, or delete an invalid frame from calculation.

The histogram of the deleted frame is displayed in gray.


- 10. Perform measurement, or add annotations or body marks if necessary.
- 11. Save the single frame image or cine.

Operator's Manual 8 - 11

12. Press on the control panel to return to B mode.

8.4.2 HRI⁺

It is used to manually calculate the brightness ratio of the hepatic parenchyma and renal cortex based on the radio frequency data. After the ROI of the hepatic parenchyma and renal cortex areas are located and confirmed by the doctor, the HRI⁺ calculates and displays the echo signal intensity ratio of the selected areas, and then determines the brightness ratio.

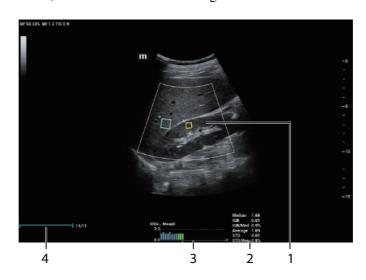

1.	One is renal ROI, with the letter R in the upper left corner, and the other one is hepatic ROI, with the letter H in the upper left corner.	
2.	Measurement result window:	
	Single frame	
	MeanR: indicates ratio of the mean hepatic brightness value to mean renal brightness value.	
	H-Mean: indicates the mean hepatic brightness value.	
	R-Mean: indicates the mean renal brightness value.	
	Multiple frames	
	The parameters of the multiple frames are the same as those of the USAT function.	
3.	The histogram area parameters are the same as those of the USAT function.	
4.	Progress bar to play the frames.	

Perform the following procedure:

- 1. Select an appropriate probe and exam mode.
- 2. In B mode, move the probe and adjust the parameters to acquire the image of the target area.
- 3. Tap [Fatty Liver Lab] > [HRI+] to enter the HRI⁺ function.
 - A single window with two square ROIs are displayed.
- 4. Adjust the ROI position and size to the target area.

The renal ROI is activated by default.

a. Adjust the renal ROI position and size to the target area. In this case, the depth of the hepatic ROI is adjusted together.

8 - 12 Operator's Manual

- b. Press the <Set> key to switch to the hepatic ROI.
- c. Adjust the hepatic ROI position and size to the target area. In this case, the depth of the renal ROI is adjusted together.
- 5. Adjust the scan time if necessary.
- 6. Press < Update > to start acquisition.
- 7. After the acquisition is completed, the system calculates and displays the measurement curve and statistic results. The image is in freezing mode.
- 8. Rotate the knob under [Frame Average] on the touch screen to select the number of frames. The system calculates and updates the measurement curve and statistics results in real time.
 - The histograms of the selected frames for statistics are displayed in green, while the histograms of the unselected frames are displayed in blue.
- 9. In the freezing mode, you can press the <Set> key to activate the ROI and adjust the ROI position and size again. The system calculates and updates the measurement curve and statistics results synchronously. Press the <Set> key again to confirm the results.
- 10. Rotate the knob under [Select/Bad] on the touch screen to select the current frame, or delete an invalid frame from calculation.
 - The histogram of the deleted frame is displayed in gray.
- 11. Perform measurement, or add annotations or body marks if necessary.
- 12. Save the single frame image or cine.
- 13. Press on the control panel to return to B mode.

8.4.3 Image Parameters

Scan Time

It is used to set the scanning time in image acquisition preparation status.

H-ROI Size

It is used to adjust the ROI size.

Att.Metric

It is used to select the metric unit for attenuation statistics.

Frame Average

It is used to select the number of frames for statistics.

NOTE:

Other parameters are the same as those of the Elasto or STE/STQ modes.

Operator's Manual 8 - 13

This page intentionally left blank.

9 Contrast Imaging

The contrast imaging is used in conjunction with ultrasound contrast agents to enhance imaging of blood flow and microcirculation. Injected contrast agents re-emit incident acoustic energy at a harmonic frequency much more efficient than the surrounding tissue. Blood containing the contrast agent stands out brightly against a dark background of normal tissue.

ACAUTION

- Set MI index by instructions in the contrast agent accompanied manual.
- Read contrast agent accompanied manual carefully before using contrast function

NOTE:

- Make sure to finish parameter setting before injecting the agent into the patient to avoid affecting image consistency. This is because the acting time of the agent is limited.
- The applied contrast agency should be compliant with the relevant local regulations.

9.1 Basic Procedures for Contrast Imaging

Perform the following procedure:

- 1. Select an appropriate probe, and perform 2D imaging to obtain the target image, and then fix the probe.
- 2. Tap [Contrast] or press the user-defined <Contrast> key enter the contrast imaging mode.
- 3. Adjust the acoustic power experientially to obtain a good image.
 - Tap [Dual Live] to activate the dual live function. Observe the tissue image to find the target view.
- 4. Inject the contrast agent, and tap [Timer1] to start the contrast timing. When the timer begins to work, the time will be displayed on the screen.
- 5. Observe the image, tap [Pro Capture] and [Retro Capture] or the user-defined key to save the images.

Press <Freeze> to enter cine review status.

Perform several live captures if there are more than one interested sections.

6. At the end of a contrast imaging, tap [Timer1] to exit the timing function.

Perform steps 3-5 if necessary.

For every single contrast imaging procedure, use [Timer2] for timing.

If necessary, activate destruction function by tapping [Destruct] at "ON" to destruct the microbubbles left by the last contrast imaging; or to observe the reinfusion effect in a continuous agent injecting process.

7. Exit contrast imaging.

Operator's Manual 9 - 1

Press button to return to B mode.

9.2 Left Ventricular Opacification

Perform the following procedure:

- 1. Acquire ECG signal.
- 2. Select an appropriate probe and LVO exam mode.
- 3. Workflow of LVO is similar to abdomen contrast imaging, see "9.1 Basic Procedures for Contrast Imaging".

9.3 CEUS Chrono-Parametric Mode

It is used to visually display the recorded contrast agent arriving time by different tint colors in a color image through color coding method. It assists in observing the spatial distribution and time sequence of blood perfusion of the micro-vessels in the target area.

9.3.1 2D

Perform the following procedure:

- 1. Select an appropriate probe.
- 2. Enter the Contrast imaging mode.
- Inject the contrast agent, and freeze the image after the contrast agent reaches the target area.
 Or open a saved Contrast imaging cine file.
- 4. Select [CCPM] to enter CCPM mode.

Set the start and end frames, and adjust the threshold and other parameters if necessary.

5. Select [CCPM Calc] to start calculation. The system codes and displays the color map of each frame according to the arriving time of the contrast agent.

You can adjust the starting time.

- a. Activate the cursor and move the cursor to the contrast image.
- b. Select a desired point as the new starting time
- c. Press the right <Set> key to confirm.

The arriving time of each point is updated. You can repeat adjusting the starting time.

You can press the left <Set> key to restore the starting time to the original value.

6. Save images and exit the CCPM mode.

Background

It is used to set the background image for the color coding of arriving time.

Motion Tracking

It is used to enable or disable motion tracking compensation.

Transparency

It is used to adjust the transparency for the color coding of arriving time.

Threshold

It is used to adjust the threshold of the contrast agent arriving time.

9 - 2 Operator's Manual

Color Map

Color map is used during color coding of the contrast agent arriving time in the contrast image. It consists of multiple color blocks. Different color blocks indicate different arriving time points/ image frames of the contrast agent and are separated by each scale. Tap [Color Map Edit] in the touch screen to enter the editing dialogue.

- Time/Frame: Select the horizontal axis of the color map from Time or Frame.
- Gradation: Set the display format of the color map to Gradation or non-Gradation.
- Add Color/Del Color: Add color to or delete color from the provided color map.
- Adjust the scale length of the currently selected color block.



• Adjust the color of the currently selected color block.



• Adjust the length of the entire color map.



- Preview: Preview the color map after re-calculating the arriving time.
- Save as: Save the adjusted color map as the user-defined settings.
- Default: Restore the color map to the default settings.

9.3.2 4D

Entry 1

Perform the following procedure:

1. Open a saved volume CEUS cine file.

Operator's Manual 9 - 3

- Select [CCPM] to enter CCPM mode. The system starts calculating.
 Adjust length, tint, and other parameters if necessary.
- 3. Perform measurement, or add annotations or body marks if necessary.
- 4. Save images and exit the CCPM mode.

Entry 2

Perform the following procedure:

- 1. Select a volume probe.
- 2. Select Contrast, and then press the user-defined <3D> key, or <4D> key to enter volume CEUS imaging mode.
- 3. Inject the contrast agent, and press < Update>.
- 4. Freeze the image after the contrast agent reaches the target area.
- 5. Select [CCPM] to enter CCPM mode. The system starts calculating. Adjust length, tint, and other parameters if necessary.
- 6. Perform measurement, or add annotations or body marks if necessary.
- 7. Save images and exit the CCPM mode.

9.4 TCMR (Tissue-Contrast Mix Rendering)

It is used to mix the rendering of 3D/4D Contrast Imaging and tissue data, and display them together (completely obscured, translucent display). Also, it is used to observe the dynamic perfusion process of Contrast Imaging, and display the relationship with the stereo structure and spatial position of the tissue.

Entry 1

Perform the following procedure:

- 1. Select a volume probe.
- 2. Select Contrast, and then press the user-defined <3D> key, or <4D> key to enter volume CEUS imaging mode.

The "Scan Modes" parameter is set to "Contrast+Tis" by default. You can only enter TCMR in "Contrast+Tis" mode.

- 3. In the acquisition preparation mode, press <Update> to start the acquisition.
- 4. Select [TCMR] under the "Display" item to enter TCMR mode.
 - The "FixTissue" parameter is enabled by default. In this status, you can fix the VOI and switch active windows.
 - Adjust mix color, mix ratio, tissue render, and other parameters if necessary.
- 5. Save images and exit the TCMR mode.

Entry 2

Perform the following procedure:

- 1. Select a volume probe.
- 2. Select Contrast, and then press the user-defined <3D> key, or <4D> key to enter volume CEUS imaging mode.

The "Scan Modes" parameter is set to "Contrast+Tis" by default. You can only enter TCMR in "Contrast+Tis" mode.

9 - 4 Operator's Manual

- 3. In the acquisition preparation mode, select [TCMR].
- 4. Press < Update > to start the acquisition.
 - The "FixTissue" parameter is enabled by default. In this status, you can switch active windows.
 - Adjust mix color, mix ratio, tissue render, and other parameters if necessary.
- 5. Save images and exit the TCMR mode.

Entry 3

Perform the following procedure:

- 1. Open a saved volume CEUS cine file.
- 2. Select [TCMR] under the "Display" item to enter TCMR mode.
 - The "FixTissue" item is enabled by default. In this status, you can switch active windows.
 - Adjust mix color, mix ratio, tissue render, and other parameters if necessary.
- 3. Save images and exit the TCMR mode.

9.5 Image Parameters

When entering contrast imaging mode, the screen displays the contrast image, and if [Dual Live] item on the touch screen is "ON", both the contrast image (marked with) and tissue image (marked with) are displayed (the two window position can be changed).

Parameters in Contrast mode are similar to those in B mode; please refer to B chapter for details, special Contrast imaging parameters are introduced in the following.

Туре	Parameter	Description	
Contrast	FC	Contrast frequency.	
	D	Depth.	
	G	Gain.	
	FR	Frame rate.	
	DR	Dynamic Range.	
	iTouch	iTouch status	
Tissue	G	Gain	
	DR	Dynamic Range.	
	iTouch	iTouch status	
Zoom	Z	Magnification factor	
Timing (If timer is / In real time mode, the time disp Freezing status:		In real time mode, the time displayed is the elapsed time. Freezing status:	
		Timer 1 continues timing and two times will be displayed on the screen: frozen time and time duration after the image is frozen.	
		Timer 2 stops timing and the screen displays the frozen time.	

Operator's Manual 9 - 5

Timer

NOTE:

The starting time displayed may be inconsistent with the actual one due to system error or some other man-made mistakes; please check the agent-injecting time.

The two timers are used to record total time of contrast imaging and single time of one contrast exam.

After the image is frozen, Timer 1 is still timing, and after unfreezing the image, the corresponding time can be seen.

Timer 2 stops timing when one contrast exam is frozen, and after unfreezing the image, the Timer 2 is off.

Tap [Timer1] to start the timing at the moment you inject the contrast agent. Here, the screen displays the times at the lower corner.

- The time begins at 0.
- In live mode, there displays the elapsed time. For example, 00:00:08, it means the elapsed time is 8s.
- Freeze the image during the timing, timer 1 continues timing and two times will be displayed on the screen: frozen time and time duration after the image is frozen; the timer 2 stops working, and there displays the elapsed time. After unfreezing, the timer 1 restarts working, and the timer 2 exits.
- Set [Timer1] or [Timer2] as "OFF", the timer discontinues its work.

Micro-bubble Destruction

ACAUTION

Use the contrast imaging according to the residual level of the micro-bubbles, using contrast imaging continuously may result in human harm.

Destruct the micro-bubbles left by the last contrast imaging; or to observe the reinfusion effect in a continuous agent injecting process.

Tap [Destruct] to enable the micro-bubble destruction function:

- DestructAP: Adjust the destruct acoustic power via the touch screen.
- Destruct Time: Adjust the destruct time via the touch screen.

Dual Live

In live mode or freeze mode, set touch screen item [Dual Live] as "ON" to enable dual live function. Both the contrast mode and tissue mode are displayed. The THI and B image are displayed on the screen if the [Dual Live] is enabled.

TIP:

- In dual live mode, the screen displays the contrast image and tissue image
- In freeze mode, there displays only one cine review progress bar as the contrast image and tissue image are reviewed synchronously.

Mix Map

This function is to mix the contrast image with the tissue image, so that interested contrast regions can be located.

9 - 6 Operator's Manual

Tap [Mix] to select different mixing mode, and select different maps by knobs under [Gray Map]/ [Tint Map]/[Mix Map] on the touch screen.

- When dual live function is on, you can see the mixed effect on the contrast image.
- When dual live function is off, you can see the mixed effect on the full screen image.

Select the map through the [Mix Map] item.

iTouch

On contrast status, you can also get a better image effect by using iTouch function.

1. Press <iTouch> on the control panel to turn on the function.

The symbol of iTouch will be displayed in the image parameter area in the upper left corner of the screen once press <iTouch>.

Select different levels of iTouch effect through [iTouch] on the touch screen.

2. Long press <iTouch> to exit the function.

High Frame Rate CEUS

This function is used to improve the frame rate (FR) for contrast imaging. Tap [HiFR CEUS] to turn on the function.

Mark Line

Tap [Markline] to enable this feature. Mark lines appear on the tissue image and contrast image. Use trackball to adjust the mark lines and mark the target with the larger circle.

Measurement, Comment and Body Mark

The system supports image measurement, comment and body mark functions. For the details, please refer to the relevant sections.

9.5.1 Micro Flow Enhancement

NOTE:

- In MFE status, patient should lie down and hold breath, and transducer should be kept still.
- MFE imaging is available only for real-time imaging or cine file of auto review mode. If a MFE cine is reviewed manually, MFE effect cannot be displayed.

MFE superimposes and processes multiple frames of contrast image during the cycle; it indicates tiny vessel structures in detail by recording and imaging microbubbles.

MFE switch

During real-time scanning, tap [MFE] on the touch screen to start MFE imaging (MFE key is highlighted in green).

MFE Period

Rotate the knob under [MFE Period] on the touch screen to select different imaging period suitable for current flow. Where, MAX is the maximum superimposing effect.

Operator's Manual 9 - 7

9.6 Contrast Imaging QA


$oldsymbol{\Lambda}$ CAUTION

Contrast Imaging QA images are provided for reference only, not for confirming a diagnosis.

NOTE:

- In case of inaccuracy of the data, do not adjust the depth and the pan-zoom when saving the cine. Also, during image scanning, ask the patient to hold breath for several seconds, and keep the probe still until the image is frozen.
- If the contrast signal inside the selected ROI does not meet the requirements of gamma fitting condition, that is the bulleting injection, curve fitting may not be available.

Contrast Imaging QA adopts time-intensity analysis to obtain perfusion quantification information of velocity flow. This is usually performed on both suspected tissue and normal tissue to get specific information of the suspected tissue.

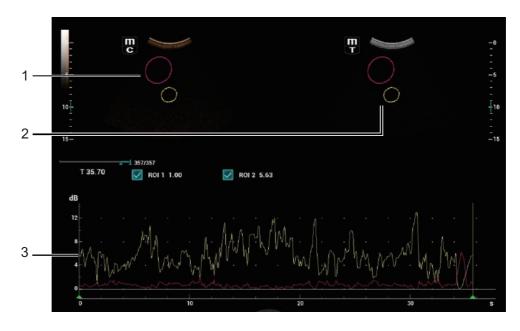

1	Contrast cineloop window	Sample area: indicates sampling position of the analysis curve. The sample area is color-coded, 8 (maximum) sample areas can be indicated.	
2	B cineloop window	Sample areas are linked in the contrast cineloop window and B cineloop window.	
3	Time-intensity curve	 Y axis represents the intensity (unit: dB), while X axis represents the time (unit: s). Frame marker: a white line that is perpendicular to the X axis, can be moved horizontally left to right (right to left) by using the trackball. Click the check box beside the ROI to set if to hide or to display the 	
		 QA curve. You can get the current X/Y axis value by moving the cursor onto one point on the curve; and if you press <set> at this time, the frame marker will move to the spot.</set> 	

9 - 8 Operator's Manual

Perform the following procedure:

Perform image scanning, freeze the image and select a range of images for analysis; or select a desired cine loop from the stored images.

The system set the starting time and ending time of the cine to be first frame and last frame of QA analysis range.

- 2. Review the image to a desired frame.
- 3. Tap [Contrast QA] to activate the function.
- Mark out the interested part (ROI).

Up to 8 ROIs can be saved on the reference image, with the corresponding eight traces plotted simultaneously on the graph. Each ROI display has a different color, and its corresponding trace data is plotted using that same color.

Use [ROI Type] to select the method for determining the shapes of the sample area: Trace ROI and Ellipse ROI.

The cursor is evolved in the image review area.

Use the trackball to position the caliper on the reference image at the start point. Press <Set> to fix the start point.

Trace ROI

Follow the steps below:

- 1. Press <Set> key to fix the starting point.
- 2. Press <Set> key, and use the trackball to depict the ROI.

Press <Clear> to cancel the last point.

The system automatically links the start point to the end point by drawing a straight line between them.

3. When a suitable ROI has been drawn, confirm the ROI by double pressing <Set>.

Ellipse ROI | Follow the steps below:

- 1. Use the trackball to position the caliper on the reference image at the start point. Press <Set> to fix the start point.
- 2. Trace the outline of the desired ROI by moving the cursor with the trackball.
- 3. Press <Set> to fix the end point, and use trackball to depict the ROI. When a suitable ROI has been drawn, confirm the ROI by pressing <Set> key.
- Press <Clear> key to clear out the last ROI.
- Tap [Delete All] on the touch screen to clear out all ROIs. The corresponding traces for the deleted ROIs are erased from the plot.
- Tap [Copy ROI] to create a new ROI similar to the current or latest added ROI
- Tap [Motion Tracking] to enable the Motion Tracking function.

This function provides a motion compensated ROI as precise time-intensity information can be acquired using active tracking. It can enhance the calculation accuracy as reducing the impact of probe or patient respiratory movement.

NOTE:

Elliptical ROIs can be positioned in any manner that keeps their center within the image boundaries. In the case that part of the ROI is outside the image boundary, only data from within the image boundary is used for calculating the mean intensity value.

6. If necessary, tap [Fit Curve] to perform curve fitting on the time-intensity curve, where color of the fitted curve is consistent with color of the current ROI curve.

9 - 9 Operator's Manual

The system can calculate characteristic parameters according to curve fitting formula and data, display fit curve for time-intensity curve, and perform data analysis on time-intensity curve for data table.

- Tap [Raw Curve] to hide/display raw curve.
- Tap [Table display] to check parameters:

Item	Description	
GOF (Goodness of Fit)	t) Calculate the fit degree of the curve; range: 0-1, where 1 means the fit curve fits the raw curve perfectly.	
BI (Base Intensity)	Basic intensity of no contrast agent perfusion status.	
AT (Arrival Time)	Time point where contrast intensity appears, generally, the actual time value is 110% higher than the base intensity.	
TTP (Time To Peak)	Time when the contrast intensity reaches peak value.	
PI (Peak Intensity)	Contrast peak intensity.	
AS (Ascending Slope)	Ascending slope of contrast, the slope between the start point of lesion perfusion to the peak.	
DT/2	Time when the intensity is half the value of the peak intensity.	
DS (Descending Slope)	Descending slope of the curve.	
AUC (Area Under Curve) To calculate the area under the time-intensity curves duri		
MTT (Mean Transition Time) The mean time which a red blood cell (microbubble) needs through the tissue mass.		

You can set range for the fit curve. After the range is set, the system displays fit curve within the range only. Use the trackball to the time-intensity curve to move the frame marker position.

- a. Set starting point of the fit curve: Use the trackball to select the starting time and tap [Set Fit Start].
- b. Set end of the fit curve: Use the trackball to select the end time and tap [Set Fit End].
- 7. Rotate the knob under [X Scale] on the touch screen to choose different value, so that the X scale display manner will be changed.

This function can be used to track detailed tissue information.

- 8. Save the curved image, export the data and do parameter analysis.
 - a. Tap [Export] on the touch screen.
 - b. Select the drive and enter the file name in the displayed window.
 - c. Select [OK] to save the data and return to the QA Analysis screen.
 - All displayed ROI traces are saved in the exported file.
 - The parameters are included in the trace file if the user has fixed a ROI.

After the exporting is succeeded, a .BMP format image is displayed in the thumbnail area of the screen.

Only data from the user selected image range is included in the exported trace file.

9. Tap [Exit] to exit Contrast QA.

9 - 10 Operator's Manual

10 Physiological Unit Signal

The physiological unit signal waveform is used for checking ultrasound image in ultrasound exam (cardiac exam mainly).

The system provides the physiological unit input panel, on which ECG and other signals can be input.

The system is equipped with physiological unit signal module. Tap [Physio] to enable the function. The image area shows ECG curves.

Support ECG and external ECG.

Only one port is on the ECG module, which transfers to ECG source via DC-IN.

MARNING

- Do not use the physiological traces for diagnosis and monitoring.
- To avoid electric shock, the following checks shall be performed prior to an operation:
 - The ECG electrode cable must not be cracked, frayed or show any signs of damage or strain.
 - The ECG electrode cable must be correctly connected.
 - You must use the ECG leads provided with the ECG module. Failure to do so may result in electric shock.
- The ECG electrode cable must be connected to the system first. Only after the cable is connected to the system, can the patient be connected to the ECG electrodes. Failure to follow these instructions may subject the patient to electric shock.
- Do not place the ECG electrodes directly in contact the patient's heart; otherwise it may lead to stop of the patient's heartbeat.
- Do not apply the ECG electrodes if the voltage exceeds 15 volts. This could produce an electric shock.
- Do not use this system when any digital device such as a high-frequency electrotome or high-frequency therapeutic device is applied already.
- Conductive parts of electrodes and associated connectors for ECG should not contact other conductive parts including earth/grounding.
- Frequent trampling or squeezing on the cables may result in cable breakdown or fracture.
- Display effect of respiratory curve depends on the patient breathing status.
 While a very slow or smooth breathing may lead to an inapparent
 respiratory curve, breathing in a large amplitude may cause an incomplete
 display of the respiratory curve. Display effect is linked to the connected
 parts of the body. Generally, signals by connecting to limbs are stronger
 than by connecting to the chest.

Operator's Manual

When abnormality is detected in physio trace, please check if ECG leads are properly connected with the system.

10.1 **ECG**

Perform the following procedure:

- Connect the device and place ECG electrodes.
 - Turn off the power supply of the system, and connect the ECG cable to ECG port.
 - b. Turn on the power supply of the system.
 - Place the ECG electrodes on the patient's body.



- Tap [Physio] or press the user-defined < Physio > key to enter physio operation interface.
- 3. Switch the imaging modes and display formats, adjusting the parameters to get an optimized image.
- Parameter adjusting:

Tap [ECG] to enable or disable ECG waveform curve. Adjust the [Speed], [ECG Gain], [Position] and [Invert].

- Trigger:
 - Tap [Trig Mode] to enable the trigger.
 - Select the trigger mode.
 - Set the delay time.

Tap [Real & Trigger] to enable or disable the real trigger function.

- Freeze the triggering image and the curve, and then review them.
- Tap [ECG] or press the user-defined < Physio > key to exit ECG mode, and remove ECG electrodes from the patient.

10.1.1 ECG Triggering

ECG triggering means that image scanning is activated at some time points of ECG signals, thus obtaining B images at these time points. The triggering image should be in 2D-mode.

When ECG triggering occurs, some marks (frame triggering mark) appear on the ECG waveform (relative R wave, the time for delay set), indicating the time points when the 2D images are captured.

10 - 2 Operator's Manual

NOTE:

- The triggering mark is displayed in both freeze mode and live mode.
- The marks in Dual trigger are in different colors.
- Triggering function is unavailable if the ECG trace is disappeared. Only the live 2D image can be triggered.
- No delay time or time interval shall be less than the time required to scan a single image.
- If the delay time is longer than a heart cycle, then the heart cycle in the delay time is omitted, that is to say no trigger is occurred when R waveform is detected in the duration.

Triggering Mode

There are three triggering modes available: Single, Dual, and Timer.

- Single Trigger: When an R waveform is detected, an image will be triggered after delay time T1. The time of T1 can be edited in single mode.
- Dual trigger: when an R waveform is detected, two images in two windows will be triggered respectively after delay time T1 and T2. The time of T1 and T2 can be edited in dual mode.
- Timer Trigger: an image will be triggered after a time interval. The time interval can be edited in triggering status.

The image triggering operation is described as follows (Take single trigger as an example):

- 1. Select exam mode.
- 2. Tap [Trig Mode] to enable the trigger.
- 3. Select [Single].
- 4. Set the delay time (or use the T1 by default).

Real & Trigger

Tap [Real & Trigger] to enable or disable the real trigger function.

After the [Real & Trigger] is enabled, two images are displayed respectively in two windows. One is triggered by ECG, and the other is non-triggered real time image.

10.1.2 ECG Review

Review Principle

When an image is frozen, the ECG waveform where the image is triggered will be frozen at the same time. In the Dual triggering mode, the two window images are frozen at the same time. When images are reviewed with the ECG electrodes connected, the ECG trace is the reference for time.

After the images are frozen, all real time images are in the status of linked review.

Linked Review of ECG Waveforms, M/D Images and 2D Images

If the physio unit signal, time curve and 2D image are frozen at the same time, the replay of them is displayed at the same time.

10.2 Respiratory Wave

Perform the following procedure:

- 1. Connect the ECG lead and position the ECG electrodes.
- 2. Tap [Physio] or press the user-defined < Physio > key to enter Physio screen.

Operator's Manual 10 - 3

- 3. Switch the imaging modes and display formats, adjusting the parameters to get an optimized image.
- 4. Parameter adjusting:
 - a. Tap [RESP].
 - b. Adjust [Speed], [RESP Gain], [Position] and [Invert].
- 5. Exit Respiratory display mode, and remove ECG electrodes from the patient.
- 6. Tap [RESP] or press the user-defined < Physio > key to exit physio mode.

10.3 PCG

NOTE:

- Check PCG each time before use. If there are any cracks or scratch, please contact the sales representative.
- If there is no ECG signal (PCG waveform is flat) after entering ECG mode, please check whether the sensor plug is connected well.
- Do not hot unplug the PCG sensor.
- To satisfy the PCG sensor's receiving performance, do not rub the acoustic window hard because of the vulnerability of the silicone.

10.3.1 PCG Operation Basic Procedures

Perform the following procedure:

- 1. Connect PCG sensor.
 - a. Connect the PCG sensor to the corresponding interface on the physiological module.
 - b. Power on the system.
 - c. Place PCG transducer on the patient.

The position is shown below:


Auscultation area of the mitral valve: the fifth intercostal space on the left, the interior of clavicle's middle line.

Auscultation area of tricuspid valve: the right of the sternum.

Auscultation area of aortic valve: the second intercostal space of the right sternum.

Auscultation area of pulmonary valve: the second intercostal space of the left sternum.

10 - 4 Operator's Manual

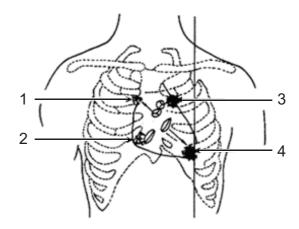

1	Aortic valve auscultation area	2	Tricuspid valve auscultation area
3	Pulmonary valve auscultation area	4	Mitral auscultation area

- 2. Tap [Physio] or press the user-defined <Physio> key. Tap [PCG] on. The PCG wave appears.
- 3. Press the different mode buttons to change the imaging mode. Adjust the parameter to obtain the optimized image.
- 4. Adjust [PCG Gain] and [PCG Smooth].
- 5. Freeze the image and the curve, and then review them.
- 6. Tap [PCG] or press the user-defined <Physio> key to disable PCG wave. Then exit the PCG, and unplug PCG sensor.

10.3.2 PCG Sensor Cleaning

NOTE:

- Disconnect the sensor with the ultrasound system before cleaning the PCG sensor.
- Do not rub PCG sensor hard in case of the damage to the sensor.

Clean the PCG sensor after each time use in case of the cross-infection.

- The check after the exam of general patient:
 - Wipe the sensor with soft cloth dipping with medicinal alcohol, and then air dry the senor or clean the sensor with dry cloth.
- The check after the exam of patient with cutaneous infection:

Use the cover for the sensor. The cover should be against the appearance of the acoustic window.

Use the appropriate cover. To order the cover, contact:

CIVCO Medical Instruments Co.

102 First Street South, Kalona, IA 52247-9589 USA

Tel: 1-319-656-4447 E-mail: info@civco.com http://www.civco.com

Operator's Manual 10 - 5

10.4 Parameter Description

The physio parameters are described as follows:

Туре	Parameter	Description
ECG	ECG Source	Select ECG source.
parameter	Gain	Set the amplitude of the trace.
	Position	Set the vertical position of the both traces on the image display.
	Speed	Change the speed of the physio trace.
	T1	Set the delay time T1 in Single trigger or Dual trigger.
	T2	Set the delay time T2.
	Interval	Set the time interval for Timer.
	Invert	Invert the display.
PCG	PCG	Control the display of PCG trace.
parameter	PCG Gain	Set the amplitude of PCG trace.
	PCG Smooth	Smoothen PCG trace.

10 - 6 Operator's Manual

11 Stress Echo

Only the phased probes support stress echo function under the cardiac mode.

ACAUTION

Stress echo data are provided for reference only, not for confirming diagnoses.

The Stress Echo feature allows you to capture and review cardiac loops for multiple-phase (multiple-stage) Stress Echo protocols.

Stress Echo data consists of Stress Echo loops, wall motion scores, and all other information pertaining to the Stress Echo portion of a patient examination.

A loop is a clip that displays the motion of an entire heart cycle, or from the beginning systole to the end systole, as indicated by the R-wave of the ECG trace and determined by the QT-Time Table.

The loops in a given protocol are acquired by stages (phases), according to stage configuration (continuous (prospective) or retrospective (non-continuous)).

- Loops in non-continuous stages are limited to a specified loop-per-view maximum (such as four). View labels can only be selected in the configured order. Acquisition is retrospective when you press <Save> on the control panel, the system saves the previously acquired images.
- Loops in continuous stages are limited by time rather than a maximum number of loops the system stops acquisition after two minutes. Acquisition is prospective when you select the stage label and then press <Save>, the system starts saving newly acquired images. In some protocols, the system will jump to Select Mode after retrospective saving.

When images are saved, the system places a green checkmark to the right of the view or continuous stage and then shifts the red mark to the next view or next stage.

11.1 Stress Echo Acquisition Procedure

To acquire Stress Echo loops, you must enable the ECG function.

Perform the following procedure:

1. Use the proper probe and cardiac-related exam mode, tap [Stress Echo] or press the user-defined <Stress Echo> key to enter stress echo imaging.

The system displays the "Select Protocol" window with the protocol selections.

2. Select the desired protocol.

The system displays the real-time imaging screen.

- If the Stress Echo manual ROI option is selected in the Maintenance dialog box, the system also displays a region of interest (ROI).
- If Acquire Mode is set as Full-screen in Maintenance, then no ROI box is displayed.
- 3. According to the help information in the bottom of the screen, if an ROI is displayed, adjust the ROI size and position. Press <Update> to confirm the ROI.

When you confirm the ROI size by pressing <Update>, you cannot adjust the ROI size during acquisition. You can only adjust the ROI position using the trackball.

Operator's Manual

4. Press <Save> to start acquisition.

The system displays the Protocol window on the screen, listing the phases for the selected protocol along with the first phase views (phases are stages). The system selects the first view for acquisition by default.

5. Proceed through each view in each stage according to the following instructions:

Non-continuous stages:

- To save acquired images for the selected view, press <Save>. The system goes to the next view for acquisition by default, saved views are marked with a green "√."
- Rotate the knob under [Stages XXX] or [Views XXX] to select the stage and view for image acquisition (or reacquisition). Press <Save> key to start acquisition.
 - Views can be re-acquired until you tap [End Acquisition].

If the protocol contains continuous stages (for alternative workflows), then proceed through each continuous stage according to the following instructions:

- To begin saving acquired images for the selected stage, press <Save>.
- The system displays a percentage marker below the selected stage indicating the progress of the continuous capture.
- To halt saving acquired images for the selected stage, rotate the knob under [Pause] on the touch screen or press <Freeze> directly. The percentage stops increasing.
- Rotate the knob under [Continue] on the touch or press <Freeze> again to continue.
- To end the current acquisition, press <Save>.
- To select another continuous stage, rotate the knob under [Stage XXX] on the touch screen.
- Suspending is not allowed under continuous exam.

When acquisition is complete for each stage, the system advances to the next stage. If the stage is non-continuous, the system displays the stage views. When image acquisition is completed for all views and continuous stages, the system switch to Select Mode.

6. To start or restart the timer, tap [Stage Timer]/[Exam Timer] to turn it on.

The Stage time is displayed to the right side of each stage in the protocol list, while the Exam time is displayed in the left side of the screen.

Each saved image will be marked with two times T1 and T2. T1 refers to the total time of the whole acquisition, while T2 indicates the time the acquisition lasted for a certain stage.

- 7. To review loops before ending acquisition, tap [Review/WMS]. You can redisplay the real-time imaging screen to continue acquisition by selecting [Acquire].
- 8. To end the acquisition and review the acquired images, tap [End Acquisition].

When the acquisition is ended, no stress echo image acquisition can be performed for the same exam.

11.2 Selecting Preferred Stress Echo Loops (Select Mode)

The selected clips are used for analysis in the review mode and wall motion scoring mode. Select Mode is used to select the best loops of the examination.

When the acquisition is ended, select mode is enabled automatically.

In Select Mode, you can select the representative loop ("preferred" loop) for each view.

11 - 2 Operator's Manual

To select "preferred" loops:

- 1. Use the <Update> key according to tips in the trackball hint area or select [Select] to enter the Select Mode, or the system enters the Select Mode directly after the acquisition is finished.
- 2. Select the loop. Use the buttons displayed during Select Mode to designate another loop or another view for display.
 - Use [Stages XXX] or [Views XXX] to select the target stage/view.
 - Single-click a clip to select the clip for current stage/view and zoom in the clip to the full-screen.
 - Double-click a clip. The clip will be magnified.
 - Tap [First/Last] or [Previous/Next] to display another loop in the current view.
- 3. Select the stage and view to display all loops for the view and then continue designating the "preferred" loop for each displayed view until all views are completed.

Description of select mode controls:

Selection	Description	
Stages XXX	To select a stage.	
Views XXX	To select a view.	
Acquire	To switch the mode status.	
Select		
Review/WMS		
1.Clip/2.Clip/3.Clip/ 4.Clip	For selecting views in the selected stage.	
Next	Next four Clips.	
Previous	Previous four Clips.	
First	Go to "first" Clips.	
Last	Go to "last" Clips.	
Play	Click to play/stop cine play.	
Prev frame	See previous frame of the cine file.	
Next frame	See next frame of the cine file.	
First frame	See first frame of the cine file.	
Last frame	See last frame of the cine file.	
Speed decrease Decreases playback speed.		
Speed increase	Increases playback speed	
Text	Function that turns the screen graphic text "On" or "Off". Information includes: name of level, name of view, heart rate, time stamp acquisition, timers, frame slider, loop ID, clip control. For the cine without distributed view, the name of level and name of view are displayed in "".	
Apply Edit All	Clip edit applied to all clips taken.	
Clip Length	Specify the clip segments: systole, diastole, full cycle or user-defined.	
Bookmark	For continuous acquisition, when the bookmark is set to "On", only the selected loops for the current view can be displayed.	

Operator's Manual

Selection	Description
Delete Unselected	Delete clips that are not selected. If selected, the system will delete all clips that are not selected after the exam is ended.
Suspend Exam	Pauses the stress echo exam but does not end the stress echo exam. When a stress echo exam is suspended, the user can perform image acquisition of all other imaging modes, or perform operations such as measurement.
End SE Exam	End the stress echo exam.

11.3 Review/WMS Mode

Review/WMS mode is used by cardiologists to evaluate clips for cardiac wall motion abnormalities. Different views from different stages are selected for comparison across a wide variety of combinations. The most common workflow is to compare "same views" but at "different stages" of the exam (e.g., PSLA view, Rest stage compared to PSLA view, Post-exercise stage).

11.3.1 Enter review mode

Select [Review/WMS] to enter review mode, and then select the label of the phase or view (for example, Rest or Long Axis), the system displays all loops that represent the selected phase or view.

To display phases for the selected view(s)

Perform the following procedure:

1. To include a phase or view for display, select the leftmost, gray box to the left of each required phase and/or view.

The system inserts a checkmark into each selected gray box.

2. To exclude a phase or view from display, select the blue box to the left of each required phase and/or view.

The system inserts a X into each selected box, like X.

3. Select [Display Selected] on the touch screen.

The system displays the selected phases for each selected view side by side.

To display all views for a specific phase

Select the phase label (for example, Rest).

To display all phases for a specific view

Select the view label (for example, PLAX).

The system displays all phases for the selected view.

To display a loop in full-screen format

- 1. Double-click the loop to display in full-screen format.
- 2. Double-click the loop again to display the loop in its initial size, select the loop again.

11 - 4 Operator's Manual

Description of review/WMS mode keys (keys with the same function as in select mode are not described below):

Item	Description
Review/WMS	Perform side-by-side comparison of the same views at different stages (PLAX, PSAX, A4C, A2C at "Rest" compared to PLAX, PSAX, A4C, A2C "Post-Exercise"). Clips are synchronized.
• Under [Text] "Off" status, when you select one stage, all view l displayed on the screen; when you select one view, all loops of view in different stages will be displayed on the screen.	
	• Set [Text] to "On", the system will select loops of first two views of the first two stages to display automatically. If you choose [Previous], then loops of the next two views of the first stages will be displayed. If you choose [Next], loops of the first two views in the 3rd and 4th stage will be displayed.
	In the meantime, if you choose one stage, loops of all views under this stage will be displayed on the screen (4 at most), and choosing one view will lead to loops of this view in different stages be displayed (4 at most).
Display Selected	Displays loops of all the stages and views selected.

11.3.2 Wall Motion Scoring

The WMS-Report lists user-assigned wall motion scores and associated data.

The Wall Motion Score (WMS) measurement is an application prepared for assisting in stress echo semi-quantitative evaluations of abnormalities with left ventricular wall motion or changes in wall thickness. The left ventricle is divided into segments for scoring to evaluate the degree of abnormality from the sum of the scores in each segment using the motion of the walls of the entire left ventricle.

You can assign wall motion scores to specific portions within each view (representative loop). You can also assign a normal wall motion score (WMS) to the currently selected view or to all displayed views.

Two methods of chamber segment division, ASE 16 and ASE 17, are supported. In addition, each segment has 3 kinds of scoring method: 4, 5 and 7 points. Select through the [Scoring] control on the touch screen.

To assign a wall motion score (WMS):

1. Select a colored number.

The meanings and colors used in segments are listed in the table below.

Score	Meaning	Color
1	Normal	Green
2	Hypokinesis	Yellow
2.5	Severe Hypokinesis	Khaki
3	Akinesis	Blue
4	Dyskinesis	Red
5	Aneurysm	Purple

2. Use the trackball to select the value and then click the target segments, then the segment is assigned with a value.

Operator's Manual 11 - 5

- 3. Repeat step 2 to perform value assign for all segments.
 - To assign a normal wall motion score (WMS) to all currently displayed views:
 Select [Set All Normal] on the touch screen.
 - To assign a normal wall motion score (WMS) to the currently selected view:
 Select [Set Current Normal] on the touch screen.

11.4 Saving Stress Echo Data

Stress Echo data consists of Stress Echo loops, wall motion scores, and all other information pertaining to the Stress Echo portion of a patient examination.

When the exam is ended, the system will save all images within the exam.

11.5 Exiting the Stress Echo Feature

Tap [End SE Exam] to exit the Stress Echo feature.

11.6 Measurement and Report

Suspend the stress echo exam by selecting [Suspend Exam]. Press the measurement related keys or buttons to enter cardiology measurement.

Reports contain the entered indication, if any, and also any entered comments that are specific to the report. You can include or exclude data from specific phase(s). You can preview and print the report for the currently selected mode. You can also enable colored report printing in Maintenance.

For details, see the "Advanced Volume".

11 - 6 Operator's Manual

12 Smart Pelvic

The Smart Pelvic function is used to measure distances and angles of anterior, central and posterior compartments according to the feature point inputs on 2D images of rest and stress, and then calculate BND and URA; Automatically measure the size of levator hiatus etc. according to the axial plane automatically obtained from volume data; Automatically measure the size of levator hiatus, levator urethra gap etc. according to the "open-closing-closed" planes automatically obtained from volume data.

12.1 Two Dimensional Image

- 1. Perform scanning under GYN or pelvic floor exam mode. Press <Freeze>, tap [Smart Pelvic].
- 2. Roll the trackball to select the target frame in the frozen cine file and tap [Rest] to set rest frame
- 3. Tap [Measure] and press <Set> to anchor measurement calipers of location S/P/U/E/R/V by the indications on the screen. The system then calculates corresponding parameters.
 - S- Symphysis Pubis bottom, P- Central axis of Symphysis pubis, U- Uretha-Bladder joint, E- Uretha proximal, R- Bladder posterior wall near uretha, V- Bladder posterior wall bottom, SP-Pubic symphysis.

Following results are obtained: BSD (Bladder Neck – Symphyseal Distance), PVA (Pubovesical Angle), PUA (Pubourethral Angle), RVA (Retrovesical Angle), BND(Bladder Neck Descent), UTA (Urethral Tilt Angle), URA (Urethral Rotation Angle), BPW-SP Dist.(Bladder Post Wall - Symphysis Publis Distance), Cx-SP Dist.(Cervix - Symphysis Publis Distance)(Only measured under Ref Coord C1), RA-SP Dist.(Rectal Ampulla - Symphysis Publis Distance) (Only measured under Ref Coord C1).

- 4. Set Valsalva frame as described in step 2-3 and finish measurements.
- 5. Tap [Jump to Rest] / [Jump to Valsalva] to review the corresponding measurement results.

Tap [Rest] / [Valsalva] again to delete marks of rest frame and Valsalva and corresponding measurement results.

Tap [Meas Parameters] to select measurement tool and perform step 3 to measure. Result window displays only selected measurement results.

Tap [Ref Coord C1] / [Ref Coord C2] / [Ref Coord C3] for different measurement methods when necessary.

Tap [Edit] to edit the calipers, and corresponding measurement results changes.

Tap [Hide], and tick measurement tools to be displayed, and the result window will hide results of unchecked measurement tools.

Add comments and body marks if necessary.

6. Save the cine file.

Operator's Manual 12 - 1

12.2 3D/4D image data

VR Mode

Perform the following procedure:

- 1. Select probe and GYN/pelvic floor exam mode.
- 2. Enter 3D/4D preparation status, and then acquire 3D/4D image to enter Smart Pelvic.
 - a. Auto: Select [Pelvic] under the [Smart Scene 3D] scenario, and then press <Update>. The system enters [Smart Pelvic] tab automatically.
 - b. Manual: select a non-pelvic subpreset under the [Smart Scene 3D] scenario, press <Update>, and tap [Smart Pelvic] tab.
- 3. On image-frozen mode, adjust image parameters.

On 4D imaging mode, if necessary, tap [Timer] to turn on the timer, and freeze the image as needed.

- 4. Tap [Auto Measure] to start automatic measurement.
- 5. If necessary, tap [Edit], points are uniformly distributed on VR image automatically. Roll the trackball to drag the points. Tap [Edit] again to exit. After editing, tap [Auto Measure] to update the measurement result.

During the editing, tap [Undo] to undo last operation, and tap [Undo All] to undo all operations.

6. Tap [Rest]/[Valsalva]/[Contraction] to mark current image status.

Tap [Hide] to hide measurement results if necessary.

CMPR Mode

Perform the following procedure:

1. Tap [Multi-plane Mode] on smart pelvic VR mode to enter CMPR mode.

The reference line with an arrow and the other two sampling lines generated by the system are displayed on the screen. With the reference line being the start line, the three lines correspond to Open/Closing/Closed images in turn.

- 2. If necessary, perform the following operations.
 - Tap [Ref. Image] to switch between MPRs, and tap [Open]/[Closing]/[Closed] to switch activated window.
 - Tap [Set Ref. Lines] to set the reference line.

 - Rotate the knob under [Line Extension] on the touch screen to adjust the line length.
 - Rotate the knob under [Rotate RL] on the touch screen to adjust the line angle.
 - Rotate the knob under [Spacing] on the touch screen to adjust the spacing between the three lines.
 - Rotate the knob under [Thickness] on the touch screen to adjust the imaging thickness.
 - Rotate the <4D> knob to scroll CMPR image.
 - Tap [Auto Measure] to start automatic measurement.
- 3. Tap [Return] to go back to VR mode.

Parameter Settings

VOI Thickness

Rotate the knob under [VOI Thickness] to adjust the thickness of VOI.

12 - 2 Operator's Manual

• Measurement Parameter

Tap [Meas Parm.] to set the automatic measurement items for Rest, Valsalva, and Contraction frame.

• Orientation Refresh

Tap [Refresh Ori], and the system adjusts the current image automatically to display the minimum levator ani muscle gap slice.

Operator's Manual 12 - 3

This page intentionally left blank.

13 Display & Cine Review

13.1 Splitting Display

The system supports dual-split and quad-split display format. However, only one window is active. The multi-window display can complete the image and multi-frame image comparison.

Dual-split

Press <Dual> on the control panel to enter the dual-split mode, and use <Dual> / <Update> key to switch between the two images; press to exit.

Modes support dual-split display: B mode, Color mode, Power mode, PW mode, CW mode, M mode and Color M mode.

Quad-split

Press the user-defined <Quad> key to enter the quad-split mode, and use the user-defined key to switch among four images; press to exit.

Modes support quad-split display: B mode, Color mode and Power mode.

13.2 Image Magnification

NOTE:

Zooming an image changes the frame rate which tends to change thermal indices. The position of the focal zones may also change which may cause the peak intensity to occur at a different location in the acoustic filed. As a result, the MI may change.

13.2.1 Res Zoom

NOTE:

- Res Zoom only can be realized on a scanning image.
- The size and position of ROI will be changed along with scanning depth and area.

Perform the following procedure:

- 1. Press <Zoom> to enter the sample volume definition status.
- 2. Roll the trackball to change the box size and position. Press <Set> to toggle between setting the size and position, or rotate the <Zoom> knob to adjust the size. After the sample volume is set, press <Zoom> / <Update> again to enter Res zoom status.
- 3. Rotate the <Zoom> knob to change the magnification factor. Or enter the touch screen mapping mode, and zoom the image by pinching two fingers on the touch screen. The image magnification factor value will display in real time in the image parameter area.
- 4. Press <Zoom> to exit Res zoom.

Operator's Manual

13.2.2 Pan Zoom

Perform the following procedure:

- Rotate the <Zoom> knob to directly enter the pan zoom status. Or enter the touch screen mapping mode, and zoom the image by pinching the two fingers on the touch screen. Imagein-image is displayed.
 - Magnification factor adjustment: rotate the <Zoom> knob or pinch two fingers under mapping mode to change the magnification factor. The image magnification factor value will display in real time in the image parameter area. For example, Z1.3 indicates that the magnification factor is 1.3.
 - Shifting the image: roll the trackball or touch and translate the image.
- 2. Press <Zoom> to exit pan zoom.

13.2.3 Spot Zoom

Perform the following procedure:

- 1. Press <Freeze> to freeze the image and press <Zoom> to enter magnification status.
- 2. ROI adjustment: press <Set> to switch between size and position status; roll the trackball to change the size/position. You can also change ROI size by rotating <Zoom>.
- 3. Press <Zoom>/<Update> to enter magnification status and ROI area is displayed in full screen. Image-in-image displays in bottom-left part of the screen.
 - Roll the trackball to change ROI position and the screen image displays accordingly.
 - Rotate <Zoom> to change the magnification factor.
- 4. Press <Zoom> again to exit magnification.

13.2.4 iZoom (Full-screen Zooming)

Perform the following procedure:

- 1. Press <F8> to zoom in the image; the zooming area includes image area, parameter area, image banner, thumbnail area and so on.
- 2. Press <F8> again to zoom in the image area only. The image goes to full-screen.
- 3. Press <F8> again to exit.

13.3 Freeze/Unfreeze the Image

Press <Freeze> on the control panel to freeze a scanning image. In freezing mode, the probe stops transmitting acoustic power, and all images as well as the parameters are kept still.

Press <Freeze> in frozen mode to unfreeze the image, and the system continues image scanning.

TIP:

After freezing an image, the system may enter cine review, measure, comment adding, or body mark mode, which is dependent upon preset. (Setting path: [Setup]>[System]>[General]>"Status after Freeze")

Imaging Mode Switching When Frozen

Imaging mode switching in frozen mode follows the following principles:

13 - 2 Operator's Manual

- In splitting display B mode, press <Dual>/user-defined <Quad> key to switch among the windows; press to exit splitting display mode and enter the image of the currently activated window in full screen.
- In frozen mode, the system supports imaging mode switching between the sub-modes (only for the activated window). For example, if the frozen image is of B+C+PW mode, then the system supports imaging mode switching between B+C+PW, B+C, B+PW and B by pressing <C> or <PW>.
- The imaging mode and parameters of an unfrozen image is the same as the corresponding one that before frozen; but the display format is the same as the one before unfrozen.

13.4 Cine Review

The system allows you to review and edit the images prior to the image frozen. This function is called as cine review. The magnified images can also be reviewed, and the operating method is the same. You can perform zoom, measurements, add comments and body marks on the images being reviewed.

The system supports manual review as well as automatic review. The default setup is Manual Cine, but you can switch between Auto Cine and Manual Cine.

In addition, the system supports the images reviewed along with physiological unit waveforms, if the detection of physiological unit waveforms is performed.

ACAUTION

- The cine memory must be cleared at the end of the current patient and the onset of the next new patient by tapping [End].
- Cine files stored in the system's hard drive shall contain patient information, to avoid the selection of an incorrect image file and potential misdiagnosis.

13.4.1 Entering/Exiting Cine Review

To Enter Cine Review

- The system enters the manual cine review status once press <Freeze> to freeze the image.
- Open cine files in thumbnail, iStation or Review. The system enters automatic cine review status.
- Swipe the touch screen left or right under the mapping mode to review the cine.

To Exit Cine Review

Press <Freeze> or , the system will return to image scanning and exit cine review.

13.4.2 2D Cine Review


Manual Cine Review

Enter the cine mode in 2D imaging mode. Roll the trackball, or slide the screen to view the cine.

If you move the playback mark to the left by using the trackball, the review sequence is reversed to the image-storing sequence, thus the images are displayed in descending order. Whereas, if you move the playback mark to the right by using the trackball, the review sequence is the same as the image-storing sequence, thus the images are displayed in ascending order. When you review images until the first or the last frame, further using the trackball will display the last or first frame.

Operator's Manual 13 - 3

The cine progress bar at the bottom of the screen (as shown in the figure below):

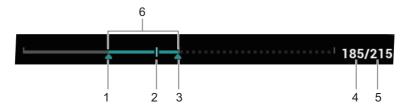

1	Start mark	2	Playback mark
3	End mark	4	Current frame
5	Total frames	6	Auto Review Region

Reviewing all of Auto Review

Perform the following procedure:

- 1. In the manual cine review status, use the [Auto Play] to set the review speed to activate auto cine review.
 - In the auto cine review status, rotate the knob under the [Auto Play] on the touch screen to adjust the review speed.
- 2. Exit: Tap [Auto Play] on the touch screen, or use the trackball, the auto review state becomes manual cine review.

Setting scope of Auto Review

You can set a segment of cine loop which can be reviewed automatically. After the auto review scope is set, the auto cine review can only be performed within this scope; but the manual cine review can be performed beyond this scope. When the cine file is saved, only the images within this scope are saved.

NOTE:

You can perform cine review on each image window in the dual/quad splitting mode, and set auto review region for each window.

Perform the following procedure:

1. Set the start frame:

Rotate the knob under [Start Frame] in the touch screen to manually review the images for the frame you want to set as the start point; or manually review the cine file by trackball and tap [Set Begin] on the touch screen to set current frame to be the start point.

2. Set the end frame:

Rotate the knob under [End Frame] in the touch screen to manually review the images for the frame you want to set as the end point; or manually review the cine file by trackball and tap [Set End] on the touch screen to set current frame to be end.

- 3. Press the knob under [Auto Play] on the touch screen. The system plays the auto review region automatically.
- 4. Rotate the knob under [Auto Play] to increase/decrease the auto play speed.
- 5. In the auto cine review, press the knob under the [Auto Play] on the touch screen or rolling the trackball will stop the auto cine review and enter the manual cine review.
- 6. Tap [Jump To First]/ [Jump To Last] to review the first or last image.
- 7. Rotate the knob under [Adjust Frame] to review the cine frame by frame.


13 - 4 Operator's Manual

13.4.3 Cine Review in M/PW/CW/TVD Mode

Enter cine review in M mode, PW mode, CW mode TVD mode, and then use the trackball the cine images are displayed on the screen one by one.

Move the playback mark to the left by using the trackball. The review progress slider moves to the left, the images moves to the right, and the earlier stored images are invoked. Whereas move the playback mark to the right by using the trackball, the review progress slider moves to the right, and the images move to the left, the recently stored images are invoked. When the image goes to the first/last frame, the cine is played in loop with the trackball moving left or right.

The cine progress bar at the bottom of the screen (as shown in the figure below):

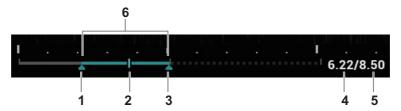

1	Start mark	2	Playback mark
3	End mark	4	Time played
5	Total time	6	Auto Review Region

Cine review operations are the same as these of 2D mode.

NOTE:

There is no audio when the spectrum is reviewed in manual status but audio synchronization can be realized in auto review status with speed of $\times 1$.

13.4.4 Linked Cine Review

The linked cine review refers to review of the images captured at the same moment.

- B/Color/Power/TVI/TEI dual live
- B/B dual live
- B+M synchronization mode
- B+PW/TVD duplex mode
- TVM, CM triplex mode



1	Frame synchronization mark	2	Playback progress bar
	-		

The frame synchronization mark
on the time mark of M/PW image indicates the corresponding 2D image and M/PW image. In statuses other than dual live status, you can only review images in the currently active window.

Operator's Manual

13.5 Image Compare

13.5.1 Image Compare in Review Mode

NOTE:

For B/B+COLOR/B+TVI/B+POWER/B+TEI mode image, you can select at most 4 images; for PW/M/CW/TVD mode image, you can select at most 2 images.

Perform the following procedure:

- 1. Tap [Compare] on iStation screen or Review screen.
- 2. Select the images for comparison.

Click to select the image, and the icon papears on the image, which indicates the image is to be compared.

If select the wrong image, click the image again to cancel the selection.

- Select image size display on "Thumbnail Size" bar to display more images at a time.
- Image compare of different exams for the same patient: Select "All" in the drop-down list of "Exam History" to see all exam files, then you can select different images of different exams to compare.
- 3. Repeat the step 2 above to add the image to be compared.

There is "Display" column you can filter the images by selecting "All Items", "Selected", "Unselected".

Click [Clear Selected] to clear all selected images.

- 4. Click [OK] to enter image comparison.
- 5. Switch the multi-frame cine among the windows to review (single-frame image cannot be reviewed).
 - Press < Dual > to toggle between the two images.
 - Press the user-defined key for "Quad" to switch among 3-4 images.

The window with the highlighted "M" mark is the current activated window.

You can select the image to be reviewed at synchronous time when the multi-frame image is reviewed by using [Sync Play].

- 6. Save the image if necessary.
- 7. Click [Return] on the screen or press <Freeze> to exit image compare.

13.5.2 Frame Compare

NOTE:

Cine compare can only be performed for B/C mode image only. The image on dual/quad window cannot be compared.

Perform the following procedure:

- 1. Freeze the image in B/C mode, tap [Frame Compare] in "Cine" page on the touch screen to enter frame comparison mode.
- 2. Review the images of different image windows (cine replaying can't be performed for single-frame image file), press <Update> or <Dual> key to switch the active image window.

13 - 6 Operator's Manual

3. Save the image if it is necessary.

Measurements, adding comments and body marks are allowed.

4. Tap [Frame Compare] again to return to image frozen status; press <Freeze> to enter real-time imaging.

13.5.3 iCompare

NOTE:

iCompare can only be performed on B, Color, Power, PW, CW, or M mode for FRM/CIN/PNG/DCM files.

Perform the following procedure:

- 1. Set the user-defined key to enter iCompare.
- 2. In live mode or freeze mode, press the user-defined key for iCompare.
- 3. Select a single-frame image, multi-frame image, or screenshot in the iStation screen, Review screen, or thumbnail area in the main screen.
- 4. Press the <Dual> key to switch between the left and right windows. Roll the trackball to review the cine image on the screen one by one.

The window with the highlighted "M" mark is the current activated window.

When the left window is a screenshot, you cannot switch windows.

5. Save the image if it is necessary.

Measurements, adding comments and body marks are allowed.

6. Press , user-defined <Single> key, or the user-defined key to exit iCompare.

13.6 Cine Saving

Live Capture

Live capture refers to saving the images or cines in image scanning status; after the storage, the system continues image scanning.

Live capture can be divided into 2 kinds: retrospective and prospective.

- Retrospective saving is to save the specified images before the current moment; to save the images stored in the cine memory to the system hard disk.
- Prospective saving is to save the specified images later than the current moment; to save the images to both the cine memory and the system hard disk.

The live capture time can be set in "Cine" page on the touch screen.

In imaging mode, tap [Pro Capture]/[Retro Capture] on the touch screen or press the user-defined key for "Save Cine (Prospective)/Save Cine (Retrospective)" on the control panel.

NOTE:

- Press the save key again or <Freeze> to stop saving.
- When a saving is completed, a thumbnail is showed in the Thumbnail area.

Operator's Manual

Frozen Image Storage

In frozen mode, tap [Pro Capture] / [Retro Capture] on the touch screen or press the user-defined key (The key has already been assigned the function as "Save Cine (Prospective)/Save Cine (Retrospective)").

After the cine is successfully saved, there is a thumbnail displayed on the screen.

13.7 Setting Cine Length

NOTE:

The system ends up saving if the cine length goes beyond the maximum value.

13.7.1 Live capture

Prospective Cine Length

Prospective cine duration: set the time that the user taps [Prospective] as the start time. The system proceeds saving the cine.

- With the ECG disabled: tap [Cine] tab, and rotate the knob under the [Time(Pro)] on the touch screen to adjust it.
- With the ECG enabled: tap [Cine] tab. Tap [Loop Type(Pro)] to choose the type of the saving time and the cardiac cycles. Rotate he knob under the [Time(Pro)]/[Cycles(Pro)] on the touch screen to adjust it.

Retrospective Cine Length

Retrospective cine duration: set the time that user taps [Retro] when playing the first frame of the image. It also refers to saving the cine or cycles retrospectively.

- With the ECG disabled: tap [Cine] tab, and use [Time(Retro)] to adjust it.
- With the ECG enabled: tap [Cine] tab. Tap [Loop Type(Retro)] to choose the type of the saving time and the cardiac cycles. Use [Time(Retro)] or [Cycles(Retro)] to adjust it.

13.7.2 Freeze Storage Setting

The first frame of the image starts when the user presses <Freeze> at the first time. The system saves the cine in the auto review scope retrospectively.

Press <Freeze> to freeze the image. Use [Time(Retro)] to set the cine time of retrospective saving in frozen status under Cine page, or mark the start frame in the auto review scope to set the cine time of retrospective saving in frozen status.

NOTE:

It is only available to save the cine retrospectively in the frozen status.

13 - 8 Operator's Manual

14 Measurement, Comments and Body Mark

14.1 Measurement

There are general measurements and application measurement. You can perform measurements on a zoomed image, cine reviewing image, real-time image, or frozen image. For measurement details, please refer to the "Advanced Volume".

MARNING

- Be sure to measure areas of interest from the most optimal image plane to avoid misdiagnosis from inaccurate measurement values.
- To obtain accurate Doppler flow measurement values, make sure the transmitting beam is not perpendicular to the flow, otherwise false readings and potential misdiagnosis may result.

ACAUTION

- If an image is unfrozen or the mode is changed during a measurement, the calipers and measurement data will be cleared from the screen, but the measurement data will be stored in the report.
- If the system is turned off or [End] is selected during a measurement, the data not saved will be lost.
- In Dual-B imaging mode, the measurement results of the merged image may be inaccurate. Therefore, the results are provided for reference only, not for confirming a diagnosis.

Measurement Accuracy

Error of 2D Images

Parameter	Value Range	Error
Distance	Full screen	Within ±3%
Area	Full screen	Within ±10%
Circ	Full screen	Within ±10%
Angle	Full screen	Within ±3%
Volume	Full screen	Within ±10%

Operator's Manual

Parameter	Value Range	Error
Distance (iScape View)	Full screen	Within ±5% (for linear, wide-convex, and phased probes)
	Full screen	Within ±10% (for micro-convex probes)

• Error of 3D Images

Parameter	Value Range	Error
Distance	A/B/C sectional plane image (MPR), CMPR sectional plane image	Within ±5%. (not including Smart 3D)
Area	A/B/C sectional plane image (MPR), CMPR sectional plane image	Within ±7%. (not including Smart 3D)
Circ	A/B/C sectional plane image (MPR), CMPR sectional plane image	Within ±10%. (not including Smart 3D)
Angle	A/B/C sectional plane image (MPR), CMPR sectional plane image	Within ±5%. (not including Smart 3D)
Volume	A/B/C sectional plane image (MPR)	Within ±20%. (not including Smart 3D)

• Time/Motion Measurements

Parameter	Value Range	Error
Distance	Full screen	Within ±3%
Time	Timeline Display	Within 2%
Heart rate	Timeline Display	Within ±4%
Velocity (PW mode)	10-200 cm/s (for non-transcranial application)	When angle $\leq 60^{\circ}$, $\leq \pm 5\%$
	20-100 cm/s (for 7LT4s, L16-4Hs; transcranial application)	Within ±20%
	10-300 cm/s (for SP5-1s, P10-4s, P8-2s, SP5-1E, SP5-1U, C11-3s, SP5-1Ns; transcranial application)	
Velocity (CW mode)	10-200 cm/s (for non-transcranial application)	When angle ≤ 60°, within ±5% (not including pencil probe) Within ±15% (pencil probe)
	10-300 cm/s (for transcranial application)	Within ±20% (not including pencil probe) Within ±10% (pencil probe)

• Auto Measurements

Measurement Item	Error
Smart Volume	Within ±20%
Smart V Trace	Within ±20%
Smart OB	Within ±10%

14 - 2 Operator's Manual

Measurement Item	Error
Smart NT	Within ±10%
Smart FLC	Within ±20%
Smart Fetal HR	Within ±10%
Smart ICV	Within ±20%
Smart ERA	Within ±20%
Smart Hip	Within ±20%
Smart HRI	Within ±5%
Smart Trace	Within ±5%
Smart Calc	Within ±10%
Smart IVC	Within ±10%
Smart VTI	Within ±10%
Smart B-line	Within ±10%
AutoEF	Within ±10%
IMT	Within ±10%
RIMT	Within ±10%
Smart Planes CNS	Within ±20%
Smart Pelvic	Within ±20%
R-VQS	Within ±10%
Smart Bladder	Within ±10%
TTQA	Within ±20%
FH Tissue Tracking QA	Within ±20%
HRI ⁺	Within ±10%
USAT	Accuracy: Within ±5% Repeatability: Within ±5%

NOTE:

Within the selected field range, the measurement accuracy is ensured within the range mentioned above. The accuracy specifications are performance in the worst conditions, or based on the real test for the system, regardless of acoustic speed error.

Other

– IOTA

Sensitivity: 100% Specificity: 86.27%

Biopsy Grid

When depth ≤ 4 cm, ≤ 5 mm; When depth > 4 cm, ≤ 10 mm

Operator's Manual

14.2 Comments

Comments can be added to an ultrasound image to bring attention, notate or communicate information observed during the examination. You can add comments to: zoomed image, cine review image, real-time image, frozen image. You can type the character as comments; insert the pre-defined comments from the comment library; insert arrow markers or add the trace.

MARNING

You must ensure that the entered comments are correct. Incorrect comments may lead to misdiagnosis.

14.2.1 Comments Basic Procedures

To perform a comment:

- 1. Enter comment status:
 - Press <ABC>.
 - Press any alphanumeric key to enter the comment status, and the corresponding letter or numeral is displayed besides the cursor.
 - Press <Arrow> on the keyboard to enter the arrow-adding status.
- 2. Place the cursor to the desired place to set the comments location.
- 3. Add a new comment to the image according to actual situation. Here, you can modify, move, delete, hide or display a completed comments.
- 4. To exit comments status:
 - In the arrow-adding status, press <Arrow> on the keyboard.
 - Press <ESC> or other operating mode keys to exit.

14.2.2 Touch Screen Displaying

• Return the cursor to the set home location.

Press <Home> on the keyboard; the cursor returns to the start position.

Crab/Del

Rotate the knob under the [Grab/Del Word] button on the touch screen, to select the entered comments items; press the knob to delete the selected item.

Navigate through comments libraries

To select the comment library, rotate/press the knob under the [Library] button on the touch screen.

Set comments

Tap [Setting] to enter.

- Change active text color/fix text color: select a desired color block to change the active
 text color or fix text color. The default active text color is green and fix text color is
 yellow.
- Change Arrow style: Select ♠, 反, → or Ţ.
- Change Arrow Size: Drag the slider or tap the -/+ button to select arrow size.
- Change text size: Drag the slider or tap the -/+ button to select text size.
- Comment Display

Tap [Hide Text]/[Show Text] to display or hide the comments.

14 - 4 Operator's Manual

User-defined

Adjust comments display on touch screen menu, including adding/deleting comments.

Page-turning

If there is more than one page of comment texts for the current exam mode, you can slide to view more.

• Quickly select a comment in a group

Configure groups to List 1, List 2, and List 3. Select a comment in a group by pressing or rotating the Knob under the [List 1], [List 2], or [List 3] button on the touch screen. The selected comment is displayed in the main screen synchronously.

14.2.3 Adding Comments

Adding an Comments Text

Perform the following procedure:

- 1. Press <ABC> to enter the comment status.
- 2. Use the trackball or press direction-control keys on the keyboard to move the cursor to the desired location for comments.
- 3. Do one of the following to add a comment:
 - Tap the desired comment text on the touch screen, the system adds the selected comment text onto the screen where the cursor is anchored, you can edit the comment directly.
 - Type the alphanumeric characters through the keyboard.

In the edit status, tap \(\bigcup \) to move the cursor to the new line, and the location of the cursor is aligned with that of the first line.

4. In comments edit status, press <Set> or move the cursor to confirm the added comments text and exit the edit status.

Adding an Arrow

You can add an arrow to a location where you want to pay attention.

Perform the following procedure:

- 1. Press <Arrow> on the keyboard, and an arrow will appear in the default position.
- 2. Adjust the arrow in shape and position.
 - Adjust the position and orientation of the arrow: roll the trackball to the desired position and rotate the trackball to decide the orientation of the arrow.
 - To change the orientation of the arrow: rotate the <Angle> knob to change the arrow's orientation (in increments of 15°).
- 3. Press <Set> or <Enter> to anchor the arrow position, and then the arrow becomes yellow.
- 4. Press <Arrow> on the touch screen to exit the arrow comment status.

Trace

In comment status, tap [Trace] on the touch screen to activate trace function, and the current image is also displayed on the touch screen.

Using the control panel:

- 1. Use the trackball to move the cursor to a desired position, and press <Set> to confirm the start point.
- 2. Use the trackball to move the cursor along the edge of the desired region and trace the outline of the region.

Operator's Manual 14 - 5

- Rotate the <Angle> knob counter-clockwise to cancel 1 pixel of trace.
- Rotate the <Angle> knob clockwise to restore 1 pixel of trace.
- Short press <Clear> to clear last trace. Long press <Clear> to delete all tracing.
- 3. Press <Set> to finish the tracing.

Using the touch screen:

- 1. Trace around the ROI by taping the touch screen image using your finger.
- 2. Remove your finger to finish the tracing.
 - [Clear]: tap to delete the trace in reverse order one by one.
 - [Clear All]: tap to delete all traces.
- 3. Tap [Exit] to exit the tracing.

14.2.4 Moving Comments

NOTE:

If image size and position changed due to display format switching, then the position of the comment can be changed, too.

Perform the following procedure:

- 1. Select the comment to be moved.
- 2. Use the trackball to move the comment to the new position.
- 3. Press <Set> to anchor the comment in the new position, and the comment-moving operation is complete.

14.2.5 Editing Comments

Modifying characters

Perform the following procedure:

- 1. In comment status, move the cursor onto the comments to be modified.
 - Press alphabetic keys to enter the character to the cursor position directly.
 - Or, double press <Set> to enter comment editing status, and use the direction-control keys
 to move the cursor to the desired location to insert/delete characters; you can either type
 characters by pressing the corresponding keys or select the new comment text from the
 menu.
- 2. Press on the keyboard to delete the comment character or text on the right side of the cursor; press (x) to delete the comment character or text on the left side of the cursor.
- 3. Press <Set>, or move the cursor to confirm the added comments text and exit the edit status.

If there are already comments on the screen, press the space bar to enter editing status.

Modifying Arrows

Perform the following procedure:

- 1. Move the cursor on the arrow that needs to be modified. After the cursor becomes ♣, press <Set>. There is a frame around the arrow, indicating the arrow can be edited. Move the cursor to change the arrow position.
- 2. Rotate the <Angle> knob to modify the arrow's direction.
- 3. Press <Set> to complete the operation.

14 - 6 Operator's Manual

14.2.6 Deleting Comments

Deleting Comments Characters, Texts or Arrows

Perform the following procedure:

- 1. Move the cursor to the comments to be deleted.
- 2. Press <Set> to select the comment.
- 3. Press <Back>, , <Delete Word> or <Clear> on the keyboard to complete the deletion. Or, rotate the knob under [Grab/Del Word] on the touch screen to select the comment, then press the knob to delete the comment.

Deleting a recently-added character, text or arrow

Perform the following procedure:

- 1. In comment status, press <Clear> on the control panel to delete the latest added/modified comment unit.
- 2. Enter letters by pressing the alphanumeric key on the keyboard and use blank key to divide the letters. Tap [Del Text] on the touch screen to delete latest added/modified comment unit and enter comment status.

Delete letters one by one

In comment editing status, use \propto on the keyboard to delete letters before cursor "|". In comment editing status, use on the keyboard to delete letters after cursor "|".

Erase All Text

NOTE:

- When no item is selected, press <Clear> will clear all comments and all measurements calipers.
- After powering off, the system will clear all comments on the image.

Press < Delete Word> key on the keyboard, long press < Clear> key, or tap [Del Text] on the touch screen to delete all the comments.

14.3 Voice Comments

The system supports adding voice comment to the frozen images.


NOTE:

To perform voice comments adding, the function should be enabled through the path: [Setup] > [System] > [Application]. Check "Voice comment enabled". The voice comment panel appears on the right corner of the screen.

Operator's Manual 14 - 7

14.3.1 Voice Comment Panel

After the system enters the voice comment status, the voice comment panel will be displayed on the lower right corner of the screen.

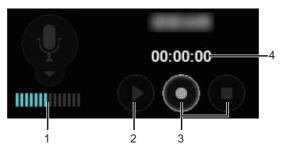

1	Recording	2	Start Play
3	Start/Stop Recording	4	Duration

14.3.2 Adding Voice Comments

NOTE:

- In voice comment recording status, you can perform measurements, comments adding, body marks adding, print tasks and DICOM tasks.
- If you press <Freeze> during the recording course, the already recorded voice comment cannot be saved.
- 1. Connect the microphone to the mic port of the front I/O panel. The microphone icon appears highlighted.
- 2. Press <Freeze> after obtaining the image. Press <Cursor> and roll the trackball to move the cursor onto the voice comment panel; tap (•) to start recording and the icon (•) becomes red.
- 3. After the voice recording ends, tap the icon () to end recording.
- 4. Save the cine.

14.3.3 Voice Comment Review

Click to open a cine file with voice comment, and during the cine review mode, voice comments are played as well.

14.4 Body Mark

NOTE:

After powering off, the system will clear all comments on the image.

The Body Mark feature is used for indicating the exam position of the patient and transducer position and orientation.

You can preset the system configured general body marks for each exam mode. The system supports the import of user-defined body marks.

14.4.1 Touch Screen Display in Body Mark

The body mark touch screen displays the settings for the current mode:

14 - 8 Operator's Manual

Library

Rotate the knob under the [Library] button on the touch screen or press the knob to switch the body mark library, the corresponding body marks are shown on the left.

Page-turning

If there is more than one page, slide the touch screen to turn the page.

Save Probe

Under the condition that the probe mark direction and position is determined for the current adding body mark, tap [Save Probe] to save the current direction and position for the probe mark of the current body mark.

14.4.2 Adding Body Mark

Perform the following procedure:

- 1. Press <Body Mark> to enter the Body Mark status, tap [Library] to select the body mark category.
- 2. Adding Body Marks:
 - Adding the body mark using the trackball and <Set> key.
 Move the cursor onto the desired body mark to highlight your choice, and press <Set> to add the body mark.
 - Adding the body mark using the touch screen.
 Tap the desired body mark on the touch screen directly.
- 3. To adjust the probe position and orientation marker.
 - Use the trackball to place the probe marker at the correct position.
 - Rotate <Angle> to adjust the mark's direction.
 - Tap [Save Probe] to save the current direction and position for the probe mark of the current body mark.
- 4. Press <Set> to confirm the position and orientation of the probe marker and exit the body mark mode.

14.4.3 Moving Body Marks

You can move the body mark graphics to any desired position within the image area.

NOTE:

In Dual B Mode, a Body Mark cannot be moved between the separate image windows.

Perform the following procedure:

- 1. Press <Cursor> and move the cursor onto the body mark. The cursor then becomes \(\phi\), indicating you can move the Body Mark graphic to a new position.
- 2. Press <Set> to select the body mark.
- 3. Move the Body Mark graphic to the desired position.
- 4. Press <Set> to anchor and confirm the new graphic position.

Operator's Manual

14.4.4 Deleting Body Marks

NOTE:

- Preset returning, switching the exam mode/patient/probe will clear the body marks.
- Set if body mark is erased when the image is unfrozen, see "4.1.4 Application".

Perform the following procedure:

- 1. Press <Cursor> and move the cursor onto the body mark. The cursor then becomes \clubsuit .
- 2. Press <Clear> to delete the body mark.

14 - 10 Operator's Manual

15 DICOM/HL7

NOTE:

- Before using DICOM, please read the electronic file DICOM CONFORMANCE STATEMENT along with the device.
- The DICOM package is optional, so the description here is only applicable for the system configured with the DICOM package.

The chapter is confined to the preset, connection verification and DICOM services of the DICOM-configured ultrasound machine, not including SCP configurations like PACS/RIS/HIS.

This system supports the following DICOM functions:

- Verify Connectivity
- DICOM Storage
- DICOM Print
- · DICOM Worklist
- MPPS (Modality Performed Procedure Step)
- Storage Commitment
- Query/Retrieve
- Structured Report
- DICOM Medium Storage (DICOMDIR Review)
- DICOM Task Management

If all the DICOM presets on the DICOM Service Preset screen are completed, you are ready for the Storage, Print, Worklist (HL7 Query), MPPS, Storage Commitment and Query/Retrieve applications. For detailed information about DICOM presets, see "4.7 DICOM/HL7".

Terms:

Abbreviations	Description
DICOM	Digital Imaging and Communications in Medicine
AE	Application Entity
MPPS	Modality Performed Procedure Step
PDU	Protocol Data Unit
SCU	Service Class User (DICOM client)
SCP	Service Class Provider (DICOM server)
SOP	Service-Object Pair
TLS	Transport Layer Security

Operator's Manual

15.1 DICOM Storage

DICOM Storage is used to send images (single-frame or multi-frame) or structured report to the DICOM storage server for storage.

15.1.1 Send images on iStation/Review/Main screens

Perform the following procedure:

- 1. Do one of the following to select images:
 - Press <F2 iStation> to enter the iStation page. Click to select a patient or an exam record
 in the list. Thumbnails are displayed in the thumbnail area in the lower part of the screen,
 and then click to select a thumbnail or the cine. Or, select an exam or exams from the
 patient list (there should be images for this exam).
 - Tap [Review] on the exam main screen to enter the Review screen. Click to select a thumbnail or the cine.
 - On the main screen, select a thumbnail or the cine.
- 2. Click ⊕ in the top-right part or [Send To] to bring up the Send To dialog box.
- 3. Click to select "DICOM" in the Target box on the left side, then select the DICOM storage server in the Storage Server box on the right side, and click [OK].

15.1.2 To send images using a shortcut key

You can save single-frame images or multi-frame images to a DICOM server while saving to hard drive using a shortcut key.

NOTE:

To define the shortcut key, for details see "4.1.8 Key Board".

Start the ultrasound exam scan. Press the user-defined key to send the image or the cine to DICOM storage.

15.1.3 To send images to storage after an exam ends

NOTE:

To preset Sending/printing after End Exam, for details see "4.1.2 General".

Start the ultrasound exam scan. Tap [End] to send the image or the cine to DICOM storage automatically.

15.1.4 Structured Report (SR)

The system supports OB/GYN structured report, Cardiac structured report, Breast structured report, Abdomen structured report, Small Parts structured report, Urology structured report, Pediatric structured report and Vascular structured report.

The SR can be sent when meeting the following procedures.

- DICOM structured report installed with the corresponding exam mode;
- The exam mode is: OB, GYN, cardiac, Abdomen, vascular, Small Parts, Urology, pediatric and breast;
- Send in the unit of single exam;
- Unable to sending the SR if the state is Cancel or Pause.

15 - 2 Operator's Manual

Set the storage option to Attach SR When Store Images, or Only Store SR.

Send SR on iStation.

- 1. Choose the storage option to Attach SR When Store Images, or Only Store SR.
- 2. Create new patient information or load the patient information.
- 3. Perform obstetric (gynecology, cardiac, Abdomen, Urology, Small Parts, breast or vascular) measurements.
- 4. Save the image or the cine.
- 5. End an exam.
- 6. Click [Send Exam] on iStation page.
- 7. Select DICOM in the storage server list, and select a server in the "Storage Server" list.
- 8. Click [OK], the status of sending task can be viewed in DICOM task management. After successful storage of both image and structured report; you can see the storage commitment mark "\" in the list below in the iStation screen.

15.1.5 Encapsulate PDF

Encapsulate PDF refers to the PDF file is encapsulated in DICOM IOD.

Encapsulated PDF is sent by following the procedures below:

- Send in the unit of single exam.
- The exam with the state of End, Cancel or Stop cannot be sent as encapsulated PDF.
- Check "Encapsulated PDF" in the storage service preset.
- If there is an exam result in the report template, this type of exam should be performed.

Sending the exam or archiving the exam can send the encapsulated PDF file.

15.1.6 Unload DCM file

The image can be unloaded to DCM format and send to the storage media, iStorage.

Perform the following procedure:

- Select the image, and click →.
- 2. Select [Target] > [iStorage] to export the image in DCM format.
- 3. Click [OK] to send DCM format file to the external media

15.2 DICOM Print

DICOM Print is used to send images to the DICOM print server for printing.

Print images on iStation/Review/Main screens

Perform the following procedure:

- 1. Do one of the following to select images:
 - Press <F2 iStation> to enter the iStation page. Click to select a patient or an exam record in the list. Thumbnails are displayed in the thumbnail area in the lower part of the screen, and then click to select a thumbnail. Or, select an exam or exams from the patient list (there should be images for this exam).
 - Tap [Review] on the exam main screen to enter the Review screen. Click to select a thumbnail.
 - On the main screen, select a thumbnail or the cine.

Operator's Manual 15 - 3

- 2. Click

 in the top-right part or [Send To].
- 3. Click to select "DICOM" in the Target box on the left side, then select the DICOM print server on the right side, and click [OK].

To send images using a shortcut key

You can send single-frame images to a DICOM print server while saving to hard drive using a shortcut key.

- 1. Define the short key.
- 2. Set a default printer server.
- 3. Press the shortcut key to send the image to the hard disk; the system also sends the single-frame file to the printer server.

To send images to DICOM Print after an exam ends

NOTE:

Preset Sending/printing after End Exam, for details see "4.1.2 General".

Start the scan and obtain the image. Each time [End] is tapped, the system will send the image to the default DICOM print server for printing.


15.3 Worklist

When the DICOM basic package is configured and the Worklist server has been set, click [Worklist] in the "Patient Info" screen to query or import the patient data.

The system supports: DICOM and HL7.

Perform the following procedure:

- 1. Tap [Info] on the touch screen to enter the patient information page.
- 2. Click [Worklist] to enter the Worklist page.

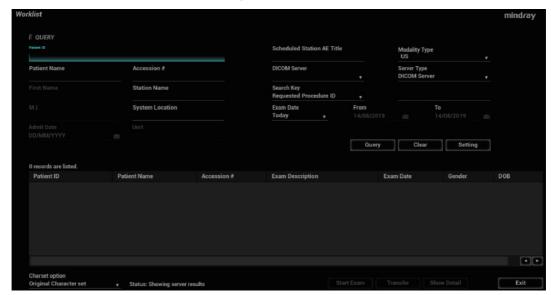

- 3. Guarantee the data source: after select the service type, select the worklist server from the corresponding server.
- 4. Input the searching condition:

15 - 4 Operator's Manual

- "DICOM Server": Search via patient ID, accession #, key words, AE title, worklist server or exam date.
- "HL7 Server": Search via patient ID, patient name.
- 5. Click [Query]. The scheduled patients, which meet the criteria, are displayed in the lower part of the screen.
 - After the first query, you can perform the second query based on the preview results. The scheduled patients in the list will update in real time.
 - Enter patient ID, patient name, accession # and exam date, the system affords the result in real-time.
 - Select the keyword type, enter the keywords and then click [Query] to search.

To reset the criteria, click [Clear] button.

- 6. Select the desired patient from the list.
 - Click [Start Exam], the patient information is imported into the system and then an exam
 is started.
 - Click [Transfer], the patient information is imported into the "Patient Info" screen and it is opened. After you edit the patient information in the "Patient Info" screen, click [OK] to start a new exam.
 - Click [Show Detail] to see details of patient data.
- 7. Click [Exit] to exit the Worklist.

15.4 MPPS

MPPS is used to send exam state information to the configured server. This facilitates the other systems in obtaining the exam progress in time.

After you preset the Worklist server and MPPS server, if the system obtains the patient information from Worklist server to begin the exam, it will send exam status information to MPPS server of when the exam is undergoing or ended. If the sending fails, the system resends automatically.

15.5 Storage Commitment

Storage commitment is used to confirm whether the images or structured reports are successfully stored on the DICOM storage server.

Before using storage commitment, set the associated storage service

If images are successfully sent to the storage server, the storage commitment server will return to the information about the successful image storage. In the iStation screen, you will see a tick " $\sqrt{}$ " marked in the list below \square .

NOTE:

Multi-frame storage is not allowed if "Allow Multiframe" is not selected. Even if there is a multi-frame file in the exam to be sent, only single-frame image storage will be performed. After the storage is complete, there is no " $\sqrt{}$ " marked in the list of the iStation screen.

15.5.1 Storage commitment after sending images on the iStation screen

Select the image, the cine or the data, and send it, see "15.1 DICOM Storage".

Operator's Manual 15 - 5

The system will send all the images stored in the exam record to the storage server. Meanwhile, it will send storage commitment to the storage commitment server.

15.5.2 To send storage commitment automatically after an exam ends

NOTE:

- Preset "Sending/printing Image After Ending Exams", for details see "4.1.2 General".
- Set the default storage server, and click "StorageCommitment" to connect to the storage server, see "4.7.2 DICOM Service Preset".

Start the scan and obtain the image. Tap [End] each time; the system will send the image to the default DICOM storage server for storage and send storage commitment to the storage commitment server.

Storage commitment is confined to the whole exam. Not each image sending can be indicated.

15.6 Query/Retrieve

The query/retrieve function is used to query and retrieve patient exam records in a designated server.

After setting the DICOM query/retrieve server, you can perform the query/retrieve function in the iStation screen.

- 1. Press <F2 iStation> on the control panel.
- 2. Select [Query/Retrieve] to open Query/Retrieve screen.
- 3. Select the server in the "Server and Service" area (both the source and the destination) and query level.

NOTE:

- If the level is set to "Study", all images and cines under this "Study" level will be retrieved.
- If the level is set to "SERIES", all results under the "series" level will be retrieved.
- 4. Enter the query information, such as Patient ID, Patient Name, Accession #, Exam Date or key words.
 - Select [Clear] to empty the entered query information.
- 5. Select [Query]. The system performs the query and lists the results in the patient (source) list. You can perform further queries based on the results by entering new query information.
- 6. Select one or more patient records according to the actual situation.
 - Select [Select All] to select all the patient records in the list.
 - Select [Deselect All] to deselect all the patient records in the list.
- 7. Select [Retrieve] to retrieve the patient records in the DICOM query/retrieve server to the local machine.
- 8. Select [Exit]. The retrieved patient records are listed in the iStation screen.

15 - 6 Operator's Manual

15.7 DICOM Media Storage (DICOMDIR Review)

Patient data in the ultrasound system can be saved on external media in DCM format, while DCM files can be accessed in the ultrasound system.

DICOM media storage and DICOMDUR review should meet the following conditions:

- There is a DVD disk in the ultrasound device, and it works well.
- File system format of CD/ DVD optical file should be ISO9660, and the optical disk should not be damaged.
- File system format of DVD optical file should be UDF, and the optical disk should not be damaged.
- Normally read/write data from the USB ports on the ultrasound system.
- File system format of removable device (USB flash drive) is FAT32 and the media should not be damaged.

15.7.1 Media Storage

Perform the following procedure:

- 1. Select patient records in the iStation screen.
- 2. Select [Send Exam] in the menu which appears to open the dialog box.
- 3. Select the destination to "DICOMDIR" and DICOM Format as well as compression mode. You can select to delete the exam or the image after the backup, and select to hide patient information.
- 4. Select [OK]. The image from the current exam is sent to the external storage media in DICOM format.

If the backup is successful, a tick will appear in the Backup list in the iStation screen. If not, there will be no tick.

NOTE:

There must be no DICOMDIR/DCMIMG/IHE_PDI files on the external storage media of the same name as the one being backed up. Otherwise, the backup cannot proceed. Ensure there is enough storage space, or the backup may fail due to shortage of space.

15.7.2 Media review

Perform the following procedure:

- 1. Connect the external media with DCM files to the system.
- 2. Select the data source in iStation screen, and the visible data will be shown.

If there are several types of data on the media, the system will ask you to select the format. Then, click [DICOMDIR].

15.7.3 Data Restore

NOTE:

Only system-accessible media can be selected.

After the DICOM format data are saved to external media, restore the data to the ultrasound system. Connect the external media containing DCM files to the system.

Operator's Manual 15 - 7

- 1. In iStation, review the data stored on the external media.
- 2. Select the data to be restored in iStation.
- 3. Click [Restore Exam] on the iStation screen.

15.8 Showcase Recording

NOTE:

To view the DCM files successfully, it is suggested to install NET Framework (Visual Studio.Net) of a version later than 2.0, if your computer was installed with TortoiseSVN.

Showcase software can be employed for DICOM image file viewing.

When files and structured reports are saved in DCM format through DICOMDIR and sent to storage devices, the showcase can be sent to the storage devices together. Connect the storage device, and the user can view files in DCM format through showcase.

15 - 8 Operator's Manual

16 Patient Data Management

An exam record consists of all information and data of one exam.

An exam record consists of the following information:

- Patient basic information and exam data
- · Image files
- Report

NOTE:

- DO NOT use the internal hard drive for long-term image storage. Daily backup is recommended. External storage media is recommended for archiving images.
- The system patient database space is limited, please back up or clear patient data in time.
- Compression type for image compression and storage may cause loss of image data.
- Mindray is not responsible for lost data if you DO NOT follow suggested backup procedures.

16.1 Image File Management

You can store the image files either in the patient database in the system, or to external memory devices. For a save image, you can perform operations like image reviewing, analyzing and demonstration.

16.1.1 Storage Media

System supported memory media including:

- System hard disk
- USB memory devices: USB flash drive, removable USB hard disk
- Optical disk

16.1.2 Image File Formats

The system supports file formats which belong to the system and file formats which are PC-compatible.

System-relevant formats

- Single-frame image file (FRM)
 Refers to single-frame static image files not to be compressed; you can perform measurements and comments adding on this type of files.
- Cine file (CIN)

System-defined multi-frame file format; you can perform manual or auto cine review, and perform measurements or add comments for the reviewed images. After you open a stored CIN file, the system automatically enters cine review status.

The system can save FRM files as BMP, JPG, TIFF or DCM files, or save CIN files as AVI, DCM files.

Operator's Manual 16 - 1

PC-compatible formats

- Screen file (BMP)
 - Single-frame file format, used to save the current screen, non-compressed format;
- JPG: Single frame export format.
- TIFF: Single frame export format
- Multi-medium files: Multi-frame export format.
- DICOM files

DICOM standard files format, single-frame or multi-frame format, used to record patient information and images; you can only open DCM files to view rather than to edit.

16.1.3 Image Storage Setting

- Set user-defined key and auxiliary output function.
- Set the image size.
- Set cine saving length.
- Set send/print image after end exam. Then every time you tap [End], the system will send images of the exam to the connected default DICOM server.

16.1.4 Saving Images to the System

The image is saved to the default path with the default name. The thumbnail of this image will appear in the thumbnail area on the right side of the screen. When you move the cursor onto the thumbnail, its filename with suffix will be displayed.

To save a single-frame image to the system quickly

Press the user-defined <Save Image> key to save the image.

- The image format is FRM in the imaging interface.
- When a dialog box is displayed on the current screen, press the user-defined key to save the screen in the PNG format.

To save cineloop image to the system quickly

Press the user-defined <Save Cine (Retrospective)/Save Cine (Prospective)> key to save the cine file in the default file directory in the CIN format.

Quickly Saving Full Screen Image to the System

Press the user-defined <Save Screen> key to save the image. The format of the image is PNG.

16.1.5 Saving Images/Cines File to USB Flash Drive

- Press the user-defined <Send Image to USB Disk> key to save the image to the USB flash drive.
- Press the user-defined <Send Cine to USB Disk> key to save the images to the USB flash drive.

16.1.6 Auxiliary Output Function

For the following three functions, the system provides auxiliary output function setting: "Save Image", "Save Cine (Retrospective)" and "Save Cine (Prospective)". When the corresponding user-defined key is pressed, the ultrasound system can perform multiple operations one by one as per the preset.

Save the single-frame image:

16 - 2 Operator's Manual

- Send image to DICOM Storage
- Send image to DICOM Printer
- Send image to USB Disk
- Send image to iStorage
- Send image to local default Printer
- Send image to Workstation
- Send image to Workstation Cache

Retrospective/prospective saving cine:

- Send cine to DICOM Storage
- Send cine to USB Disk
- Send cine to iStorage
- Send cine to Workstation
- Send cine to Workstation Cache

Taking "Save Image" as an example, add the auxiliary functions "Send Image to DICOM Storage" and "Send Image to USB Disk":

- 1. Set the user-defined key through the path: [Setup] > [System] > [iConsole&Footswitch]/[Key Board]. Select "Save Image" in the Output column.
- 2. The system will automatically show the available auxiliary functions for current key. Select "Send Image to DICOM Storage" and "Send Image to USB Disk".
- 3. Click [OK] to confirm.
- 4. Scan and freeze the image.
- 5. Press the user-defined key, then the system will perform three steps:
 - Save the image to the local hard disk.
 - Send image to DICOM Storage server.
 - Send the image to USB disk.

16.1.7 Thumbnails

The stored images or cineloops are displayed in the form of thumbnails on the screen:

- During image scanning, thumbnails of the current exam display in the Clip board/Thumbnails Area of the screen.
- In the iStation screen, the thumbnails of the current selected patient display at the bottom of the screen. When you move the cursor onto a thumbnail, its name and format will display.
- On the [Review] page, the thumbnails refer to the images stored in the same exam. When you move the cursor onto a thumbnail, its name and format will display.
- On the Review page, open images to enter the image analyzing status, all the thumbnails belong to the exam are displayed.

16.1.8 Image Review

The system supports the image review and analysis to the saved patient image.

You can review all images stored in an exam, and send, delete or analyze the stored images.

To enter image review

• Tap [Review] to enter review page. Images of the current exam and the current patient are displayed.

Operator's Manual 16 - 3

- During mapping mode, slide to left or right on the touch screen to review the image.
- Select an exam of a patient in the iStation screen, and click [Review] or double-click the exam to enter the Review screen to review the images of the patient.

During image scan, saved image thumbnails will display on the right of the screen. Move the cursor onto a thumbnail, and press <Set> twice to open the image; if the stored image is a cine file, double-click the thumbnail to enter the auto cine review.

Exit the review

Click [Exit] on the Review screen; or,

Press <ESC> or tap [Review] to exit.

Basic Operations

Select an exam from the [Exam History] drop-down list.

Double-click the image thumbnail to analyze an image.

The function buttons are described as follows:

Exam History

You can select one certain exam from the exam directory to review the image.

- If entered from iStation, the screen displays the record(s) selected in the iStation.
- If entered from the imaging status, the Review screen displays the images of the current exam, and the default selected image is the one displayed on the preview main screen.
- Info

Click to enter the Patient Info screen, you can review or edit the currently-selected patient information.

Report

Click to review or edit the currently-selected patient report.

- Image operations
 - [Select All]: click to select all images in the thumbnail window.
 - [Deselect All]: after clicking the [Select All], the button changes into [Deselect All], you can cancel all the selections by clicking [Deselect All].
 - [Send To]: click to send the selected image to other location, DICOM server, printer, MedSight, DVD, etc.
 - [Delete]: click to delete the selected image.
 - [Compare]: Image Comparison.
- Thumbnail Size

To change the thumbnail size.

- Switching operations:
 - [New Exam]: click to create a new exam for the selected patient and open the Patient Info screen.
 - [Activate Exam]: activate the ended exam, and enter the image scan interface.
 - [iStation]: click to enter the iStation screen.
 - [Exit]: click to exit the Review status, and return to the main screen.

16.1.9 Image Analysis

In the image analysis status, you can view, zoom, perform post processing and measurements, add comments and perform cine review for a stored image (FRM or CIN format). The operation steps are the same as those for real-time scanning; please refer to relevant sections for details.

16 - 4 Operator's Manual

To enter image analysis

- In the image scanning or freeze status, double-click a thumbnail stored in this exam to enter the image analysis status; or
- In the image review status, double-click the selected thumbnail to open the image.

To exit the image analysis

- Press <Freeze> to exit and enter the real-time scan status.
- Press [Return] to exit from the image analysis to the Review status. In image analysis status,
 the selected image is displayed on the screen, and the thumbnails of the same exam are
 displayed on the thumbnail area, you can turn pages using the buttons on the right side of the
 thumbnail.

16.1.10Sending Image File

NOTE:

Data saved this way can only be reviewed on the PC and cannot be restored to the ultrasound system.

Perform the following procedure:

- 1. Do one of the following to bring up the "Send To" screen:
 - In the main screen, select a stored image thumbnail and click
 ⊕ on the upper right corner of the image.
 - In the iStation screen, select a stored image and click →.
 - In Review screen, click → to send patient data to an external memory device.
 - In the Review screen, select a image and click [Send To].
- 2. Select from the destination:

Item	Description	
USB/iStorage	For external memory devices (e.g. USB memory devices, DVD	
	recorder) or network storage server, you can set:	
	PC format transfer.	
	DCM format transfer	
	Cine Zoom Mode.	
	Export the report or the report format.	
	Hide patient information.	
DICOM/Print/eGateway	Select the DICOM Storage, Print server or eGateway server.	
MedSight	Send the image to MedSight as necessary.	
	NOTE:	
	The file sent to MedSight is transferred into PNG format, and the cine file is transferred into AVI format.	

NOTE:

• If the transferred AVI file cannot be played normally on PC, please try to transfer the multi-frame cine file in MP4 format and try Send To function again, or use a VLC media player.

Operator's Manual 16 - 5

• You can select whether to hide patient info: if "Default Info" is selected, the patient name is hidden after backup; if "Custom Info" is selected, the system prompts a message requiring you to input the patient name, which will be displayed after backup.

16.2 Report Management

16.2.1 Report storage

The exam reports are stored under the directory of the exam of the patient.

16.2.2 Importing, exporting and sending a report

Import/export report via Backup

In iStation screen, select patient data, click [Restore Exam] or [Backup Exam] in the popped up menu to import or export patient information, images and reports from or to an external memory device.

Perform the following procedure:

- 1. Select the destination.
- 2. Select whether to remove from local HD after Backup:
 - If "Remove Exams" is selected, the patient information and images are removed.
 - If "Remove Images" is selected, only the patient images are removed.
- 3. Select whether to hide the patient information.
 - "Default Info": the patient name is hide after backup.
 - "Custom Info": the system prompts a message requiring you to input the customed patient name, which will be displayed after backup.
- 4. Select whether to encrypt backup exams for USB only: input the password and confirm password in the field box. Click [Backup], a "Patient.7z" compressed package is backed up to the USB device, and you need to input the password to open the package.

NOTE:

- If the password is forgotten, you cannot open the backup package.
- The password cannot be multi-language or Chinese characters.

Export report via Send To

In the iStation or Review screen, click [Send Exam] or [Send To] to send patient data to an external memory device (USB disk or disc) or network storage, you can choose if reports are exported.

Perform the following procedure:

- 1. Select [Export Report].
- 2. Select report type to be exported.
- 3. Select whether to hide the patient information.
 - "Default Info": the patient name is hide after backup.
 - "Custom Info": the system prompts a message requiring you to input the customed patient name, which will be displayed after backup.
- 4. Click [OK] to confirm.

The size of the report can be set, see "4.9 Print Preset".

16 - 6 Operator's Manual

16.3 Patient Data Management (iStation)

The patient data include basic patient information, exam information, image files and reports. You can search, view, backup, send, restore, delete or export patient data in iStation.

Do one of the following to enter iStation:

- Press <F2 iStation> key on the control panel
- Select [iStation] in the Patient Info screen.
- Click [iStation] in the Review screen.

16.3.1 Searching a Patient

Perform the following procedure:

- 1. Select the data source.
 - Click [Data Source] to select the data source of patient data, the system patient database is default.
- 2. Set search conditions.
- 3. Enter the key word. The matching patient information is displayed in the patient list.
- 4. When you select a patient in the patient list, the images of this patient will be displayed at the bottom of the screen.

16.3.2 Patient Data View & Management

Select the desired patient information in the list.

Item	Description
Review Image	Select an exam of a patient, click [Review Image] to enter Review screen.
Patient Info	Select an exam of a patient, click [Patient Info] to check the patient information of this exam.
Review Report	After you select an exam of a patient, click [Review Report] to view the report of this exam for this patient.
Delete Exam	 Select the patient record. Click [Delete Exam] to delete the exam. However, you cannot delete patient data being printed, exported or sent, or delete the current exam. To delete an image, select the image and click in on the right side.
Backup Exam	 You can back up the selected patient data to the system-supported media in order to view it on PC, or restore the patient data to the system from an external media. The exam after being backed up can be restored to the system for another review. Click to back up the selected patient data to the system-supported media. Original format: to back up the data in original format. DICOM format: you can change the cine compression mode, and JPEG compression mode. You can select whether to remove images or the whole exam record from the system.
Restore Exam	Click to import the patient data from an external media.

Operator's Manual 16 - 7

Item	Description
Send Exam	You can use this function to export the exam data to external devices (in PC data or DICOMDIR data format) and then import to PC or restore to the ultrasound system to review the data. 1. Select the patient record, click [Send Exam] in the menu to send exam data or images of the selected record.
	2. Select the destination, and set related settings.
Activate Exam	After you select an exam, which has been performed within 24 hours, click [Activate Exam] to activate the exam and load the basic patient information and measurement data to continue the exam.
	If you want to select a patient data in an external memory database to start a new exam or recover the exam, you have to first allow the system to load the patient data to the system's patient database.
Resume Exam	Select an exam that is paused within 24 hours, click [Resume Exam] to activate the exam and load the basic patient information and measurement data to continue the exam.
	If you want to select a patient data in an external memory database, you have to first allow the system to load the patient data to the system's patient database.
Annotation Exam	Select an exam and click [Annotation Exam] to add annotation. In the popped-up screen, you can also review the history annotations for the selected exam.
Lock Exam	Select an exam and click [Lock Exam] to lock the exam. The locked exam cannot be deleted.
Unlock Exam	Select a locked and click [Unlock Exam] to unlock the exam.

16.4 Recycle bin

The recycle bin is used to store deleted patient data, exam data and images.

The system supports recovery of these data from the recycle bin.

Click at the lower right corner of the screen to enter the Patient Recycle Bin screen.

To recover the deleted patient data

NOTE:

If the capacity of the recycle bin exceeds 200. The system reminds the user to clean. Follow the procedures below to clean the recycle bin.

Perform the following procedure:

- 1. Select items to be recovered in the list.
- 2. Select operations:
 - Click [Restore Items] to restore the item back to iStation.
 - Click [Delete] to delete the item permanently, and the item can never be restored again;
 - Click [Restore All Items] to restore all the items back to iStation;
 - Click [Empty Recycle Bin] to empty the recycle bin and all items can never be restored again.
 - Click [Exit] to exit the recycle bin.

16 - 8 Operator's Manual

To set maximum number of days or deleted data to be kept in the recycle bin

NOTE:

The patient exams which exceed the preset maximum will be deleted and unrecoverable, it is recommended to perform patient data backup before enabling this function to avoid data loss.

Perform the following procedure:

- 1. Input the desired number besides "Maximum number of days to be kept".
 - If the input box is left blank, the feature will not be enabled.
 - Only the whole number ranging from 1 to 365 can be input.
- 2. Click [Modify].

16.5 iStorage

NOTE:

To use iStorage function, you need UltraAssist software in 2.0 version (with V1.0 network protocol); consult Mindray service engineer for details.

Network storage is used to save image files and measurement reports to the remote PC server. For network storage setting, see "4.8.2 iStorage Preset".

- 1. Enter iStation, select one (or more than one) patient data or image in the local data source.
- 2. Click [Send Exam].
- 3. Select [iStorage] in the Send To dialog box, and select the PC server of the right side.
- 4. Select PC transfer format and check whether to send report.
- 5. Click [OK] to start sending.

16.6 u-Link

u-Link is used to connect the software that supports u-Link protocol. For details, please refer to the accompanying software manual.

16.7 Print

For printer connection, see "3.8 Connecting Peripheral Devices".

For user-defined key for printing and video output settings, see "4.1 System Preset".

16.7.1 Image Print

For DICOM image printing, refer to relevant chapters. Video printer is applied in image print service.

Perform the following procedure:

- 1. Select the desired image in iStation or Review screen.
- 2. Click ⊕ icon on the upper right side of the image, and select the printer in the popped up dialog box.

Operator's Manual 16 - 9

3. Click [OK] to start printing.

Please refer to the accompanying manuals of the printers for more details.

16.7.2 Report Printing

Both reports and images can be printed on a graph/text printer. For detailed information about the report printing, see *Advanced Manual*.

16.8 Back up Files using the DVD Drive

ACAUTION

During the backup process, if a CD/DVD is forcibly taken out or you perform other operations, the backup process will fail or the system may malfunction.

NOTE:

- Writing data using "Send To" supports the PC format transfer function, while CD/DVD writing using "Backup" supports only system-relevant formats.
- The symbol indicates that the input CD/DVD is damaged or contains data in an incorrect format.

The system supports writing data to CD/DVD using the DVD-RW/DVD+RW drive and reading data from CD/DVD on the PC.

Perform the following procedure:

- 1. Put a CD/DVD in the tray.
- 2. Select the data to be backed up. Select [Send Exam] or [Backup Exam] in the menu which appears. Select the target drive in the Send To or Back Up Patient Record dialog box.
- 3. Click [OK] or [Backup] to begin writing when the symbol displays.
- 4. After the writing process is complete, click to bring up the Disc Option dialog box, and select [Eject] to eject the CD/DVD.

16.9 Patient Task Management

Click in the bottom-right corner of the screen to bring up the Task Management dialog box.

Storage Task

Displays the DICOM storage task.

DICOM Print Task

Displays the DICOM print task.

Media Storage Task

- DICOM media storage task (including disc and USB devices): In iStation screen, select the target exam and click [Send Exam], then click DICOMDIR in the menu which appears.
- Back up task (system-relevant format): Select the exam to be backed up in iStation and click [Backup Exam].

16 - 10 Operator's Manual

- Send to external devices (including disc and USB devices): Select exam data or images in the iStation or Review screen. Click [Send Exam] for the image.
- iStorage task: In iStation screen, select the target exam and click [Send Exam], then click iStorage in the menu which appears.
- MedSight storage task:
 - In iStation screen, send exam to MedSight devices.
 - In Review screen, iStation screen, thumbnail area, send the image(s) to MedSight devices.

Log Upload

Displays log uploading tasks.

Print Task

NOTE:

This function is only available in Windows system.

Displays image or report printing tasks.

In the Task Management dialog box, the patient ID, name, destination, progress, type, contents and task created time are displayed.

You can perform the following operations:

- Click [Delete] to delete the task.
- Click [Retry] to retry the failed task.
- Click [Select All] to select all the tasks.
- Click [Priority] to set priority for tasks.

Task Status

When there are tasks underway, the task management icon displays as _____. Click the icon to check the process.

When tasks have failed, the task management icon displays as . Click the icon to check the reason for the failure.

When the task management icon displays as , it means no task is underway or has failed.

DICOM Service Setting

On the Storage Task and DICOM Print Task page, click [Service Setting] to enter the DICOM service setting screen. For details, see "4.7 DICOM/HL7".

Troubleshooting

If a serious error occurs, such as network disconnection or operation timeout, the system can try to reconnect the network. The interval time and maximum retries can be set as desired. For details, see "4.7.2 DICOM Service Preset".

16.10 Q-Path

You can use the ultrasound system to check data on browser directly. After you have ordered storage service of a network website service, you can check data using the website, authorized account and password (provided by the service vendor). You can open the browser to review previously sent DICOM data. For Q-Path settings, see "4.8.4 Q-Path Preset".

Perform the following procedure:

Operator's Manual 16 - 11

- Send stored images or worksheet reports from iStation/Review/thumbnail area to the Q-Path server
- 2. In iStation screen, click [Q-Path] to enable the function.
- 3. Log in to the Q-Path server through the Q-View browser to check the stored images and worksheet reports.
- 4. Click [Esc] to exit the Q-View browser.

16.11 V-Access

The ultrasound system can be used to log on to a remote server to check or modify patient data on the server.

NOTE:

- After logging in to the remote server, you can switch from the Ultrasound System and the
 remote server as follows: click [Minimize] to exit the remote server and enter the Doppler
 interface, and press the user-defined key for V Access to enter the remote server again.
- This function is only available in Windows system.


Perform the following procedure:

- 1. Press the user-defined key to use the function.
- 2. The system brings up a dialog box for entering the IP address of the remote server.
- 3. Enter the IP address and click [OK].
- 4. Log on with the server account and password.
- 5. Check the data transferred and carry out operations as necessary.

16 - 12 Operator's Manual

17 Probes and Biopsy

17.1 Probes

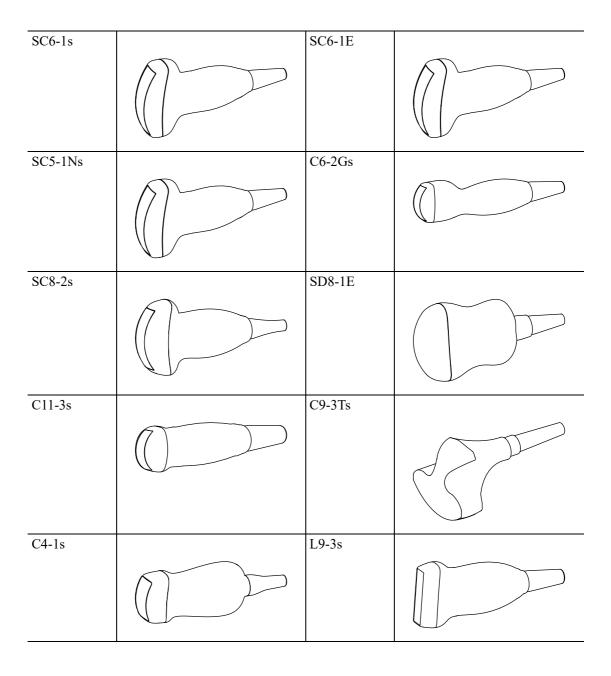

L20-5s	L14-3Ws	
L13-3Ns	7LT4s	
L16-4Hs	CB10-4s	
L12-3RCs	L12-3VNs	00
DE11-3Ws	SP5-1s	
SP5-1E	SP5-1U	
SP5-1Ns	P10-4s	
P8-2s	V11-3Hs	
V11-3HBs	SD8-1s	

17 - 2 Operator's Manual


	T	T
ELC13-4s	LAP13-4Cs	
CVV.5	CANA CANA	
CW5s	CW2s	
P8-2Ts	P8-3Ts	
P7-3Ts	P7-3TE	•
P7-3TU	SC9-2s	

NOTE:

- For details of the P7-3TU, P8-3Ts, P8-2Ts, P7-3Ts and P7-3TE probes, refer to *TEE Ultrasonic Transducer Operator's Manual*.
- For details of the LAP13-4Cs probe, refer to *LAP13-4Cs Ultrasonic Laparoscopic Transducer*.

17.1.1 Probe Functions by Part

The basic structures and corresponding functions of probes are basically the same; take the following probe as an example.

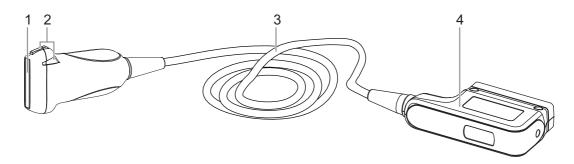


No.	Item	Description
1.	Probe head	Converts the electrical signal into an ultrasonic signal, focusing the sound beams in a given direction; meanwhile, it receives the reflected ultrasonic signal and converts it into an electrical signal for transmission over the cable. The lens on the surface is the acoustic lens. Apply ultrasound gel on the acoustic lens for correct operation.
2.	Needle-guided bracket fix tabs and grooves	Provides mounting support of the needle-guided bracket. NOTE: This structure of probes in the figure above may vary with the matched needle-guided brackets.
3.	Probe cable	Transmits electrical signals between the probe head and connector.
4.	Probe connector	Connects the probe to the ultrasonic diagnostic system.

17.1.2 Orientation of the Ultrasound Image and the Probe

The orientation of the ultrasound image and the probe are shown as below. The "M" side of the ultrasound image on the monitor corresponds to the mark side of the probe. Check the orientation before the examination (Using a linear probe as an example).

17 - 4 Operator's Manual

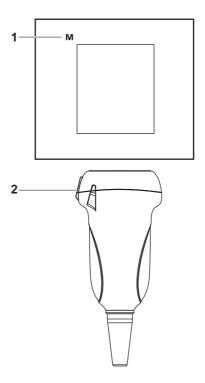

1	Orientation mark	2	Mark

17.1.3 Procedures for Operating


MARNING

Disinfect the probe and sterilize the needle-guided bracket before and after an ultrasound-guided biopsy procedure is performed. Failure to do so may cause the probe and the needle-guided bracket becomes a source of infection.

This section describes general procedures for operating the probe. The proper clinical technique to be used for operating the probe should be selected on the basis of specialized training and clinical experience.


Operator's Manual

Procedures for operating (with biopsy function)

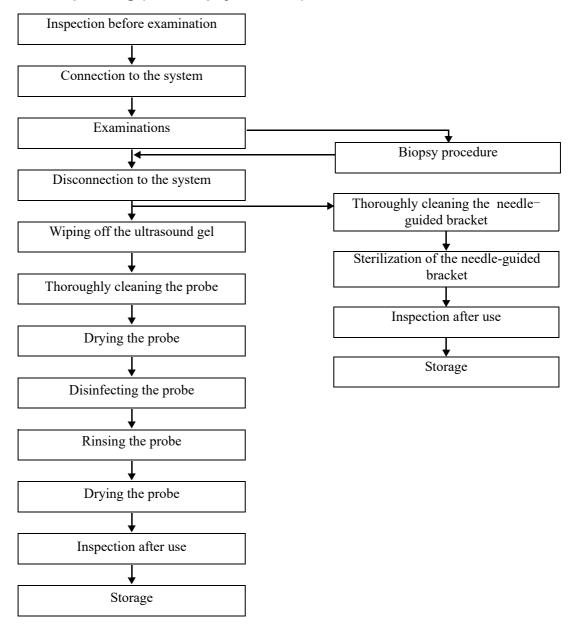

17 - 6 Operator's Manual

Procedures for operating (with no biopsy function)

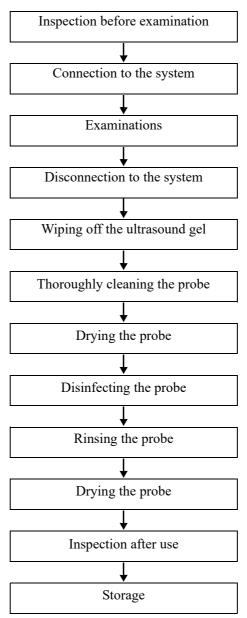

17.1.4 Wearing the Probe Sheath

ACAUTION

- Be sure to cover the probe with a new (unused) probe sheath to prevent infection during examination. If the package of a probe sheath is open or broken, the sterilization of the probe sheath may not be sufficient. DO NOT use such a probe sheath.
- The cover contains natural rubber latex and talc that can cause allergic reactions in some individuals.
- DO NOT use an expired probe sheath. Before using a probe sheath, verify whether the term of validity has expired.

Operator's Manual

A legally marketed probe sheath must be installed over the probe before performing intra-cavitary and intra-operative examination. Protective barriers may be required to minimize disease transmission. Probe sheaths are available for use with all clinical situations where infection is a concern

To order probe sheath, contact:


CIVCO Medical Instruments Co.

102 First Street South, Kalona, IA 52247-9589 USA


Tel: 1-319-656-4447 E-mail: info@civco.com http://www.civco.com

Perform the following procedure to install the probe sheath:


 Place an appropriate amount of gel inside the sheath or on the probe acoustic lens. Poor imaging may result if no gel is used.

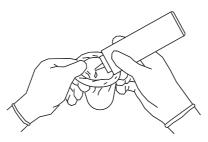

2. Insert the probe into the sheath; make sure to use proper sterile technique. Pull cover tightly over probe acoustic lens to remove wrinkles and air bubbles, and taking care to avoid puncturing the sheath.

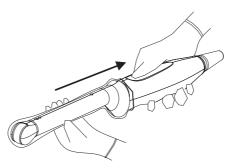

3. Secure the sheath with the enclosed elastic bands.

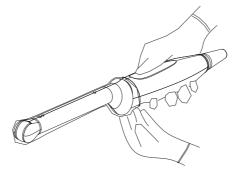

4. Inspect the sheath to ensure there is no hole or tear.

17.1.5 Probes Cleaning and Disinfection/Sterilization

For the detailed information, see *Ultrasound System Cleaning*, *Disinfection & Sterilization Guide [Advanced]*.

17 - 8 Operator's Manual

17.1.6 Probe Environmental Conditions

Operating Conditions

Use the probes in the following ambient conditions:

Probe Model	Ambient temperature	Relative humidity (no condensation)	Atmospheric pressure
C11-3s	0°C-40°C	30%-85%RH	700hPa-1060hPa
SP5-1E	0°C-40°C	20%-85%RH	700hPa-1060hPa
SP5-1s	0°C-40°C	20%-85%RH	700hPa-1060hPa
SP5-1U	0°C-40°C	20%-85%RH	700hPa-1060hPa
C6-2Gs	0°C-40°C	20%-85%RH	700hPa-1060hPa
SC6-1s	0°C-40°C	20%-85%RH	700hPa-1060hPa
SC6-1E	0°C-40°C	20%-85%RH	700hPa-1060hPa
V11-3Hs	0°C-40°C	20%-85%RH	700hPa-1060hPa
L9-3s	0°C-40°C	20%-85%RH	700hPa-1060hPa
SD8-1E	18°C-30°C	20%-85%RH	700hPa-1060hPa
SD8-1s	18°C-30°C	20%-85%RH	700hPa-1060hPa
L20-5s	0°C-35°C	15%-80%RH	700hPa-1060hPa
SC8-2s	0°C-40°C	30%-85%RH	700hPa-1060hPa
CW2s	0°C-40°C	30%-85%RH	700hPa-1060hPa
CW5s	0°C-40°C	30%-85%RH	700hPa-1060hPa
ELC13-4s	0°C-40°C	20%-85%RH	700hPa-1060hPa
DE11-3Ws	18°C-30°C	20%-85%RH	700hPa-1060hPa
L13-3Ns	0°C-40°C	20%-85%RH	700hPa-1060hPa
L14-3Ws	0°C-40°C	20%-85%RH	700hPa-1060hPa
L16-4Hs	10°C-40°C	30%-85%RH	700hPa-1060hPa
P10-4s	0°C-40°C	30%-85%RH	700hPa-1060hPa
SC5-1Ns	0°C-40°C	20%-85%RH	700 hPa-1060 hPa
C9-3Ts	0°C-40°C	20%-85%RH	700 hPa-1060 hPa
C4-1s	0°С-35°С	15%-90%RH	700 hPa-1060 hPa
7LT4s	0°C-40°C	25%-90%RH	550 hPa-1060 hPa
L12-3RCs	0°C-40°C	20%-85%RH	700hPa-1060hPa
L12-3VNs	0°C-40°C	20%-85%RH	700hPa-1060hPa
SP5-1Ns	0°C-40°C	20%-85%RH	700 hPa-1060 hPa
P8-2s	0°C-40°C	20%-85%RH	700 hPa-1060 hPa
V11-3HBs	0°C-40°C	20%-85%RH	700 hPa-1060 hPa
CB10-4s	0°C-40°C	30%-85%RH	700 hPa-1060 hPa

Probe Model	Ambient temperature	Relative humidity (no condensation)	Atmospheric pressure
SC9-2s	0°C-40°C	20%-85%RH	700 hPa-1060 hPa

NOTE:

- For details of the P7-3TU, P7-3Ts and P7-3TE probes, refer to *TEE Ultrasonic Transducer Operator's Manual*.
- For details of the LAP13-4Cs probe, refer to *LAP13-4Cs Ultrasonic Laparoscopic Transducer*.

Storage and Transportation

When all examinations for the day have been completed, confirm that the probe is in good condition. After disinfecting the probe, confirm that the probe is in good condition and stored in a suitable place.

- To prevent the probe from being damaged, DO NOT store it in locations where it may be exposed to:
 - Direct sunlight or X-rays
 - Sudden changes in temperature
 - Dust
 - Excessive vibration
 - Heat generators
- When the probe is sent to MINDRAY Customer Service Department or sales representative for repair, be sure to disinfect it and keep it in the carrying case to prevent infection.

Store and transport the probes in the following ambient conditions:

Probe Model	Ambient temperature	Relative humidity (no condensation)	Atmospheric pressure
C11-3s	-20°C-55°C	30%-95%RH	700 hPa - 1060 hPa
SP5-1E	-20°C-55°C	20%-95%RH	700 hPa - 1060 hPa
SP5-1s	-20°C-55°C	20%-95%RH	700 hPa - 1060 hPa
SP5-1U	-20°C-55°C	20%-95%RH	700 hPa - 1060 hPa
C6-2Gs	-20°C-55°C	20%-95%RH	700 hPa - 1060 hPa
SC6-1s	-20°C-55°C	20%-95%RH	700 hPa - 1060 hPa
SC6-1E	-20°C-55°C	20%-95%RH	700 hPa - 1060 hPa
V11-3Hs	-20°C-55°C	20%-95%RH	700 hPa - 1060 hPa
L9-3s	-20°C-55°C	20%-95%RH	700 hPa - 1060 hPa
SD8-1E	-10°C-50°C	20%-95%RH	700 hPa - 1060 hPa
SD8-1s	-10°C-50°C	20%-95%RH	700 hPa - 1060 hPa
L20-5s	-20°C-60°C	15%-90%RH	500 hPa - 1060 hPa
SC8-2s	-10°C-60°C	20%-95%RH	700 hPa - 1060 hPa
CW2s	-20°C-55°C	30%-95%RH	700 hPa - 1060 hPa
CW5s	-20°C-55°C	30%-95%RH	700 hPa - 1060 hPa
ELC13-4s	-20°C-55°C	20%-95%RH	700 hPa - 1060 hPa

17 - 10 Operator's Manual

Probe Model	Ambient temperature	Relative humidity (no condensation)	Atmospheric pressure
DE11-3Ws	-10°C-50°C	20%-95%RH	700 hPa - 1060 hPa
L13-3Ns	-20°C-55°C	20%-95%RH	700 hPa - 1060 hPa
L14-3Ws	-20°C-55°C	20%-95%RH	700 hPa - 1060 hPa
L16-4Hs	0°C-60°C	30%-95%RH	700 hPa - 1060 hPa
P10-4s	-20°C-55°C	30%-95%RH	700 hPa - 1060 hPa
SC5-1Ns	-20°C-55°C	20%-95%RH	700 hPa-1060 hPa
C9-3Ts	-20°C-55°C	20%-95%RH	700 hPa-1060 hPa
C4-1s	-20°C-60°C	15%-90%RH	700 hPa-1060 hPa
7LT4s	-20°C-60°C	10%-95%RH	500 hPa-1060 hPa
L12-3RCs	-20°C-55°C	20%-95%RH	700 hPa-1060 hPa
L12-3VNs	-20°C-55°C	20%-95%RH	700 hPa-1060 hPa
SP5-1Ns	-20°C-55°C	20%-95%RH	700 hPa-1060 hPa
P8-2s	-20°C-55°C	20%-95%RH	700 hPa-1060 hPa
V11-3HBs	-20°C-55°C	20%-95%RH	700 hPa-1060 hPa
CB10-4s	-20°C-55°C	30%-95%RH	700 hPa-1060 hPa
SC9-2s	-20°C-55°C	20%-95%RH	700 hPa-1060 hPa

NOTE:

- For details of the P7-3TU, P7-3Ts and P7-3TE probes, refer to *TEE Ultrasonic Transducer Operator's Manual*.
- For details of the LAP13-4Cs probe, refer to LAP13-4Cs Ultrasonic Laparoscopic Transducer.

17.1.7 Storage and Transportation

When all examinations for the day have been completed, confirm that the probe is in good condition. After disinfecting the probe, confirm that the probe is in good condition and stored in a suitable place.

- To prevent the probe from being damaged, DO NOT store it in locations where it may be exposed to:
 - Direct sunlight or X-rays
 - Sudden changes in temperature
 - Dust
 - Excessive vibration
 - Heat generators
- When the probe is sent to MINDRAY Customer Service Department or sales representative for repair, be sure to disinfect it and keep it in the carrying case to prevent infection.

17.1.8 Sensor (Fusion Imaging) Support Cleaning and Disinfection

Before performing the fusion imaging exam, clean and disinfect (or sterilize) the fusion sensor support as required.

ACAUTION

- When performing cleaning and disinfection of the sensor support to prevent infection, wear sterile gloves.
- After disinfection, rinse the sensor support thoroughly with sterile water to remove all chemical residues. Chemical residues may be harmful to the human body.
- No cleaning and disinfecting may result in the sensor support becoming a source of infection.

The efficacy of disinfectants and sterilizing solutions is not guaranteed by MINDRAY. Contact the manufacturers for information on the activity of the products.

Cleaning

Perform the following procedure:

- 1. Disconnect the sensor support from the system.
- 2. Wear sterile gloves to prevent infection.
- 3. Wash the sensor support (fusion) with clean water or soapy water to remove all the foreign matters, or, wipe the sensor support with a soft ethyl carbamate sponge. Avoid using a brush, because it may damage the transducer.
- 4. Dry the sensor support using a sterile cloth or gauze after rinsing. Do not dry the sensor support by heating it.

Disinfecting with Sprays or Wipes

ACAUTION

Use protective eyewear when disinfecting using sprays.

Perform the following procedure:

- 1. Wear sterile gloves to prevent infection.
- 2. After you have finished cleaning, spray or wipe the sensor support (fusion) with a disinfectant. Follow the disinfectant manufacturer's recommended contact time and mode.
- 3. Remove any residue with a water-moistened soft cloth on the sensor support.
- 4. Wipe off water on the sensor support using sterile cloth or gauze after washing.

Disinfecting by Immersion

Perform the following procedure:

- 1. Wear sterile gloves to prevent infection.
- 2. Clean the sensor support before disinfecting it. MINDRAY recommends the following solutions to disinfect the sensor support (fusion).

17 - 12 Operator's Manual

- Refer to the instructions provided by the chemical manufacturer concerning concentration of the disinfectant solution, method of disinfection and dilution and cautions during use.
- Soak the sensor support into the disinfectant solution for the shortest time the manufacturer recommends (for example, the shortest time recommended by the manufacturer for soaking Cidex OPA is 12 minutes).
- Follow local regulations when selecting and using the disinfectant.
- 3. Rinse the sensor support with plenty of sterile water (about 2 gallons) for at least 1 minute to remove all chemical residues on it. Or, follow the rinsing method recommended by the disinfectant manufacturer to rinse the sensor support.
- 4. Wipe off the water on the sensor support with sterile cloth or gauze after rinsing it.

Compatible Disinfectants

Manufacturer	Trade Name	Procedures	Туре
Metrex	MetriZyme	Please refer to the instructions provided by the manufacturer of the solution for details.	Solution
ASP	Cidex Activated Glutaraldehyde Solution	Please refer to the instructions provided by the manufacturer of the solution for details.	Solution
ASP	Cidex OPA	Please refer to the instructions provided by the manufacturer of the solution for details.	Solution
Ecolab Inc.	Ster-Bac	Please refer to the instructions provided by the manufacturer of the solution for details.	Solution
Advanced Ultrasound Solutions Inc.	SONO Ultrasound Wipes	Please refer to the instructions provided by the manufacturer of the solution for details.	Wipe
Professional Disposables International, Inc.	Sani-Cloth	Please refer to the instructions provided by the manufacturer of the solution for details.	Wipe

17.1.9 Storage and Transportation for Sensor Support (Fusion)

When all examinations for the day have been completed, confirm that the sensor support is in good condition. After disinfecting the sensor support, confirm that the sensor support is in good condition and stored in a suitable place.

- To prevent the sensor support from being damaged, DO NOT store it in locations where it may be exposed to:
 - Direct sunlight
 - Sudden changes in temperature
 - Dust
 - Excessive vibration
 - Heat generators

• Store and transport sensor support under following ambient conditions:

– Ambient temperature: $-20^{\circ}\text{C} \sim 55^{\circ}\text{C}$

Relative humidity: 20% ~95% (no condensation)

Atmospheric pressure: 700 hPa ~1060 hPa

17.1.10Sensor (Fusion Imaging) Cleaning and Disinfection

ACAUTION

- When performing cleaning and disinfection of the sensor to prevent infection, wear sterile gloves.
- After disinfection, rinse the sensor thoroughly with sterile water to remove all chemical residues. Chemical residues may be harmful to the human body.
- No cleaning and disinfecting may result in the sensor becoming a source of infection.
- The efficacy of disinfectants and sterilizing solutions is not guaranteed by MINDRAY. Contact the manufacturers for information on the activity of the products.

Disinfecting with Sprays or Wipes

ACAUTION

Use protective eyewear when disinfecting using sprays.

Perform the following procedure:

- 1. Wear sterile gloves to prevent infection.
- 2. Spray or wipe the sensor (fusion) with a disinfectant. Follow the disinfectant manufacturer's recommended contact time and mode.
- 3. Remove any residue with a water-moistened soft cloth on the sensor.
- 4. Wipe off water on the sensor using sterile cloth or gauze after washing.

Compatible Disinfectants

Manufacturer	Disinfectants Name	Procedures	Туре
Advanced Ultrasound Solutions Inc.	SONO Ultrasound Wipes	Please refer to the instructions provided by the manufacturer of the solution for details.	Wipe
Professional Disposables International,Inc.	Sani-Cloth	Please refer to the instructions provided by the manufacturer of the solution for details.	Wipe

17 - 14 Operator's Manual

Clean and disinfect eTRAX needle using disinfectant and sterilant such as Sani-cloth® HB, CIDEX OPA® (Johnson & Johnson), ENZOL® (Johnson & Johnson), T-SprayTM, ProtexTM or ethanol.


17.2 Biopsy Guide

MARNING

- The person performing biopsy procedures must understand diagnostic ultrasound thoroughly and have been trained adequately, otherwise, side effects may be caused to the patient.
- In situations listed below, the biopsy needle may fail to penetrate the target. The incorrect biopsy may cause various side effects in the patient.
 - Use a needle-guided bracket other than that provided.
 - Mount the needle-guided bracket incorrectly.
 - Use a biopsy needle that is unsuitable for the type of biopsy being performed.
 - Use a biopsy needle that is unsuitable for the needle guide.
- Before and after a biopsy procedure is performed, confirm that the needle-guided bracket is normal. Manually confirm that the parts of the needle-guided bracket do not slip off or move from their proper positions. If the needle-guided bracket is used when parts are not securely and correctly installed, the patient may be injured. If an abnormality is found on the needle-guided bracket, immediately stop using it and contact MINDRAY Customer Service Department or sales representative.
- DO NOT use a needle-guided bracket when scanning is performed. The needle may advance in an incorrect direction and possibly injure the patient.
 - Never perform a biopsy during image scanning.
- DO NOT freeze an image while performing biopsy procedure.
- During biopsy procedures, the needle may deviate from the desired course due to the tissue characteristics or the type of needle. In particular, needles of small diameters may deviate to a greater degree.
- Disinfect the probe and sterilize needle-guided bracket before and after each ultrasound-guided biopsy procedure is performed. Fail to do so may cause the probe and the needle-guided bracket become sources of infection.
- The needle mark displayed on the ultrasound image does not indicate the
 actual position of the biopsy needle. Therefore, it should only be used as a
 reference. Always monitor the relative positions of the biopsy needle during
 the procedures.
- Adjust the needle mark before the biopsy procedure is performed.

- When performing biopsy procedures, use only sterile ultrasound gel that is certified to be safe. And manage the ultrasound gel properly to ensure that it does not become a source of infection.
- When performing the operation concerning biopsy, wear sterile gloves.
- Image of the biopsy target and the actual position of the biopsy needle: Diagnostic ultrasound systems produce tomographic plane images with information of a certain thickness in the thickness direction of the probe. (That is to say, the information shown in the images consist all the information scanned in the thickness direction of the probe.) So, even though the biopsy needle appears to have penetrated the target object in the image, it may not actually have done so. When the target for biopsy is small, dispersion of the ultrasound beam may lead to image deviate from the actual position. Pay attention to this.

If the target object and the biopsy needle appear in the image as shown in the figures below (For reference only):

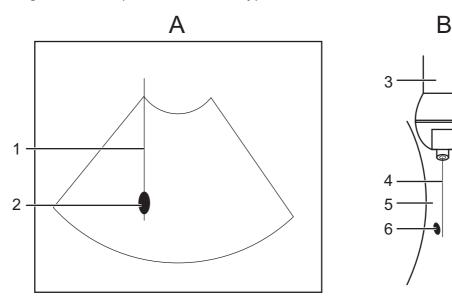

A	The biopsy needle appears to reach the target object in the image	В	Dispersion of the ultrasound beam
1	Biopsy	2	Target
3	Probe	4	Needle
5	Ultrasound beam	6	Target

The biopsy needle may not have actually entered the target object even though it appears to have done so in the image. To avoid this, note the points below:

- Do not rely only on the needle tip in the image. Pay careful attention to the fact that when the biopsy needle enters the target object or comes into contact with it, the object should shift slightly.
- Before performing the biopsy, evaluate the size of the object and confirm whether the biopsy can be carried out.

17 - 16 Operator's Manual

During biopsy of the probe, misoperation may occur when the scan range is not set to "W".

17.2.1 Needle-guided Brackets Available

Some of the probes have matched needle-guided brackets for biopsy, the available probes and the corresponding needle-guided brackets are listed as follows.

Probe Model	Needle-guided Bracket Model	Biopsy Angle	Applicable Biopsy Needle
CB10-4s	NGB-004 Metal-needle undetachable	0.8°	16G, 17G, 18G
7LT4s	NGB-010 Metal-needle detachable	30°, 40°, 50°	13G, 15G, 16G, 18G, 20G
SP5-1s/SP5-1E/ SP5-1U/SP5-1Ns	NGB-011 Metal-needle undetachable	11°, 23°	13G, 15G, 16G, 18G, 20G
C11-3s	NGB-018 Metal-needle detachable	15°, 25°, 35°	14G, 16G, 18G, 20G, 22G
SC6-1s/SC6-1E/ SC5-1Ns	NGB-022 Metal-needle detachable	25°, 35°, 45°	14G, 16G, 18G, 20G, 22G
C6-2Gs	NGB-024 Metal-needle detachable	7°, 25°, 35°	14G, 16G, 18G, 20G, 22G
V11-3Hs	NGB-025 Metal-needle undetachable	1.6°	16G, 17G, 18G
SC8-2s	NGB-029 Metal-needle detachable	20°, 30°, 40°	14G, 16G, 18G, 20G, 22G
L9-3s	NGB-034 Metal-needle detachable	40°, 50°, 60°	14G, 16G, 18G, 20G, 22G
C4-1s	NGB-036 Metal-needle detachable	7°, 25°, 35°	14G, 16G, 18G, 20G, 22G
SD8-1s/SD8-1E	NGB-039 Metal-needle detachable	21°, 26°, 33°	14G, 16G, 18G, 20G, 22G
L12-3RCs	NGB-043 (within the plane) Metal-needle detachable	35° - 80°	20G - 23G
L12-3RCs	NGB-044 (outside the plane) Metal-needle detachable	5mm, 10mm, 15mm, 25mm, 35mm	18G, 20G, 21G
CB10-4s	NGB-045 Metal-needle undetachable	1°	16G, 17G, 18G
DE11-3Ws	NGB-047 Metal-needle undetachable	1.7°	16G, 17G, 18G

Probe Model	Needle-guided Bracket Model	Biopsy Angle	Applicable Biopsy Needle
V11-3HBs	NGB-048 Metal-needle undetachable	0°	16G, 17G, 18G
ELC13-4s	NGB-051 Metal-needle detachable	5mm, 10mm, 15mm, 20mm, 25mm, 30mm, 35mm, 40mm, 45mm, 50mm	14G, 16G, 18G, 20G
L13-3Ns	NGB-053 (within the plane) Metal-needle detachable	15mm (60°), 23mm (50°), 34mm (40°)	11G - 23G
L14-3Ws	NGB-054 Metal-needle detachable	15mm (65°), 23.7mm (55°), 35mm (45°)	11G - 23G

Disposable Bracket

Probe Model	Needle-guided Bracket Model
V11-3Hs/CB10-4s	CIVCO 610-543
	CIVCO 610-1274
C4-1s	CIVCO 698-013
	CIVCO 698-019
SC6-1s/SC6-1E/SC5-1Ns	CIVCO 658-004-1
	CIVCO 658-004-2
	CIVCO 658-004-3
	CIVCO 658-004-4
	CIVCO 658-004-5
ELC13-4s	CIVCO 658-007 EX3 Stepper

Biopsy Grid

Probe Model	Needle-guided Bracket Model	
ELC13-4s	CIVCO 658-007 EX3 Stepper	
	NOTE:	
	It is used to correctly position the needle insertion coordinate in the prostate biopsy operation, in conjunction with the positioning grid bracket.	

NOTE:

Mindray does not offer the biopsy needle; please purchase it according to your own needs.

17 - 18 Operator's Manual

17.2.2 Needle-Guided Bracket Installation and Removal


A needle-guided bracket is available for purchase as an optional accessory; it is used in combination with the probe. Some of the probes have matched needle-guided bracket and needles. To order needle-guided brackets, contact MINDRAY Customer Service Department or sales representative.

For biopsy or treatment, ultrasound-guided biopsy procedures can be performed using the probe in combination with a needle-guided bracket (optional accessory) and a biopsy needle (provided by the user).

Be sure to perform inspections before and after use of the needle-guided bracket. If an abnormality is found on the needle-guided bracket, immediately stop using it and contact MINDRAY Customer Service Department or sales representative.

- Sterilize the needle-guided bracket before and after use.
- Put on the sterile probe sheath before installing to the probe.
- Confirm that the needle-guided bracket is free of damage, deformation, stripping, malfunction, loose, or missing parts.
- Confirm that the needle-guided bracket is securely mounted in the correct position.
- Select the proper needle according to the specification above, and adjust the needle shift to the same specification of the selected needle.

NGB-004

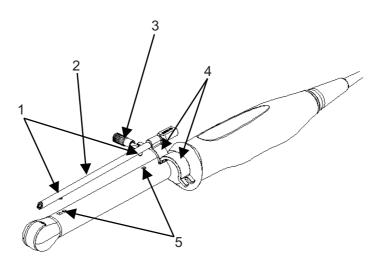

1	Locating bulge	2	Needle guide
3	Locking nut	4	Retaining clamp
5	Locating groove		


Perform the following procedure:

1. Install the needle-guided bracket.


a. Put on the sterile probe sheath.



b. Open the retaining clamp, align the needle-guided bracket with the transducer to locate the locating bulge on the needle guide to the locating grooves on the transducer, and then turn the retaining clamp to match it with the transducer.

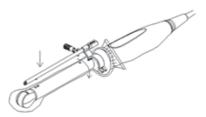


c. When the retaining clamp is turned to the right position, the locking nut will lock the retaining clamp and the needle-guided bracket is then mounted to the right position.

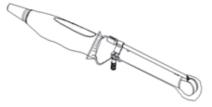

2. Remove the needle-guided bracket:

Hold the transducer in the left hand, unscrew the locking nut with the right hand to open the retaining clamp, and then raise the needle-guided bracket to separate the locating bulge from the locating grooves.

NGB-010

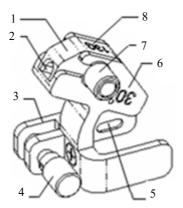

1	Guiding block	2	Guiding hole of the biopsy needle
---	---------------	---	-----------------------------------

17 - 20 Operator's Manual

3	Support of needle-guided bracket	4	Knob of fixing needle-guided bracket
5	Grooves of the needle-guided bracket	6	Needle guide angle
7	Knob of fixing the guiding block	8	Specification of guiding block

Perform the following procedure:

- 1. Install the needle-guided bracket:
 - a. Put on the sterile probe sheath.




- b. Hold the probe by one hand, select the proper needle-guided bracket, and hold it with the other hand. Match the groove of the bracket with the tab of the probe. Amount the bracket onto the probe.
- c. Hold the probe by one hand, select proper needle-guided bracket, and hold it with the other hand, and align the grooves of the needle-guided bracket with the tabs of the probe, then push the needle-guided bracket forward, making the grooves of the needle-guided bracket to match with the tabs of the probe. Set the needle-guided bracket at the desired position, turn tightly the knob of fixing needle-guided bracket to fix the needle-guided bracket.




- d. Check manually to confirm the needle-guided bracket is securely installed on the probe.
- 2. Install the guiding block:
 - a. Select a proper guiding block and push it into the groove above the support of needle-guided bracket, then turn tightly the knob of fixing the guiding block to fix the guiding block on the support of needle-guided bracket.



b. Insert a biopsy needle with the same specification as that of the guiding block into the hole of the guiding block

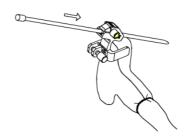


3. Remove the needle-guided bracket:

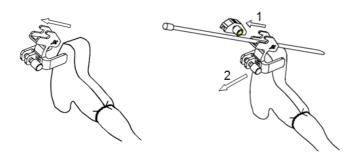

- a. Remove the guiding block slightly along the direction of the needle's tail, and separate the residual part of the needle-guide bracket and the probe from the needle.
- b. Remove the support of needle-guided bracket from the probe.

NGB-011

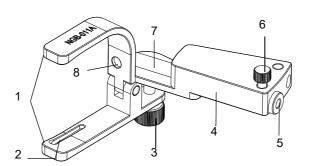

1	Clamp	2	Locating groove
3	Grip knob	4	Needle guide rack
5	Needle guide hole	6	Needle guide clamping knob
7	Needle guide	8	Locating pit

Perform the following procedure:


- 1. Install the needle-guided bracket:
 - a. Put on the sterile probe sheath.
 - b. Connect the locating groove on the clamp with the two raised edges on the probe head and align the locating pit of the clamp with the convex point on the probe head.
 - c. Turn the grip knob at the tail of the needle-guided bracket tightly.

17 - 22 Operator's Manual

2. Remove the needle-guided bracket:

Hold the probe and the needle-guided bracket, then open the grip knob of the needle-guided bracket.


NGB-018

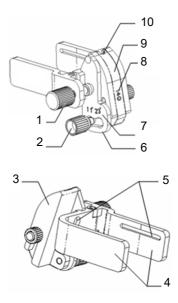

1	Pinch nut of bracket	2	Angle pinch nut
3	Angle block	4	Clamp
5	Groove	6	Angle-adjusting base
7	Angle shift sign	8	Guiding block specification
9	Guiding block	10	Needle guide hole


Perform the following procedure:

1. Install the needle-guided bracket:

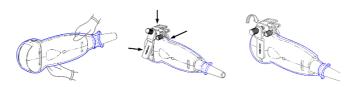

- a. Put on the sterile probe sheath.
- b. Select a suitable needle-guided bracket and match the groove to the tab of the probe. Mount the bracket onto the probe.
- c. Screw the pinch nut of the needle-guided bracket to ensure that the needle-guided bracket is properly installed on the probe.
- 2. Adjust the needle angle to the proper shift as required:
 - a. Loosen the angle pinch nut.
 - b. Adjust the angle block to the desired level.
 - c. Tighten the angle pinch nut.


3. Install the guiding block:

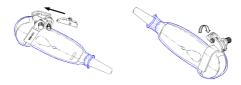

- a. Select a suitable guiding block and push it into the groove above the angle block
- b. Screw the block's nut to secure the block.
- c. Insert a biopsy needle with the same specification as that of the guiding block into the guiding block hole.
- 4. Release the needle from the bracket:




- a. Loosen the guiding block's nut and slightly move the guiding block in the direction of the needle's tail.
- b. Separate the residual part of the needle-guide bracket and the probe from the needle.
- 5. Remove the needle-guided bracket:

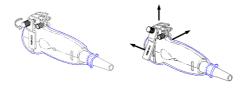

- a. Screw the pinch nut to release the needle-guided bracket
- b. Separate the bracket and the probe.

NGB-022

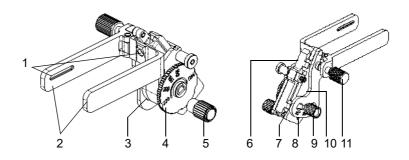


1	Groove	2	Clamp
3	Needle type adjusting base	4	Needle type dial scale
5	Needle fixing nut	6	V-shaped cover

17 - 24 Operator's Manual


7	Angle adjusting base	8	Angle shift sign
9	Angle pinch nut	10	Angle block
11	Pinch nut		

Perform the following procedure:


- 1. Install the needle-guided bracket:
 - a. Put on the sterile probe sheath.
 - b. Hold the probe by one hand, select the proper needle-guided bracket, and hold it with the other hand. Match the groove of the bracket with the tab of the probe. Amount the bracket onto the probe.

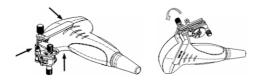

- c. Screw the pinch nut of the needle-guided bracket to confirm that the needle-guided bracket is properly installed on the probe.
- 2. Adjust the needle angle to the proper shift as required:
 - a. Loosen the angle pinch nut.
 - b. Adjust the angle block to the desired level.
 - c. Tighten the angle pinch nut.
- 3. Insert the biopsy needle:

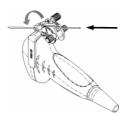


- a. Adjust the dial scale to the required needle type shift, and then screw the needle fixing nut to lock the dial scale. (To adjust the dial scale you have to loosen the needle fixing nut first.)
- b. Pull the lock pin and close the V-shaped cover to fix the lock pin in the groove of the needle type adjusting base, so as to install the needle into the guiding hole.
- 4. Release the needle from the bracket:

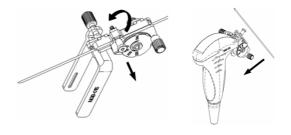


a. Pull the lock pin and open up the V-shaped cover to expose the needle.

- b. Separate the bracket and the probe from the needle.
- 5. Remove the needle-guided bracket:

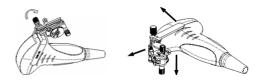

- a. Screw the pinch nut to release the needle-guided bracket.
- b. Separate the bracket and the probe.

NGB-024

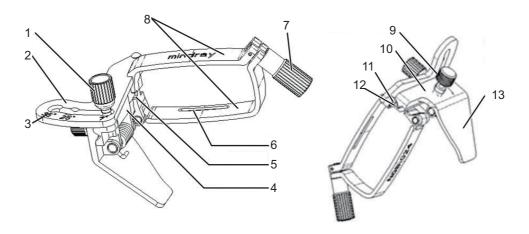


1	Angle locking nut	2	Angle adjusting block	3	Angle marker
4	Angle adjusting base	5	Slot	6	Groove
7	Right, left retaining nut	8	Right, left clamp	9	Needle shape adjusting nut
10	Needle clamping cover	11	Needle guided V-shaped block	12	Guiding hole of the needle
13	Needle separate pressure position				

Perform the following procedure:

- 1. Install the needle-guided bracket:
 - a. Put on the sterile transducer sheath.

17 - 26 Operator's Manual


b. Select a proper needle-guided bracket, and match the groove with the tab of the transducer. Mount the bracket onto the transducer.

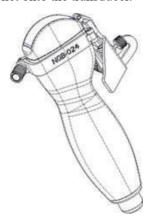


c. Rotate the clamping nuts of the guided bracket on right and left side to fix the bracket and the transducer. Rotate the needle-type adjusting nut to the ultimate position as shown in the figure.



d. Hold the transducer. Press the biopsy needle to separate needle guided V-shaped block from pressure position of the needle.

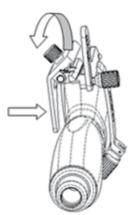


e. Put the needle into the needle guided-bracket, and the needle leans to V-shaped block.

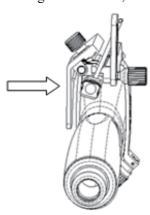

f. Hold the transducer, and release the pressure position of the needle. Adjust the needletype adjusting nut manually (following the direction of the arrow). The needle moves smoothly at the vertical direction due to its gravity.




- 2. Remove the needle-guided bracket:
 - a. Hold the transducer. Press the biopsy needle to separate the needle from pressure position of the needle.

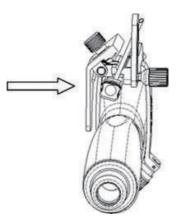


b. Separate the bracket and the transducer from the needle.

17 - 28 Operator's Manual

c. Rotate the clamping nuts of the needle guided-bracket on right and left side (following the direction of the arrow). The needle guided-bracket is separate from the transducer. Hold the transducer and take out the bracket.

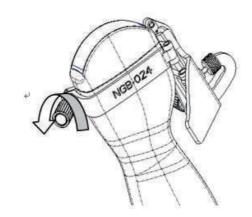

NGB-025

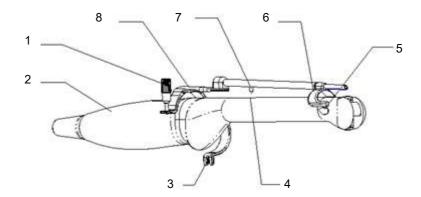


1	Pinch nut	2	Intra-cavity probe
3	Lower clamp	4	Location hole
5	Front slot	6	Front clamp
7	Location clamp	8	Upper clamp

Perform the following procedure:


- 1. Install the needle-guided bracket:
 - a. Put on the sterile probe sheath.




b. Open the clamp. Insert the front clamp to the front groove, and align front clamp with front groove.

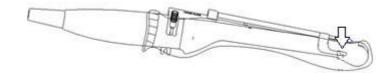

c. Push the biopsy forward (arrow's direction) until the locating pole inserting into the location hole. Turn the lower clamp against the intra-cavity probe. Tighten the nut to lock the biopsy (arrow's direction)

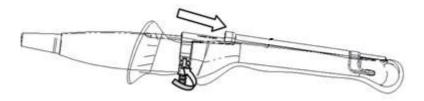


2. Remove the needle-guided bracket:

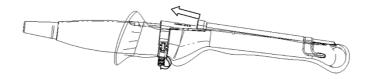

- a. Hold the prober in the left hand; unscrew the locking nut with the right hand to loose the clamp (arrow's direction).
- b. Lift the biopsy up (towards arrow's direction). The locating pole, front clamp, the locating hole and the front clamp become loose.

NGB-029

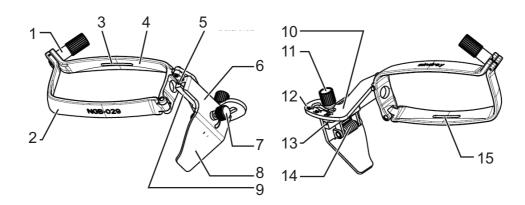


1	Fixing nut of clamps	2	Clamp	3	Groove
4	Clamp	5	Needle guide hole	6	Needle clamp cover
7	Pinch nut		Needle separation pressure position	9	V-shaped guiding block

17 - 30 Operator's Manual


10	Angle adjusting block	11	Angle fixing nut	12	Needle mark
13	Angle adjusting base	14	Torsion spring of the needle pressure cover	15	Groove

Perform the following procedure:


- 1. Install the needle-guided bracket:
 - a. Put on the sterile probe sheath.
 - b. Select a proper needle-guided bracket, and match the locating groove with the tab of the probe. Mount the bracket onto the probe.

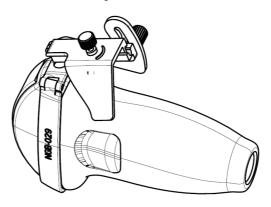

2. Tighten the fixing nut of clamps of the needle-guided bracket to confirm that the needle-guided bracket is properly installed on the probe. And tighten the pinch nut (following the arrow's direction).

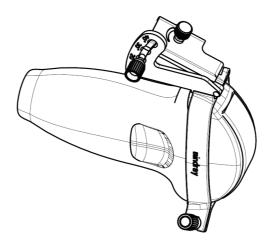

a. Hold the transducer. Press the pressure position of the needle to separate needle guided V-shaped block from pressure position of the needle.

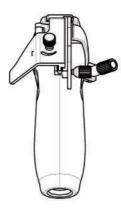

b. Put the needle into the needle guided-bracket, and the needle leans to V-shaped block.



c. Hold the transducer, and release the pressure position of the needle. Adjust the needle-type adjusting nut manually (following the direction of the arrow). The needle moves smoothly at the vertical direction due to its gravity.




3. Remove the needle-guided bracket:

17 - 32 Operator's Manual


a. Hold the transducer. Press the biopsy needle to separate the needle from pressure position of the needle.



- b. Separate the bracket and the transducer from the needle.
- c. Rotate the clamping nuts of the needle guided-bracket (following the direction of the arrow). The needle guided-bracket is separate from the transducer. Hold the transducer and take out the bracket.

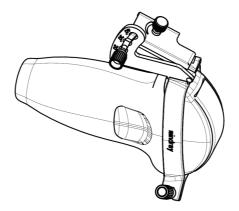

NGB-034

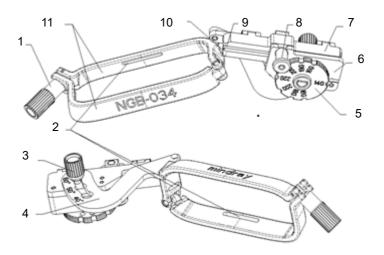


1	Needle fixing nut	2	Guiding groove
---	-------------------	---	----------------

3	Angle fixing nut	4	Angle adjusting base
5	Needle type dial scale	6	Needle adjusting base
7	V-shape cover	8	Lock pin
9	Needle guide hole	10	V-shaped guiding block
11	Clamp		


Perform the following procedure:

1. Install the needle-guided bracket:

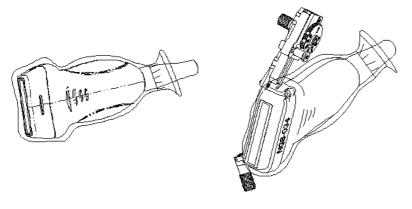


- a. Put on the sterile probe sheath.
- b. Select a proper needle-guided bracket, and match the locating groove with the tab of the probe. Mount the bracket onto the probe.
- c. Tighten the pinch nut of the needle-guided bracket to confirm that the needle-guided bracket is properly installed on the probe.
- 2. Adjust the needle angle to the proper shift as required:
 - a. Loosen the angle pinch nut.
 - b. Adjust the angle block to the desired level.
 - c. Tighten the angle pinch nut.
- 3. Insert the biopsy needle:
 - a. Adjust the dial scale to the required needle type shift.
 - b. Pull the lock pin and close the V-shaped cover to fix the lock pin in the groove of the needle type adjusting base, so as to install the needle into the guiding hole.
- 4. Release the needle from the bracket:

17 - 34 Operator's Manual

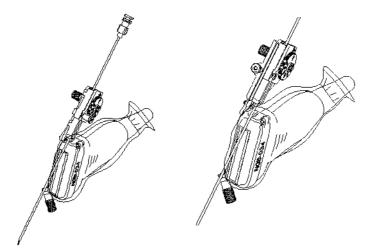



- a. Pull the lock pin out until the V-shaped cover can be turned and opened up.
- b. Turn over the V-shaped cover to expose the needle. Remove the probe and bracket.
- 5. Remove the needle-guided bracket:

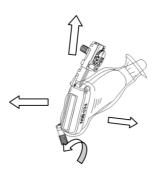

- a. Unscrew the pinch nut to release the needle-guided bracket.
- b. Hold the probe and take out the bracket.

NGB-036

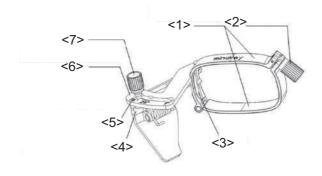

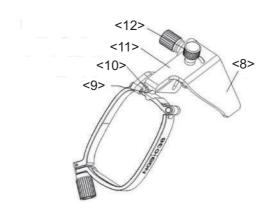

1	Left/right clamp	2	Left/right clamp pinch nut
3	Tab	4	Angle adjusting base
5	Angle shift sign	6	Angle adjusting block
7	Angle pinch nut	8	Separation pressure position
9	Guiding hole	10	V-shaped guiding block
11	Needle clamp cover	12	Needle type adjusting nut

Perform the following procedure:

- 1. Install the needle-guided bracket:
 - a. Put the sterile sheath on the probe.

17 - 36 Operator's Manual

b. Select a proper needle-guided bracket, and match the tab with the groove of the transducer. Mount the bracket onto the transducer.



c. Rotate the clamping nuts of the guided bracket on the right and left side to fix the bracket and the transducer. Rotate the needle-type adjusting nut to the ultimate position as shown in the figure.



d. Hold the transducer. Press the biopsy needle pressure position to separate it from needle guided V-shaped block.




e. Put the needle into the needle guided-bracket, and the needle leans to V-shaped block.




f. Hold the transducer, and release the pressure position of the needle. Adjust the needle-type adjusting nut manually (following the direction of the arrow). The needle moves smoothly at the vertical direction due to its gravity.



- 2. Remove the needle-guided bracket.
 - a. Pull the lock pin and open up the V-shaped cover to expose the needle.

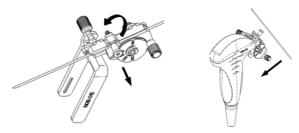


- b. Separate the bracket and the transducer from the needle.
- c. Screw the pinch nut to release the needle-guided bracket.

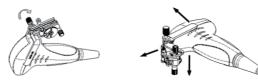

d. Separate the bracket and the transducer.

17 - 38 Operator's Manual

NGB-039

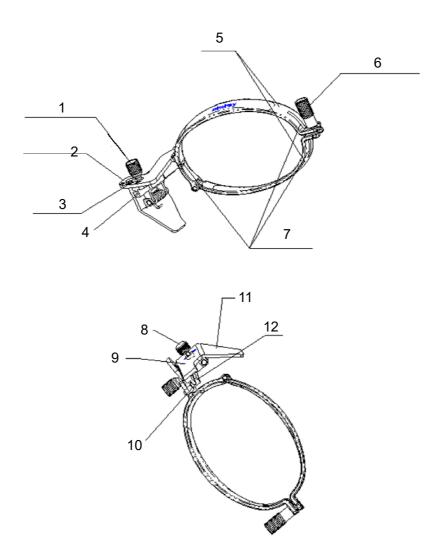

1	Angle blocking nut	2	Angle adjusting block
3	Angle mark	4	Angle adjusting base
5	Clamp	6	The clamping nut
7	Groove	8	Needle-guided bracket adjusting nut
9	Needle clamping cover	10	Needle guide hole
11	The pressing block for separating needle	12	V-shaped guiding block


Perform the following procedure:

- 1. Install the needle-guided bracket:
 - a. Put the sterile sheath on the probe.
 - b. Select a proper needle-guided bracket, and match the locating groove with the tab of the probe. Mount the bracket onto the probe.


Operator's Manual




c. Tighten the pinch nut of the needle-guided bracket to confirm that the needle-guided bracket is properly installed on the probe. Loosen the angle adjusting nut.

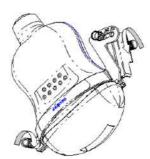

d. Hold the probe and press the pressing block to separate V-shaped guiding block from the pressing block.

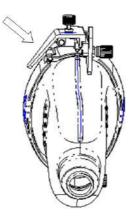


e. Insert the needle into V-shaped guided block.

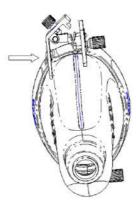


f. Release the pressing block, adjust the angle adjusting nut to confirm that the needle can freely slide in a vertical direction.

17 - 40 Operator's Manual

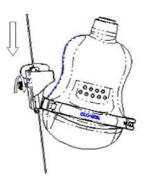


2. Remove the needle-guided bracket:


a. Hold the probe and press the pressing block to separate V-shaped guiding block from the pressing block.

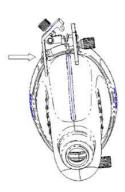

- b. Remove the needle.
- c. Rotate the clamping nut to separate the bracket from the probe.

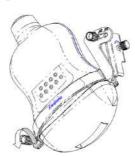

NGB-043

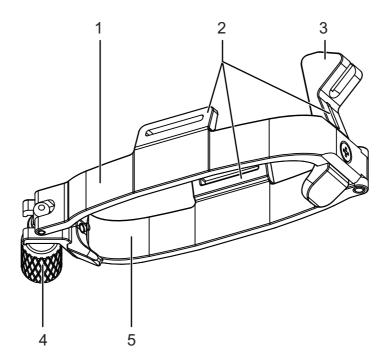

1	Left clamp	2	Groove
3	Guide frame	4	Locking nut of left and right clamps
5	Right clamp		


Perform the following procedure:


- 1. Install the needle-guided bracket:
 - a. Put on the sterile probe sheath.
 - b. Hold the probe in one hand, select the correct needle-guided bracket and hold it with the other hand. Match the grooves of the needle-guided bracket to the tabs of the transducer. Mount the bracket onto the transducer, and rotate the locking nut in the direction of the arrow shown on the figure to fix the bracket.



17 - 42 Operator's Manual

c. Insert a biopsy needle with the same specification as that of the guiding block into the guiding block hole. Adjust the biopsy angle of the needle, and ensure that the needle can be adjusted continuously within the range of 30°-85°.

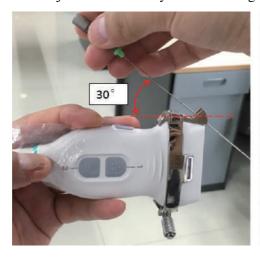

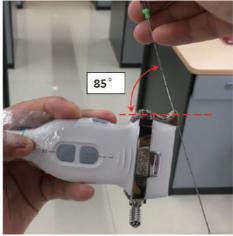


Remove the needle-guided bracket.

- a. Hold the probe, and remove the biopsy needle form the guiding hole of the guiding block.
- b. Rotate the locking nut in the direction of the arrow shown on the figure to separate the bracket from the probe.



NGB-044

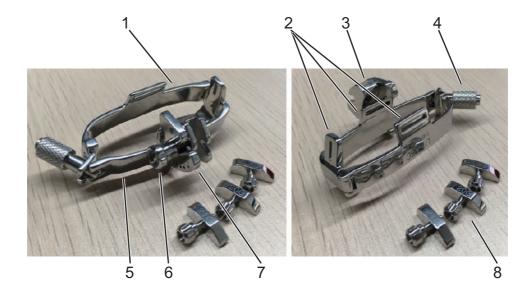

1	Right clamp	2	Groove
3	Guiding block fixing frame	4	Locking nut of left and right clamps
5	Left clamp	6	Depth pinch nut
7	Depth shift sign	8	Guiding blocks

Perform the following procedure:

- 1. Install the needle-guided bracket:
 - a. Put on the sterile probe sheath.
 - Hold the probe in one hand, select the correct needle-guided bracket and hold it with the other hand. Match the grooves of the needle-guided bracket to the tabs of the probe.
 Mount the bracket onto the probe, and rotate the locking nut to fix the bracket.



17 - 44 Operator's Manual

c. Loosen the depth pinch nut and fix it into the designated position of the depth shift sign after setting the desired depth.



d. Select a suitable guiding block and loosen its nut, install the guiding block to the guiding block fixing frame and then tighten the block nut tightly.



e. Insert a biopsy needle with the same specification as that of the guiding block into the guiding block hole.



2. Remove the needle-guided bracket.

a. Hold the probe and remove the needle from the guiding block hole.



b. Loosen the guiding block nut, and remove it from the guiding block fixing frame.




c. Rotate the clamping nuts on both sides of the needle guided-bracket to. separate The needle guided- the bracket is separate from the probe. Hold the probe and take it out of the bracket.



17 - 46 Operator's Manual

NGB-045

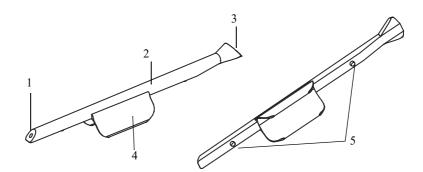


1	Needle exit	2	Needle guide
3	Needle entry	4	Retaining clamp
5	Locating bulges		

Perform the following procedure:


- 1. Install the needle-guided bracket:
 - a. Put on the sterile probe sheath.



b. Align the needle-guided bracket with the probe to align the locating bulges on the needle guide with the locating grooves on the probe, then turn the retaining clamp to the correct position.

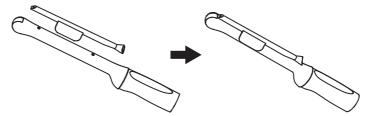


c. Hold the probe, and insert the needle into Needle entry of the needle guide.

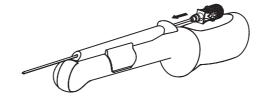


2. Remove the needle-guided bracket:


a. Hold the probe and remove the needle.

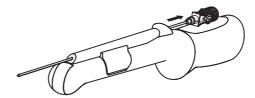

b. Hold the probe and raise the needle-guided bracket to separate the locating bulge from the locating grooves.

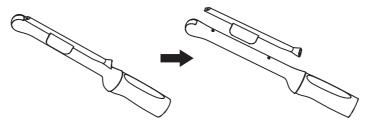

NGB-047

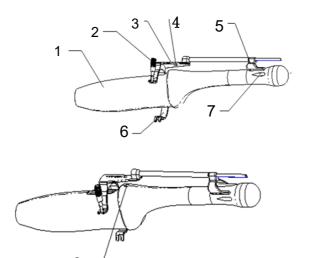

1	Intra-cavity probe	2	Pinch nut
3	Upper clamp	4	Position block
5	Front clamp	6	Lower clamp
7	Front slot	8	Positioning block

Perform the following procedure:

- 1. Install the needle-guided bracket:
 - a. Put on the sterile transducer sheath.



17 - 48 Operator's Manual

b. Open the clamp. Insert the front clamp to the front groove.



1 Align the front clamp with the front slot.

c. Push the biopsy forward (arrow's direction) until the locating pole inserting into the location hole. Turn the lower clamp against the intra-cavity probe. Tighten the nut to lock the biopsy (arrow's direction).




2. Remove the needle-guided bracket:

Hold the prober in the left hand; unscrew the locking nut with the right hand to loose the clamp (arrow's direction). Lift the biopsy up (towards arrow's direction). The locating pole, front clamp, the locating hole and the front clamp become loose.



NGB-048

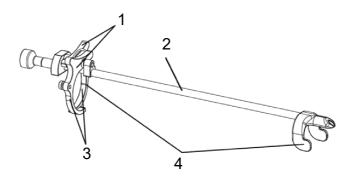


1	Separating button	2	Needle guiding structure
3	Clamp	4	Probe fixing structure

Perform the following procedure:


- 1. Install the needle-guided bracket:
 - a. Put on the sterile probe sheath.
 - b. Hold the probe in one hand, select the correct needle-guided bracket and hold it with the other hand. Press the separating button of the bracket to open the clamp. Match the fixing structure of the bracket with the positioning tab of the probe. Push the needle guided

Operator's Manual


bracket forward to insert the clamp into the installation grove at the back of the probe. Mount the bracket onto the probe.

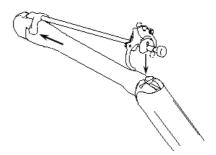


c. Arrange the probe sheath in order. Press the left and right clamps of the bracket to crosswise clamp the probe. Check if the bracket is properly installed to ensure that the it won't come off.

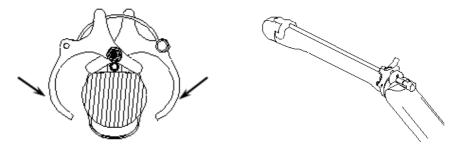

d. Hold the probe and insert the needle through the horn-shaped opening at the end of the bracket into needle guide.

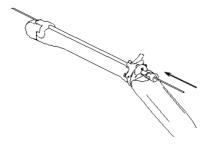


- 2. Remove the needle-guided bracket:
 - a. Remove the needle from the needle guide.

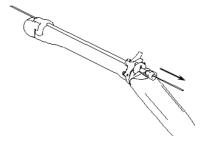


17 - 50 Operator's Manual


b. Hold the probe in one hand, and hold the bracket with the other hand. Press the separating button of the bracket to open the clamp.

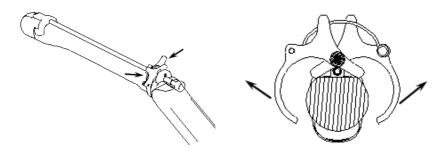

c. Hold the clasp at the end of the bracket to separate the bracket from probe.

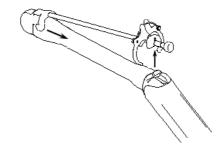

NGB-051

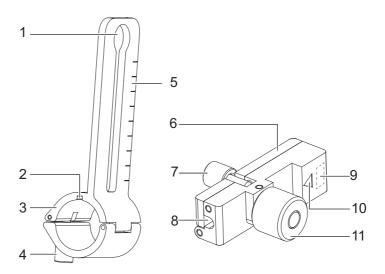


No.	Name	Description
1.	Support of needle-guided bracket	Used for installing the needle-guided bracket on the transducer.
2.	Knob of fixing needle-guided bracket	Used for fixing the needle-guided bracket on the transducer.
3.	Groove	Match with the tab on the transducer.
4.	Hole for installing guiding block	Used for installing the knob of fixing needle-guided bracket.
5.	Needle distance scales	Indicate distance between needle and the transducer head surface.

No.	Name	Description
6.	Guiding block	Used for installing biopsy needle; there are five specifications of guiding blocks for different needles.
7.	Knob of fixing the needle	Used for fixing the needle.
8.	Guiding hole of the needle	Used for installing the biopsy needle.
9.	Specification of guiding block	Matched with the corresponding biopsy needle.
10.	Mark of indicating scales	Indicating needle distance scales.
11.	Knob of fixing the guiding block	Used for fixing the guiding block.

Perform the following procedure:


- 1. Install the needle-guided bracket:
 - a. Put on the transducer cover.

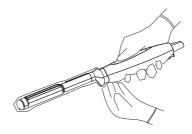

b. Cover the support of needle-guided bracket on the transducer, making the groove of the needle-guided bracket to match with the tab of the transducer. Set the needle-guided bracket at the desired position, turn tightly the knob of fixing needle-guided bracket to fix the needle-guided bracket.




c. Select a proper guiding block and thread the knob of fixing the guiding block through the hole of installing guiding block, move the guiding block to the desired position, then turn tightly the knob of fixing the guiding block to fix the guiding block on the support of needle-guided bracket.

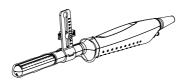


17 - 52 Operator's Manual

d. Insert a biopsy needle with the same specification as that of the guiding block into the hole of the guiding block and turn tightly the knob of fixing the needle.

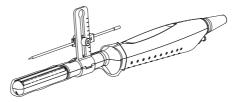

- 2. Remove the needle-guided bracket:
 - a. Turn on the knob of fixing the needle and separate the needle from the needle-guided bracket
 - b. Turn on the knob of fixing guiding block and remove the guiding block from the hole of installing guiding block.
 - c. Turn on the knob of fixing needle-guided bracket and remove the needle-guided bracket.

NGB-053

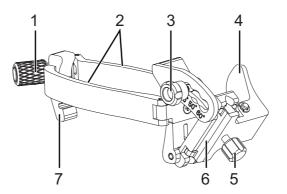

1	Clamp pinch nut	2	Clamps
3	Angle pinch nut	4	Separation pressure position
5	Needle type adjusting nut	6	Needle guide hole
7	The location position block		


Perform the following procedure:

- 1. Install the needle-guided bracket:
 - a. Put on the sterile probe sheath.
 - b. Hold the probe in one hand, select the correct needle-guided bracket and hold it with the other hand. Match the grooves of the needle-guided bracket to the tabs of the probe.
 - c. Mount the bracket onto the probe, and rotate the pinch nut to fix the bracket.
- 2. Adjust the needle angle to the proper shift as required:
 - a. Loosen the angle pinch nut.
 - b. Adjust the angle block to the desired level.
 - c. Tighten the angle pinch nut.
- 3. Insert the biopsy needle:
 - a. Hold the probe. Press the separation pressure position to separate needle guided V-shaped block from pressure position of the needle.

Operator's Manual

- b. Put the needle into the needle guided-bracket, and the needle leans to V-shaped block.
- c. Hold the probe, and release the pressure position of the needle. Adjust the needle-type adjusting nut manually. The needle moves smoothly at the vertical direction due to its gravity.
- 4. Release the needle from the bracket:
 - a. Hold the probe. Press the biopsy needle to separate the needle from pressure position of the needle.
 - b. Separate the bracket and the probe from the needle.
- 5. Remove the needle-guided bracket:
 - Rotate the pinch nut of the needle guided-bracket.
 The needle guided-bracket is separate from the probe.
 - b. Hold the probe and take out the bracket.

NGB-054

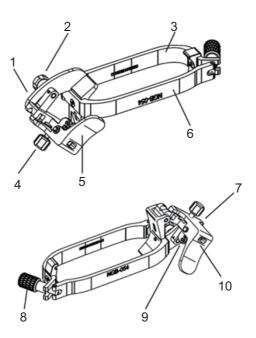


1	Angle adjusting block	2	Angle locking nut
3	Right clamp of the bracket	4	Needle-shaped adjusting nut
5	Needle clamping cover	6	Left clamp of the bracket
7	Angle adjusting base	8	Locking nuts of the guided bracket at the right and left sides
9	Torsion spring of the needle pressure cover	10	Biopsy needle pressure position

Perform the following procedure:


- 1. Install the needle-guided bracket.
 - a. Put on the sterile probe sheath.
 - b. Hold the probe in one hand, select the correct needle-guided bracket and hold it with the other hand. Match the inside of the bracket with the outside of the probe respectively. Mount the bracket onto the probe. Rotate the locking nuts of the guided bracket at the

17 - 54 Operator's Manual


right and left sides to fix the bracket and the probe. Rotate the needle-shaped adjusting nut to the ultimate position as shown in the figure.

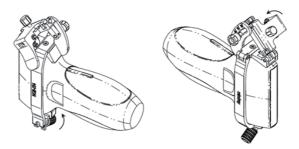

c. Hold the probe. Press the biopsy needle pressure position to separate it from the V-shaped guiding block. Put the needle into the V-shaped guiding block of the needle guidedbracket.

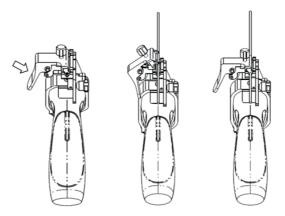


d. Hold the probe, and release the pressure position of the needle. Adjust the needle-shaped adjusting nut manually (following the direction of the arrow). The needle moves smoothly at the vertical direction due to its gravity.

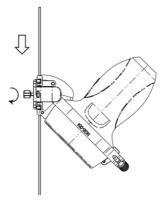


2. Removing Needle-Guided Bracket.

Operator's Manual

a. Hold the probe. Press the biopsy needle pressure position to separate the biopsy needle from the pressure position. Separate the bracket and the probe from the needle.

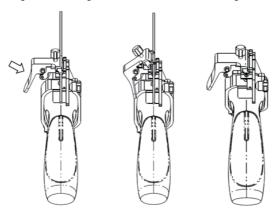

b. Rotate the locking nuts of the needle guided-bracket at the right and left sides (following the direction of the arrow). The needle guided-bracket is separate from the probe. Hold the probe and take out the bracket.

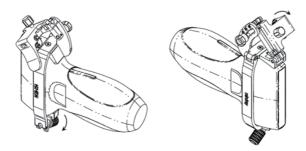

17.2.3 Verifying the Biopsy Guide Line

MARNING

- Prior to each biopsy procedure, be sure to verify the guide line.
- If the needle is not consistent with the guide line, DO NOT perform the biopsy procedure.

NOTE:

You can perform guide line verification on a single live B/C image, and all biopsy-irrelevant operations are forbidden.

Adjusting the needle mark is necessary before each biopsy procedure.

Perform the following procedure:

- 1. Confirm that the needle-guided bracket has been installed securely in the correct position.
- 2. Prepare a container filled with sterile water.
- 3. Place the head of the probe in the sterile water and place a biopsy needle in the needle guide.
- 4. When the biopsy needle appears on the image, confirm that the biopsy needle is displayed at almost the same position as the selected needle mark.
- 5. Press <F11 Biopsy> to enter Biopsy.

17 - 56 Operator's Manual

- Select the biopsy bracket angle/guide line: If the needle-guided bracket supports more than one biopsy angle, select the angle/guideline by using [Biopsy Kit].
- Select the guide line dot size: Tap [Dot Size] to select the dot size.

NOTE:

- The guide line is a dotted line which consists of two kinds of dots. The distance between two dots is depth-dependent. Move the cursor over the big dot and a numeral, representing the biopsy depth, is displayed.
- The biopsy guide zone adjusts along with image adjustments, such as image inversion/rotations, zoom and depth changes.
- When the imaging depth and area are changed, the guide line is adjusted.
- Tap [Biopsy] or press <F11 Biopsy> to exit.

NOTE:

In real-time status, press <F11 Biopsy> to exit biopsy status; in frozen status, press <F11 Biopsy> to hide/show the guide line if biopsy function is enabled.

- 6. Tap [Verify] in the Biopsy tab to open the Biopsy Verify menu.
 - Adjust the guide line position: Rotate the knob under [Position] on the touch screen to change the position of the guide line.
 - Adjust the angle: Rotate the knob under [Angle] on the touch screen to change the guide line angle.
 - Biopsy guide grid
 - Tap [C/L] on the touchscreen or press the user-defined keys for "C/L" on the probe to switch the probe plane.

For ELC13-4sC (convex plane), the biopsy needle appears as a spot on the image. On the image, find and select the guide grid point corresponding to the biopsy needle insertion point of the template grid, and then adjust the parameters of the menu on the screen to make sure that the biopsy needle is displayed at almost the same position as the selected guide grid point.

For ELC13-4sL (linear plane), select one grid point in the D column of the template grid to insert the needle, and the biopsy needle appears as a line on the image. On the image, find and select the guide grid line corresponding to the biopsy needle insertion line of the template grid, and then adjust the parameters of the menu on the screen to make sure that the biopsy needle is displayed at almost the same position as the selected guide grid line.

- Save the verified settings: After the position and angle of the guide line are adjusted, touch [Save] and the system saves the current guide line settings. If biopsy is entered again, the displayed Position and Angle are the verified value.
- Restore the factory default settings: Tap [Load Factory] and the position and angle of the guide line are restored to the factory default settings.
- Exit biopsy verify status: Tap [Exit] and the system exits the guide line verification status.

17.2.4 Starting the biopsy procedure

↑ DANGER

- Ensure that all guide parts are properly fixed prior to performing a biopsy.
- If you changed the probe or needle-guided bracket during the biopsy, verify the guide line again.


- Failure to match the guide zone displayed to the guide may cause the needle to track a path outside the zone.
- It is extremely important that when using the adjustable angle biopsy guides, the angle displayed on the screen matches the angle set on the guide, otherwise the needle will not follow the displayed guide zone and this could result in repeated biopsies or patient injury.

Perform the following procedure:

- 1. Select the correct needle-guided bracket and needle and install them properly.
- 2. Press <Biopsy> to enter the biopsy. Before biopsy guiding, you can preset bracket model, biopsy display and guide line dot type.
 - If the current probe has no corresponding bracket, or the image is frozen and the guide line was hidden before the image was frozen, then you cannot enter the Biopsy menu.
- 3. Select the bracket and guide line according to the actual situation.
 - Tap [Verify] to enter Biopsy Verify menu to fine tune the guide line if needed.
- 4. If available, use iNeedle function to help enhance the needle visualization when the needle display is not clear.
 - a. Tap [iNeedle] in B menu.
 - The parameters that can be adjusted appear on the menu:
 - [B/iNeedle]: tap to display B image and iNeedle image synchronously.
 - [Needle Dir.]: select to adjust the needle direction display according to actual direction of needle insertion. The iNeedle affecting region changes correspondingly.
 - b. Tap [iNeedle] again to exit iNeedle.
- 5. Scan to locate the target. Center the target in the electronic guidezone path.
- 6. Direct the needle into the area of interest for specimen.
- 7. After extracting the biopsy sample is complete, gently remove the probe from the body.
- 8. Press <F11 Biopsy> in non-frozen state to exit; press <F11 Biopsy> in frozen state to hide/ show the biopsy.
- 9. Disassemble the items and properly dispose of these items as required.


17.2.5 iNeedle (Needle Visualization Enhancement)

In the course of biopsy, the metal needle attached to the probe is punctured into the tissue with a certain angle; because of the needle acoustic impedance, the ultrasonic beam cannot penetrate the metal needle, a reflecting boundary is formed. As in figure below, If the deflection angle is very large, the needle display is not clear.

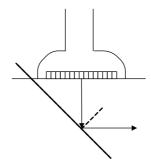

17 - 58 Operator's Manual

In the condition of deflected ultrasonic transmission, the beam direction is perpendicular to the needle direction, and the reflection direction will be the same with the needle, as shown in figure below, when the needle display in the ultrasound image is very clear. The system provides an additional deflection transmission that is approximately perpendicular to the metal needle, as the normal transmission (perpendicular to the transducer surface) is contained as well. And the deflection angle can be chosen by users.

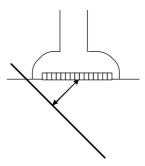

Premium angle display

The premium angle appears on the screen after entering iNeedle.

The appropriate angle is 30° as shown in the figure below.



Needle Direction

This function adjusts the biopsy needle direction according to actual direction of needle insertion. The iNeedle affecting region changes correspondingly.

Tap [Needle Dir.] to select the direction.

B/iNeedle

This function is used to display B image and iNeedle image synchronously. To disable or enable the function, tap [B/iNeedle] on the touch screen.

TIP:

iZoom (full-screen magnification) is available on iNeedle status.

17.2.6 Clean and Sterilize the Needle-Guided Bracket

For the detailed information, see *Ultrasound System Cleaning*, *Disinfection & Sterilization Guide [Advanced]*.

17.2.7 Storage and Transportation

- Do not use the carrying case for storing the needle-guided bracket. If the carrying case is used for storage, it may become a source of infection.
- Between examinations, keep the needle-guided bracket in a sterile environment.
- If the needle-guided bracket is sent to your MINDRAY representative for repair, be sure to disinfect or sterilize it and keep it in the carrying case to prevent infection.
- Sterilize the carrying case as necessary.
- Store or transport the needle-guided bracket under the following ambient conditions:
 - Ambient temperature: -20 °C to 55 °C
 - Relative humidity: 20% to 95% (no condensation)
 - Atmospheric pressure: 700hPa-1060hPa

17.2.8 Disposal

Be sure to sterilize the needle-guided bracket before disposing of it. Contact your MINDRAY representative when disposing of this device.


17.3 Needle Navigation Guiding


MWARNING

- The person performing needle navigation guiding procedures must understand diagnostic ultrasound thoroughly and have been trained adequately, otherwise, side effects may be caused in the patient.
- Wear sterile gloves before performing the needle navigation.
- Clean and disinfect the navigation device by instructions in the device accompanied manual before and after needle navigation.
- Please read the warning information by instructions in the device before needle navigation.
- Disinfect the probe and sterilize the bracket. For details, refer to chapter "17.2.6 Clean and Sterilize the Needle-Guided Bracket". Otherwise, crossinfection may be caused.
- When performing needle navigation procedures, use only sterile ultrasound gel that is certified to be safe. And manage the ultrasound gel properly to ensure that it does not become a source of infection.
- Needle navigation on patients with implants or with intracavity electro, magnetic, mechanical device are prohibited. When the magnetic positioning system is working, previously described patients should be at least 1 meter away from the working area. Bent or damaged needle are forbidden in the operation.
- Perform accuracy verification before conducting needle navigation. You
 can use the needle-guided bracket to anchor the needle before needle
 navigation for a better result.
- Needle guidance on the ultrasound image is for reference only and cannot provide as sole guidance for diagnosis basis.

17 - 60 Operator's Manual

- The needle mark displayed on the ultrasound image does not indicate the
 actual position of the needle. Therefore, it should only be used as a
 reference. Always monitor the relative positions of the biopsy needle during
 the procedures.
- Stop operation immediately when incorrect installation or improper working status of the magnetic device is observed. Contact the device manufacturer for further action. Do not freeze an image while performing biopsy procedure. Image of the biopsy target and the actual position of the biopsy needle: Diagnostic ultrasound system produces tomographic plane images with information of a certain thickness in the thickness direction of the transducer. (The information shown in the images consist all the information scanned in the thickness direction of the probe.) So, even though the needle appears to have penetrated the target object in the image, it may not actually have done so.
- When the target for biopsy is small, dispersion of the ultrasound beam may lead to image deviate from the actual position. Pay attention to this. Image deviation is shown as the figures below:

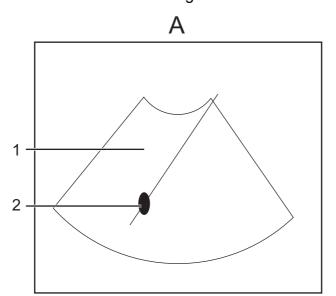

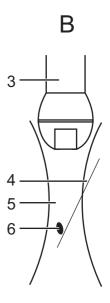

A	The biopsy needle appears to reach the target object in the image	В	Dispersion of the ultrasound beam
1	Needle	2	Target
3	Probe	4	Needle
5	Ultrasound beam	6	Target

To avoid this problem, note points below:

- Do not rely only on the echo of the needle tip on the image. Pay careful attention to the target object, which should shift slightly when the biopsy needle comes into contact with it.
- Before you perform the biopsy, please evaluate the size of the object and confirm if the biopsy can be carried out successfully.

NOTE:

- Refer to navigation device accompanied manual about installation, operation and disinfection of navigation device. Contact navigation device manufacturer if necessary.
- During needle navigation guiding procedure, please keep the navigation device, ultrasound system and the probe away from electromagnetic interference, such as: power filter, signal indication, magnetic materials, cellphone and metal instruments. Otherwise, navigation may be interfered.
- Frontal side of the magnetic positioning system controller should directly face the lesion. Distance between the magnetic positioning system controller front part and the target should reaches 20-66cm within the scope of 30cm from left to right, up to down. Otherwise, magnetic signal is unstable for navigation precisely.
- Check stability of magnetic positioning system before conducting needle navigation.
- The Fusion Imaging is contraindicated to the person wearing the internal pacemaker, cochlear implant or nerve stimulator. People wearing the implant or intra-corporeal devices should keep one-meter away when the magnetic generator starts working.

Needle navigation feature combines technology of real-time imaging and mini-magnetic locating to provide GPS real-time guiding biopsy. Based on the sensors attached to the probe and needle, magnetic positioning system provides the related 3-dimentional orientation of the needle and the ultrasound image plane.

There are two types of needle navigation: in-plane and out-plane. In-plane navigation applies to needle path inside the ultrasound image plane and out-plane navigation applies to needle path not inside the ultrasound image plane.

17.3.1 Basic Procedures for Needle Navigation Guiding

Needle navigation guiding biopsy procedure under non-Fusion mode

Perform the following procedure:

- 1. Connect all accessories of magnetic positioning system. Refer to chapter "6.16.2 Magnetic Positioning System" and "17.3.2 Installation" for details.
- 2. Activate needle navigation guiding feature and select needle type and length. Perform accuracy verification. For details, refer to chapter "17.3.3 Accuracy Verification".
- 3. Perform ultrasound image scanning and confirm position/size/structure of tumor/lesion. Mark the lesion. For details, refer to chapter "17.3.4 Mark".
 - Tap [SSC] to perform acoustic speed correction.
- 4. Place the needle next to the probe and adjust the biopsy guideline on the image for recommended needle position and angle.
 - The guideline turns green if it is able to reach the lesion mark.
- 5. Perform biopsy by the guideline.
 - The distance indicating box shrinks by the time needle tip goes towards the lesion mark. When the tip reaches the lesion mark, the box turns green and merges with the tip.
 - For detailed procedure description, refer to chapter "17.3.5 Screen Display in the Guiding".
- 6. Save the single-frame and multi-frame image if necessary.

Needle navigation guiding biopsy procedure under Fusion mode

Perform the following procedure:

17 - 62 Operator's Manual

- 1. Connect all accessories of magnetic positioning system. Refer to chapter "6.16.2 Magnetic Positioning System" and "17.3.2 Installation" for details.
- 2. Activate needle navigation guiding feature and select needle type and length. Perform accuracy verification. For details, refer to chapter "17.3.3 Accuracy Verification".
- 3. Enter Fusion imaging and load CT/MR/PET/freehand data. Refer to step 1-5 in chapter "6.16.4 Basic Procedures" for details.
- 4. Mark the tumor/lesion on CT/MR/PET/freehand image. For details, refer to chapter "6.16.6 Marks".
 - Tap [SSC] to perform acoustic speed correction.
- 5. Register CT/MR/PET/freehand data. For details, refer to chapter "6.16.4 Basic Procedures".
- 6. Place the needle next to the probe and adjust the biopsy guideline on the image for recommended needle position and angle.
 - The guideline turns green if it is able to reach the lesion mark.
- 7. Perform biopsy by the guideline.
 - The distance indicating box shrinks by the time needle tip goes towards the lesion mark. When the tip reaches the lesion mark, the box turns green and merges with the tip.
 - For detailed conversion procedure description, refer to chapter "17.3.5 Screen Display in the Guiding".
- 8. Save the single-frame and multi-frame image if necessary.

17.3.2 Installation

MARNING

- Do not bend the needle during installation.
- Improper installation of the magnetic positioning system leads to incorrect space navigation.

NOTE:

- Dispose needle, sensor support, and sterile cover by requirements of the manufacturer. Keep the bracket sensor.
- Clean and disinfect the sensor by requirements of the manufacturer and do not bend the sensor.
- Refer to the manufacturer manual for magnetic navigation installation and other information.
- Make sure the dimensions of sensor and eTRAX needle is basically the same, or magnetic navigation may be incorrect.
- eTRAX needle sensor is matched with eTRAX needle and trocar.

vTRAX



1	Needle	2	Needle bracket
3	Needle sensor	4	Sterile cover

Specifications:

· Biopsy needle

10~17G hard needle (vTRAX). Diameter: 2.0-3.3mm. Needle should be of non-interference to the sensor. Refer to manual provided by manufacturer for disinfection information.

Needle sensor

Manufacturer: CIVCO.
Product number: 610-1080

• Needle sensor support and sterile cover (disposable)

Manufacturer: CIVCO Product number: 610-1059

Probe sterile sheath
 Manufacturer: CIVCO
 Magnetic positioning system

Magnetic positioning system controller, transmitter and probe sensor. Refer to "6.16.2 Magnetic Positioning System" for details. Abdomen sensor is necessary under Fusion imaging mode.

Refer to manufacturer manual for details about installation and disinfection of the magnetic positioning system. Contact the manufacturer of the magnetic positioning system if necessary.

To order needle sensor and needle sensor support, contact:

• CIVCO Medical Instruments Co.

• 102 First Street South, Kalona, IA 52247-9589 USA

• Tel: 1-319-656-4447

• E-mail: info@civco.com

• http://www.civco.com

Perform the following procedure:

17 - 64 Operator's Manual

- 1. Refer to "6.16.2 Magnetic Positioning System" for installation of magnetic controller, auxiliary power line, USB cable, and magnetic generator and probe sensor. Abdomen sensor is necessary under Fusion imaging mode.
- 2. Wear the probe sterile sheath after probe sensor and bracket are installed.
- 3. Connect the needle sensor to the 3rd port on the magnetic controller.




4. Put on the sterile cover onto the needle sensor.



5. Connect needle sensor to the bracket.



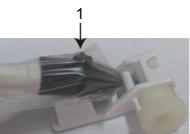

6. Loose the knob on the bracket anti-clockwise and insert the vTRAX needle into the bracket by the arrow direction. Anchor the bracket at the bottom of the needle and then tighten the knob.





7. Turn on the magnetic positioning system power and perform needle navigation guiding operation after the signal is stabilized.

eTRAX

eTRAX needle is used to biopsy, melt, drainage, administere, vascular access, local anaesthetic.



1	eTRAX needle sensor	2	eTRAX neeedle
3	Sterile sheath		

17 - 66 Operator's Manual

Specifications:

- Needle sensor
 - Manufacturer: CIVCO.
 - Product number: 610-1112
 - Wear sterile sheath for sensor.
- eTRAX needle and sterile sheath (disposable)
 - Manufacturer: CIVCO
 - Product number: 16G eTRAX needle
 - eTRAX needle model: 610-1057, 610-1606-10, 610-1608-10, 610-1610-10, 610-1613-10, 610-1615-10
- Biopsy/melt needle
 - 16G biopsy/melt needle
 - Refer to manual provided by manufacturer for disinfection information.
- Probe sterile sheath
 - Manufacturer: CIVCO
 - Wear sterile sheath for probe, refer to "6.16.2 Magnetic Positioning System" for details.
- Magnetic positioning system

Magnetic positioning system controller, transmitter and probe sensor. Refer to "6.16.2 Magnetic Positioning System" for details. Abdomen sensor is necessary under Fusion imaging mode.

Refer to manufacturer manual for details about installation and disinfection of the magnetic positioning system. Contact the manufacturer of the magnetic positioning system if necessary.

To order needle sensor and needle sensor support, contact:

- CIVCO Medical Instruments Co.
- 102 First Street South, Kalona, IA 52247-9589 USATel: 1-319-656-4447
- E-mail: info@civco.com
- http://www.civco.com

Perform the following procedure:

- 1. Refer to "6.16.2 Magnetic Positioning System" for installation of magnetic controller, auxiliary power line, USB cable, magnetic generator and probe sensor. Abdomen sensor is necessary under Fusion imaging mode.
- 2. Connect the needle sensor to the 3rd port on the magnetic controller.



3. Put on the sterile sheath onto the needle sensor.



4. Insert the sensor into the needle.



5. Tighten the knob, and make sure not to break the sterile sheath.



- 6. Turn on the magnetic positioning system power and perform needle navigation guiding operation after the signal is stabilized. Refer to "6.16.3 Screen Description" for details.
- 7. Perform needle navigation guiding; refer to "17.3.1 Basic Procedures for Needle Navigation Guiding" for details.

17 - 68 Operator's Manual

8. Anticlockwise rotate the eTRAX needle interface to take out the needle from trocar after the eTRAX needle access the target tissue.



9. Select the proper Biopsy/melt needle according to the actual situation.

17.3.3 Accuracy Verification

MARNING

- This manual describes simple accuracy verification only. Perform elaborate accuracy verification procedure based on clinical scenario if necessary.
- If the needle is bent, projective line of the needle and projective point of the tip will not suit the actual situation.
- Be sure to conduct accuracy verification before needle navigation. Perform needle navigation when the measured result is in the acceptable range.

Accuracy error is measured by comparing actual biopsy depth and the measured depth in the ultrasound image. Needle navigation guidance feature should be activated only when the error is acceptable.

Perform the following procedure:

1. Connect all accessories of magnetic positioning system.

2. Precisely measure the distance between tip to the bottom.



NOTE:

- Use disinfected tool to measure the distance.
- Precise length data of the needle is important to the space magnetic navigation.
- 3. Tap [Needle Navigation] on the touch screen to turn on the feature. Select needle type and set needle length.

Tap [Edit Needle] and enter "Needle name" "Length" (measured in the step 1) and "needle size (needle model)". Tap [Add] to add vTRAX/eTRAX information in the system. You can update vTRAX/eTRAX needle data.

You can also adjust by rotating the knob under [Needle Length] on the touch screen.

- 4. Put the needle tip against the middle part of probe surface and press <Freeze>. Press <Caliper> to enter general measurement and measure the distance between the tip and the probe surface.
- 5. Put the needle body on the probe surface horizontally and press <Freeze>. Press <Caliper> to enter general measurement and measure the distance between the needle and the probe surface.

17.3.4 Mark

Marking procedure under non-Fusion mode

You can mark the tumor/lesion on the ultrasound image as indication for real-time biopsy.

NOTE:

- Keep the magnetic positioning system and patient still after mark is added. Otherwise, space navigation GPS result is affected.
- Make sure only one mark is left on the ultrasound image during needle navigation guidance procedure. If there are multiple marks on the image, hide the marks.

Perform the following procedure:

- 1. Connect all accessories of magnetic positioning system. Perform accuracy verification procedure.
- 2. Perform ultrasound image scanning and confirm position/size/structure of tumor/lesion. Switch to the section with maximum size of the lesion.
- 3. Mark the lesion: Tap [Tissue Mark] and press <Cursor> to acquire the cursor. Roll the trackball to move the cross onto the center of the lesion and press <Set> to anchor the center. Roll the trackball until the whole lesion is enveloped and double-click <Set> to add the mark.

Rotate the knob under [Ablative Margin] to add a safe boundary for the mark. Refer to chapter "6.16.6 Marks" for details.

17 - 70 Operator's Manual

NOTE:

Be sure to use the section displaying the maximum of the lesion for marking.

- 4. The lesion is enveloped by 3 circles from the inside and out: real-time mark, maximum diameter mark and safety boundary.
 - Perform the marking steps repeatedly for multiple marks. Marked color are displayed in green, red and blue in cycle and result window displays the diameter of the marked circle.
 - Refer to chapter "6.16.6 Marks" for details about moving/deleting/displaying/hiding marks.


Marking procedure under Fusion imaging mode

Tap [Register CT/MR] and tap [Add Mark]->[Display Marks] to turn on the mark function. Refer to chapter "6.16.6 Marks" for details.

17.3.5 Screen Display in the Guiding


In-plane biopsy

In-plane navigation applies to needle path inside the ultrasound image plane.

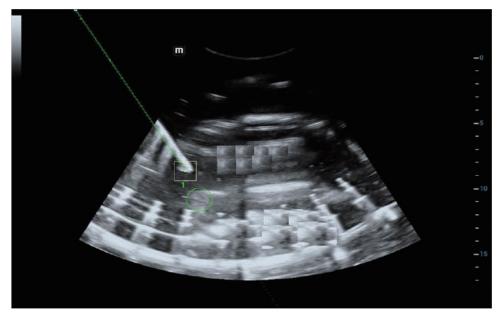

Out-plane biopsy

Out-plane navigation applies to needle path not inside the ultrasound image plane.

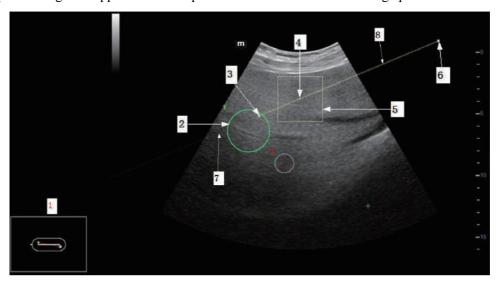

No	Image	Description	
1.	Orientation indication	 Orientation of the needle to the surface of the acoustic lens. Needle color turns green if the needle is inside the real-time ultrasound image plane. Needle color turns brown if the needle is not inside the real-time ultrasound image plane. 	
2.	Mark	Mark the lesion/tumor.	
3.	Intersection	Intersection displays if the needle navigation is conducted in out-plane status. Intersection is the cross point of the needle and the ultrasound image plane.	
4.	Tip projecting point	Projecting point of the needle tip on the ultrasound image plane.	
5.	Indicating box	 Image with mark: the box indicates the needle tip projecting point to the mark. Image with no mark: the box indicates the needle tip projecting point to the intersection in out-plane status. The distance indicating box shrinks by the time needle tip goes towards the lesion mark or intersection. When the tip is 3mm away from the lesion mark or intersection, the box turns green. 	
6.	Needle end projecting point	Projecting point of the needle end on the ultrasound image plane.	
7.	Projected line	Projected line of the needle on the ultrasound image plane. Solid line in the middle is the projected line of the needle central part. Dotted line on the both sides are top and bottom parts of the needle. Needle projected line turns green if the needle is inside the real-time ultrasound image plane. Needle projected line turns brown if the needle is not inside the real-time ultrasound image plane.	

17 - 72 Operator's Manual

No	Image	Description	
8.	Guideline	Virtual line.	
		• Image with mark: guideline turns green if it can cross the mark. Otherwise, the guideline turns brown.	
		Image with no mark: guideline displays in brown.	
		Tap [Guideline] to display or hide the guideline.	

17.3.6 Disposal

Dispose needle, sensor support, sterile cover by requirements of the manufacturer. Contact the manufacturer for details.

Dispose the bracket after sterilization. Contact Mindray for bracket disposal.

17.4 Middle Line

Middle Line helps to locate and observe the focus point of lithotripsy wave during lithotripsy treatment. By means of providing information for the lithotripsy machine as well as a tool for watching the procedure of lithotripsy in real-time, you can adjust the intension and frequency of the lithotripsy wave through lithotripsy machine.

Tap [Middle Line] in the biopsy tab or preset a shortcut key for middle line function.

- The middle line is a vertical dotted line located in the middle of the screen, the position and direction of which cannot be changed.
- There is a mark icon of "x" located on the middle line which can be moved up and down along the line by using the trackball.
- To use the Middle Line function of the ultrasound system:
 - a. Use the trackball to change the mark position and by adjusting lithotripsy machine tools or patient posture to locate the stone center at the mark.
 - b. Read the depth of the mark by observing the depth caliper on the screen.
 - c. After the stone is located, refer to lithotripsy machine manuals to perform the lithotripsy.
- The depth of the mark is displayed in the image parameter area of the screen.

Operator's Manual 17 - 73

This page intentionally left blank.

18 DVR Recording

NOTE:

- Strictly observe the procedures described here to perform the recording and replaying operations; otherwise it may result in data loss or system malfunction.
- Set the PAL or NTSC in the setup and this shall be consistent with that in the DVR.
- Accidental exposure to strong electromagnetic fields or mishandling of the video cassette may result in image and data loss, so check if the recording is successful as soon as possible.
 Mindray is not responsible for any data loss.

The system provides built-in DVR recording function. You can use the DVR to record and replay videos and audios that can be stored in DVD disc or hard disc.

The recorded video is AVI format; you can save it in the hard disk drive, burn to the DVD or export to the USB disk.

When the built-in DVR is in normal status, the displays at the lower right corner of the screen.

18.1 Start Recording

After recording, the system will save the recording file automatically, you can select to save in local disk, U disk or optical disk.

- 1. Perform ultrasound exams, select appropriate views and adjust parameters to prepare for recording.
- 2. Click to open the dialog box and select desired recording type: Hard disk/USB/CDROM.
- 3. Click [Close] to enter recording status.
- Press <F9> to record, and the DVR icon displays as
 [♠] in recording status.

During the recording process, you can perform imaging mode switching, comments adding, body mark adding and measurements.

- 5. Press <F9> again to stop recording, the DVR icon in the lower right corner turns into data transfer status .
 - If "USB"/"CDROM" is selected, the system sends the recorded file to the target storage media (USB disk or DVD optical disk drive) in the meantime.
 - If "Hard disk" is selected, the system saves the file to the path: D/LV/DVR.

In the task management screen, click [Media Storage Task] tab to check transferring status.

18.2 Send Image

The system also supports exporting recorded images that are saved in the local disk.

1. Click to open the dialog box, and click [Local Video Manage] to enter the managing dialog

Click [Rename] to rename the video file.

Operator's Manual 18 - 1

2. Select the destination and the target file, click [Send To] to send the file to the selected path. During sending progress, the icon displays as

18.3 DVR Video Replay

You can replay the video and audio record.

18.3.1 Replay on PC

Connect the USB disk or optical disk with the file to the PC, open the file directly.

18.3.2 Replay on the ultrasound system

Perform the following procedure:

- Click to open the dialog box.
- 2. Click [Play] to open the dialog box.
- 3. Select the path and type for the file and then click [OK] to replay the file, or double-click the file name directly.

18 - 2 Operator's Manual

19 System Maintenance

Routine system maintenance shall be carried out by the user. System maintenance after the warranty has expired is the full responsibility of the owner/operator.

The responsibility for maintenance and management of the product after delivery resides with the customer who has purchased the product.

If you have any questions, please contact Mindray Customer Service Department or sales representative.

MARNING

- Only an authorized Mindray service engineer can perform maintenance not specified in this operator's manual.
- For the sake of the system performance and safety, you should perform periodical checks for the system.

19.1 Daily Maintenance

You are responsible for daily maintenance.

No.	Item	Recommended Frequency
1.	Clean the probes	After each use
2.	Clean the holders	1 time per month
3.	Cleaning the machine shell	1 time per month
4.	Cleaning the monitor and touch screen	1 time per month
5.	Clean the control panel	1 time per month
6.	Clean the trackball	1 time per month
7.	Clean the dust-proof cover	1 time per month
8.	Cleaning the ultrasound gel heater	1 time per month
9.	Clean peripherals	1 time per month
10.	Check the probes	1 time per day
11.	Check the power cord and plug	1 time per month
12.	Check the battery	1 time per 3–6 months
13.	Check the functions of peripherals and optional accessories	1 time per year

Operator's Manual

19.1.1 Cleaning the System

MARNING

- Before cleaning the system, be sure to turn off the power and disconnect the power cord from the outlet. Cleaning the system while the power is "On" may result in electric shock.
- DO NOT directly spray solution onto the monitor, system control panel or hard surfaces that is under pressure or pumped. Ingress fluid leakage into the monitor or system can damage the monitor or system, causing possible electric shock or system failure.

ACAUTION

Do not spill water or other liquid into the system while you perform the cleaning. Otherwise it may result in malfunction or electric shock.

Cleaning holders

NOTE:

Clean the holders periodically.

Tools: soft dry cloth, soapy water, soft brush.

Remaining stains should be wiped away using a cloth with clean or soapy water and the surface left to air dry.

Perform the following procedure:

- 1. Use a soft dry cloth to wipe away dust attached to the inside, outside and gaps in the probe holder. Use a soft brush to brush away dust or stains from the small intra-cavity probe holder or its gap.
- 2. Remaining stains on the inside and outside of the holder should be wiped away using a cloth with a little soapy water and then air dried.

Cleaning probes

For details about cleaning the probe head, probe cable, and probe socket, refer to the accompanying cleaning and disinfection guide.

Cleaning the machine shell

NOTE:

- Use a soft brush to gently remove the dust from naked interfaces or sockets (such as probe sockets, IO panels, and power supply panel). Do not use a water cloth.
- Clean the machine shell periodically.

Tools: mild soapsuds, and dry soft cloth

Use a dry soft cloth to wipe the dirt off the machine shell (the exposed part).

Or, use with a dry soft cloth dipped in a small amount of mild soapsuds to remove stains, and air dry the shell.

19 - 2 Operator's Manual

Cleaning the monitor and the touch screen

NOTE:

- DO NOT use hydrocarbon glass cleaner or cleaner for OA (Office Automation) equipment to clean the monitor. These substances may cause deterioration of the monitor.
- Clean the monitor and the touch screen periodically.

Tool: soft dry cloth, soapy water

The surfaces of the monitor and touch screen should be cleaned with a soft dry cloth. Remaining stains should be wiped away using a cloth with a little soapy water and then air dried.

Cleaning the control panel

NOTE:

Clean the control panel and keyboard periodically; otherwise the dirt in the gaps between keys will jam the keys, causing long beeping of the buzzer and malfunction of keys.

Tools: mild soapsuds, and dry soft cloth

Use a dry soft cloth to wipe the dust from the surface of the control panel (including keys and encoder). Or, dip a soft cloth with a small amount of mild soapsuds to scrub away stubborn stains, and then use another soft cloth to dry or air dry the control panel. If it is difficult to clean the control panel, remove the encoder cap and clean the control panel with mild soapsuds.


Cleaning the trackball

The trackball is a human-computer interaction component. It is easy for the trackball to bring dust from the outside into the module during use. Therefore, regular maintenance (1 time per month) is needed to ensure the system performance. When the cursor control is not flexible, it may be caused by dust pollution inside the trackball. In this case, remove the trackball and clean the dust inside.

Tools: paper, dry cloth, mild soapy water

Perform the following procedure:

1. Disassembling:

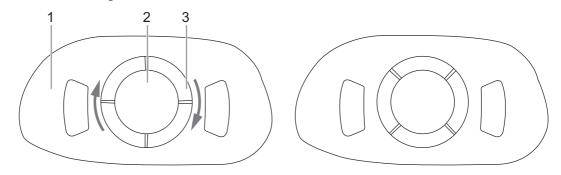


1	Keyboard cover	2	Trackball
3	Trackball pressure ring		

With two fingers, grab the convex strip on the trackball pressure ring and turn it clockwise for about 45 degrees. When the pressure ring rises with the rotation, take out the pressure ring and the ball (be careful that dropping the ball may cause damage to the ball).

Operator's Manual


2. Cleaning:

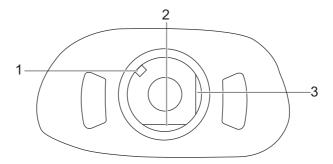

1	Bearing	2	Main shaft
3	Main shaft		

Use a clean soft cloth or dry paper tissue to clean the two main shafts inside the trackball, bearings, plastic housing, and inner part of the pressure ring. Meanwhile, clean the ball.

3. Installing:

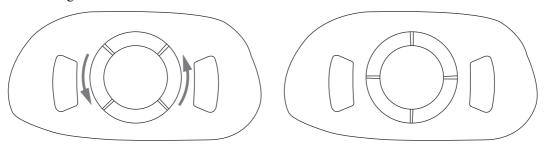

Put the ball in. Then, put the pressure ring in (the convex strip on the pressure ring is about 15 degrees from the horizontal), and rotate counterclockwise until the convex strip on the pressure ring is horizontal. Then, the buckle is locked. At this time, the pressure ring can no longer be rotated, indicating that the pressure ring has been installed in place.

Cleaning the Dust-proof cover

NOTE:

Please clean all dust-proof covers of the system periodically; otherwise, system damage may result. Cleaning times can be increased when the system is used in the open air or somewhere dust is more.

Tool: soft brush

Perform the following procedure:

19 - 4 Operator's Manual

1. Pull out the dust-proof cover.





- 2. Cleaning: with soft brush and then wipe off the dust.
- 3. Assemble dust-proof covers. Insert the dust-proof cover into the slot of the main unit.

Cleaning the Ultrasound gel heater

NOTE:

- Avoid liquid flowing into the gap of the heater. Do not use organic solvent to scrub the heater. Turn on and use the heater only after its surface is fully dried.
- Do not use the acetone. Do not use sharp-edged material (like steel wool) to clean the gel heater.
- Clean the bottom cover of the gel heater regularly. Reinstall it to the bottom of the gel heater after it becomes dry.
- Clean the Ultrasound gel heater periodically.

Perform the following procedure:

- 1. Unplug the gel heater and remove it from the gel heater bracket.
- 2. Use mild soap-suds or the water to clean the heater appearance and the cable.

Operator's Manual

3. Press the pad on the bottom cover to remove the bottom cover.



- 4. Install the bottom cover.
- 5. Install the gel heater back to the bracket and connect the power supply.

19.1.2 Cleaning the peripherals

NOTE:

Clean the peripherals periodically.

Do the cleaning maintenance according to your actual peripheral configuration; items which are not configured can be skipped.

Content	Description
Color and B/W video printer	First wipe off dust or stain attached to the cover of printer with soft dry cloth, then clean the inside of printer. Be sure to do the cleaning maintenance according to the operation manual if necessary.
Graph / text printer	First wipe off dust or stain attached to the cover of printer with soft dry cloth, then clean the inside of printer. Be sure to do the cleaning maintenance according to the operation manual if necessary.
Footswitch	Use soft dry cloth with a little mild soap water to wipe off the dust or stain attached to the pedals or cable of foot switch.
Barcode reader	First use soft dry cloth to wipe off dust attached to glass panel of the reader, then the dust or strain attached to cable and bracket.

19.1.3 Common inspections

Checking the Probe

MARNING

- Check the Probe periodically.
- The outer surface of the portions of TRANSDUCER ASSEMBLY which is intended to be inserted into a PATIENT should be checked to ensure that there are no unintended rough surfaces, sharp edges or protrusions which may cause harm.

19 - 6 Operator's Manual

- Visually check to confirm that there are no cracks or expansion of the probe head.
- Visually check to confirm that there is no deterioration or erosion of the probe cable.
- Visually check to confirm that none of the connector pins are bent, destroyed or falling off.

Checking the Power Cable and Plug

NOTE:

Check the power cable and plug periodically.

Visually check to confirm that there are no wrinkles, cracks or deterioration, and no cracks or expansion on the surface of the adapter.

Manually check to confirm that there is no looseness or rupture. The connection of the plug is reliable.

Checking Appearance

NOTE:

Check the appearance periodically.

Check if there are any cracks in the covers:

- Ultrasound system covers.
- Probe appearance.
- External appearance of the ECG lead.

Checking Battery

Check battery performance regularly:

- Check whether the battery can be normally charged in startup state: If the current battery is 100% or the battery rises after a certain period of time, it indicates that the battery can be normally charged. When the general battery is less than 90%, the time needed to increase the battery power by 1% should be < 5min; when the battery is greater than 90%, it takes more time to increase the battery power by 1%.
- In standby state, after disconnecting the AC power supply, check whether the battery can maintain normal standby status based on the standby status indicator.

19.1.4 Inspection of Peripherals and Optional Functions

NOTE:

Perform mechanical safety checks regularly.

If there are no modules or optional accessories in the system configuration, skip the relevant inspections.

No.	Content	Method
1.	Color or black and white video printer	Check whether the output of the video printer is normal.
2.	Graphic printer	Check whether the output of the graphic printer is normal.

Operator's Manual

No.	Content	Method	
3.	Footswitch	Check whether the footswitch implements the configured functions according to the program.	
4.	External DVD Recorder	Check if DVD-R/W is working properly (burning, reading and ejecting).	
5.	Bar code scanner	Check whether the scanner works normally and the output is correct.	
6.	DICOM	Check whether DICOM works normally. Send pictures and other data to DICOM server for verification.	
7.	ECG	Check the user's basic operations and verify the implementation of functions of the ECG module.	

19.1.5 System Hard Drive Backup

To prevent deterioration or loss of data stored in the system hard drive (including patient info data, preset data, etc.), create a backup copy of the hard drive at regular intervals.

19.2 System Function Inspection

This inspection is an effective method to ensure product quality. When necessary, perform this inspection. Regular maintenance is not required.

No.	Content	Method	
1.	B mode	Check the basic operations of the B mode. Check some of the basic software and hardware that affects operations related to the B mode.	
2.	Color mode	Check the basic operations of the color mode. Check some of the basic software and hardware that affects operations related to the color mode.	
3.	Doppler mode (PW/CW)	Check the basic operations of the Doppler mode. Check some of the basic software and hardware that affects operations related to the Doppler mode.	
4.	M mode	Check the basic operations of the M mode. Check some of the basic software and hardware that affects operations related to the M mode.	
5.	Measurement (2D, M, Doppler routine measurement; application measurement is optional)	Perform gray scale image scanning on the mannequin, use the measurement control to verify the accuracy of distance and area calculation. and verify the measurement accuracy based on the performance test results.	
6.	Keyboard test	Perform keyboard tests to verify that all control keys are working properly.	
7.	Custom key test	Verify that the user-defined functions of custom keys work properly.	
8.	Display	To check whether the display function and parameter adjustment of the display are normal, see the display test method.	
9.	Software menu check	Check the software menu display function, and verify that users can access various operation menus and screens normally.	

19 - 8 Operator's Manual

19.3 Troubleshooting

If any persistent system malfunction is experienced, e.g., an onscreen error message, blank imaging screen, absent menus, see the table below. If the failure cannot be resolved, contact the Mindray Customer Service Department or a sales representative.

No.	Failure	Cause	Measure
1.	The power button indicator is lit up, but the image is blank.	The interval between turning off and restarting the system is too short - wait at least 20 seconds.	Turn off the system and wait at least 1 minute, then restart the system.
		The monitor brightness or contrast may be improperly set.	Adjust the monitor brightness and contrast back to the factory defaults.
2.	The monitor displays the characters but no images.	The transmission power, overall gain or TGC controls are improperly set.	Adjust the transmission power, gain or TGC control.
		Check that a probe is connected and/or fully connected.	Ensure proper probe connection.
		The system is in freeze status.	Unfreeze the image.
3.	The image quality is degraded	The exam mode is incorrect.	Select an appropriate exam mode.
		The image post-processing settings are incorrect.	Adjust the image post-processing settings or reset post-processing to the default values.
		The image presets are inappropriate.	Reset the factory default presets.
4.	The button does not respond and the system is buzzing	There is dirt blocking the button.	 Check the control panel for the blocked button and press it several times to release it. Clean the button.

Operator's Manual

This page intentionally left blank.

A

Barcode Reader

The product supports logging data as patient ID by using barcode reader. For details of the Honeywell barcode reader, please refer to the accompanying manuals.

The laser transmitted by SYMBOL LS2208 is Class 2 laser.

SYMBOL DS4308 is classified as "EXEMPT RISK GROUP" according to IEC 62471:2006 and EN 62471:2008.

MARNING

- Class 2 laser adopts low power, visible LED. DO NOT stare into beam because of unknown hazards of transient radiation provided by class 2 laser.
- DO NOT stare into beam emitted by SYMBOL DS4308 for more than 10 s.

ACAUTION

Ensure the information acquired by barcode reader is consistent with the actual information.

NOTE:

The reader does not support decoding of Multi-language.

A.1 1-D Barcode Reader

There are 2 operation modes for 1-D barcode readers:


- Hand-held mode: press the trigger to decode.
- Hands-free mode: seat the reader in the stand to enter the mode, the reader decodes automatically.

Operator's Manual A - 1



1	LED	 Green: A barcode was successfully decoded. Red: A data transmission error or reader malfunction occurred 	
2	Scan window	Scan the barcode.	
3	Trigger	Press to decode.	

A.1.1 Setting Up the Reader (Take LS2208 as an example)

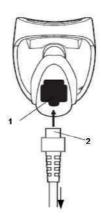

1	Cable interface port
2	Interface cable modular connector

Perform the following procedure:

- 1. Plug the interface cable modular connector into the cable interface port on the bottom of the reader handle, and ensure the connector is properly secured.
- 2. Connect the other end of the interface cable to the host.

A.1.2 Setting

The reader has factory settings. For details, please see "A.3 Parameter Defaults".

The reader supports some user-defined functions as introduced below.

For more details, please contact the SYMBOL reader agents or Mindray Customer Service Department.

A - 2 Operator's Manual

Volume setting

Scan the following barcode to set the volume parameter.

• Low Volume:



• Medium Volume:



• High Volume:



Code 93 and codebar scanning

• To enable or disable Code 93, scan the appropriate barcode below.



• To enable Codebar, scan the appropriate barcode below.



Code 39 full ASCII scanning

Code 39 Full ASCII is a variant of Code 39 which pairs characters to encode the full ASCII character set.

• To enable Code 39 Full ASCII, scan the appropriate barcode below.



• To disable Code 39 Full ASCII, scan the appropriate barcode below.




I 2 of 5 symbols setting:



Operator's Manual A - 3

Select this option to decode only I 2 of 5 symbols containing a selected length. Select the length using the numeric barcodes below. For example, to decode only I 2 of 5 symbols with 8 characters, scan I 2 of 5 - One Discrete Length, then scan 0 followed by 8.

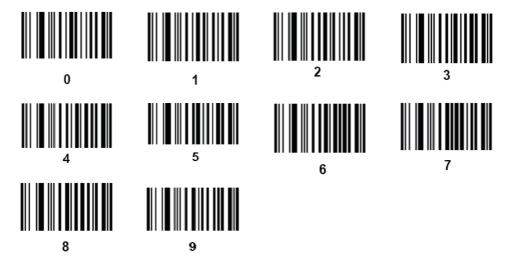

A.1.3 Scanning in Hand-Held Mode


Perform the following procedure:

- 1. Ensure all connections are secure.
- 2. Aim the reader at the barcode. Press the trigger.

Ensure the scan line crosses every bar and space of the symbol, see the figure below.




3. Upon successful decode, the reader beeps and the LED turns green.

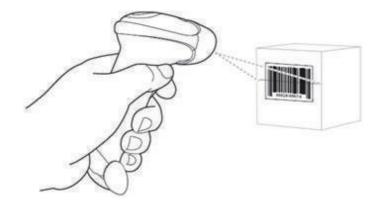

Do not hold the reader directly over the barcode. Laser light reflecting directly back into the reader from the barcode is known as specular reflection. This specular reflection can make


A - 4 Operator's Manual

decoding difficult. You can tilt the reader up to 55° forward or back and achieve a successful decode.

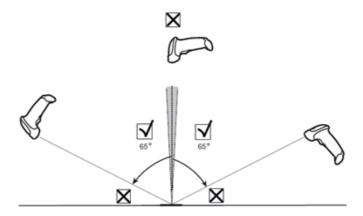

A.1.4 Scanning in Hands-Free Mode

Assembling the Intellistand

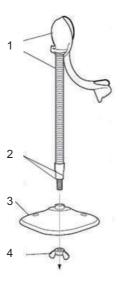

1	One piece scanner "cup" with flexible neck		Flat areas
3	Stand base	4	Wingnut

Perform the following procedure:


- 1. Unscrew the wingnut from the bottom of the one piece scanner "cup".
- 2. Fit the bottom of the neck piece into the opening on the top of the stand base.
- 3. Tighten the wingnut underneath the base to secure the cup and neck piece to the base.

 Before tightening the wingnut under the base, ensure that the flat areas on the flexible neck fit securely in the grooves in the base.
- 4. Bend the neck to the desired position for scanning.

Operator's Manual A - 5

Mounting the Stand (optional)


You can attach the base of the reader's stand to a flat surface using two screws or double-sided tape (not provided).

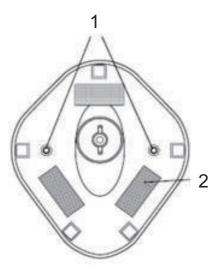

1	Two screw-mount holes	For Screw Mount, follow the steps below: 1. Position the assembled base on a flat surface.
		2. Screw one #10 wood screw into each screw-mount hole until the base of the stand is secure
2	Double-side tap areas (3 places, dimensions: 1"×2")	 For Tape Mount, follow the steps below: Peel the paper liner off one side of each piece of tape and place the sticky surface over each of the three rectangular tape holders. Peel the paper liner off the exposed sides of each piece of tape and press the stand on a flat surface until it is secure.

Perform Scanning in Hands-Free Mode

When the reader is seated in the scanner cup, the reader's built-in sensor places the reader in handsfree mode. When you remove the reader from the stand it operates in its normal hand-held mode.

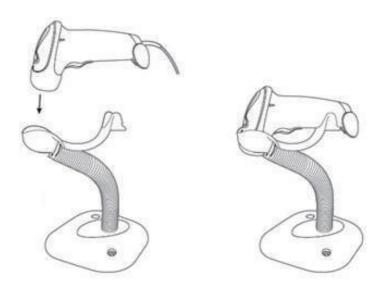


A - 6 Operator's Manual

A.2 2D Barcode Reader (Take DS4308 as an example)

The 2-D barcode reader supports hand-held operation mode.

Hand-held mode: press the trigger to decode.


A.2.1 Overview

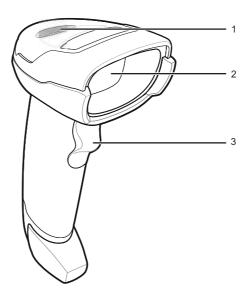

1	LED	 Green: A barcode was successfully decoded. Red: A data transmission error or reader malfunction occurred.
2	Scan window	Scan the barcode.
3	Trigger	Press to decode.

A.2.2 Setting Up the Digital Imager Reader

Installing the Interface Cable

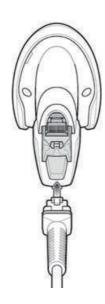


Operator's Manual A - 7

Perform the following procedure:

- 1. Plug the interface cable modular connector into the cable interface port on the bottom of the reader handle and ensure the connector is properly secure.
- 2. Connect the other end of the interface cable to the host.

Removing the Interface Cable

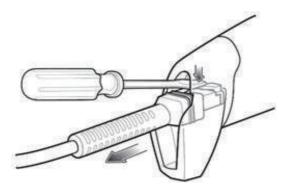

Perform the following procedure:

- 1. Using the tip of a screwdriver or some other tools with a sharp head, depress the cable's modular connector clip.
- 2. Carefully slide out the cable.

A.2.3 Setting

The reader has factory settings, for details see "A.3 Parameter Defaults".

The reader supports some user-defined functions as introduced below.

For more details, please contact the SYMBOL reader agents or Mindray Customer Service Department.


Volume setting

Scan the following barcode to set the volume parameter.

• Low Volume



Medium Volume

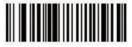

· High Volume



A - 8 Operator's Manual

Code 93 and codabar setting

• To enable Code 93, scan the appropriate barcode below.



• To enable Codabar, scan the appropriate barcode below



Code 39 full ASCII setting

Code 39 Full ASCII is a variant of Code 39 which pairs characters to encode the full ASCII character set.

• To enable Code 39 Full ASCII, scan the appropriate barcode below.




• To disable Code 39 Full ASCII, scan the appropriate barcode below.



I 2 of 5 symbols setting



Select this option to decode only I 2 of 5 symbols containing a selected length. Select the length using the numeric barcodes below. For example, to decode only I 2 of 5 symbols with 8 characters, scan I 2 of 5 - One Discrete Length, then scan 0 followed by 8.

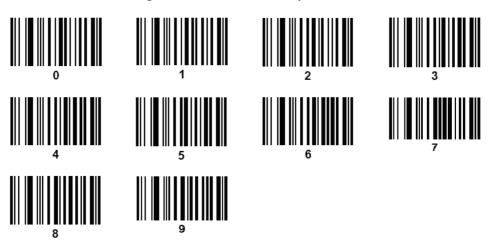

A.2.4 Scanning in Hand-Held Mode

Perform the following procedure:


1. Ensure all connections are secure (see the appropriate host chapter.)

Operator's Manual A - 9

2. Aim the digital imager reader at the barcode.



3. When the digital imager reader senses movement, in its default Auto Aim trigger mode, it projects a red LED dot which allows positioning the barcode within the field of view.

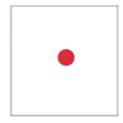


If necessary, the digital imager reader turns on its red LEDs to illuminate the target barcode.

- 4. Center the symbol. Be sure the entire symbol is within the rectangular area formed by the illumination LEDs.
- 5. Hold the trigger until the digital imager reader beeps, indicating the barcode is successfully decoded.

Steps 2 - 4 above may be required to repeat on poor quality or difficult barcodes.

The aiming pattern is smaller when the digital imager reader is closer to the symbol and larger when it is farther from the symbol. Scan symbols with smaller bars or elements (mil size) closer to the digital imager reader, and those with larger bars or elements (mil size) farther from the digital imager reader.

The digital imager reader can also read a barcode presented within the aiming dot not centered. The top examples in show acceptable aiming options, while the bottom examples cannot be decoded.

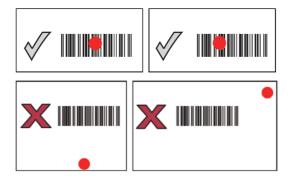

A - 10 Operator's Manual

A.3 Parameter Defaults

Refer to the following table for parameter defaults of LS2208 and DS4308.

Parameter	Defaults	Parameter	Defaults
1-D Symbologies	!	Interleaved 2 of 5 (ITF)	
UPC/EAN		Interleaved 2 of 5 (ITF) Enable	Enable
UPC-A	Enable	Set Lengths for I 2 of 5	14
UPC-E	Enable	I 2 of 5 Check Digit Verification	Disable
UPC-E1	Disable	Transmit I 2 of 5 Check Digit	Disable
EAN-8/JAN 8	Enable	Convert I 2 of 5 to EAN 13	Disable
EAN-13/JAN 13	Enable	Codabar (NW - 7)	
Bookland EAN	Disable	Codabar	Enable
Decode UPC/EAN/JAN Supplementals (2and 5 digits)	Ignore	Set Lengths for Codabar	5 to 55
UPC/EAN/JAN Supplemental Redundancy	10	CLSI Editing	Disable
Transmit UPC-A Check Digit	Enable	NOTIS Editing	Disable
Transmit UPC-E Check Digit	Enable		
Transmit UPC-E1 Check Digit	Enable	2-D Symbologies	
UPC-A Preamble	System Character	PDF417	Enable
UPC-E Preamble	System Character	MicroPDF417	Disable
UPC-E1 Preamble	System Character	Code 128 Emulation	Disable
Convert UPC-E to A	Disable	Data Matrix	Enable
Convert UPC-E1 to A	Disable	Maxicode	Enable
EAN-8/JAN-8 Extend	Disable	QR Code	Enable
UCC Coupon Extended Code	Disable		
Code 128			
Code 128	Enable		
UCC/EAN-128	Enable		
ISBT 128	Enable		
Code 39			
Code 39	Enable		
Trioptic Code 39	Disable		
Convert Code 39 to Code 32 (Italian Pharmacy Code)	Disable		
Code 32 Prefix	Disable		
Set Length(s) for Code 39	2 to 55		

Operator's Manual A - 11

Parameter	Defaults	Parameter	Defaults
Code 39 Check Digit Verification	Disable		
Transmit Code 39 Check Digit	Disable		
Code 39 Full ASCII Conversion	Disable		
Buffer Code 39	Disable		
Code 93			
Code 93	Enable		
Set Length(s) for Code 93	4 to 55		

A - 12 Operator's Manual

B Wireless LAN

The system provides wireless net adapter configuration, so as to assist information query and unlimited network service. The ultrasound system can be connected to router, mobile phone, tablet, ultrasound workstation, server network device and so on via wireless network.

∴WARNING

- Use the wireless LAN function prudently in OR/ICU/CCU as it may interfere with other devices.
- When the wireless LAN function is turned on, the ultrasound system may suffer interference from other equipment, even if that other equipment complies with CISPR EMISSION requirements.
- Keep at least 20 cm away from the ultrasound system when the wireless LAN function is in use.

NOTE:

- DO NOT connect devices other than specified into the LAN.
- Medical devices within the same LAN may interfere with each other, the operator should be cautious. (Do not connect devices that may cause strong interference. For example, lifesupporting devices should not be connected in the same LAN.)
- Other non-medical devices in the same frequency band may cause interference, please be cautious.
- Wireless network designing, deploying, debugging, and maintenance should be executed by Mindray service personnel or authorized technicians.
- Always set the wireless network according to local wireless regulations.
- Keep network authentication information, for example password, safe, protecting the network from being accessed by unauthorized users.
- If the wireless signal is poor, the ultrasound machine may fail to send data to the server.
- RF interference may result in wireless network disconnection.
- Disconnecting from the network may result in send data to server failure. Solve the network problem as soon as possible.
- Ensure that the ultrasound device IP address setting is correct. Changing the network settings
 may result in network disconnection. Contact your service personnel if you have any problems
 on setting the IP address.
- To make sure that the ultrasound system works well, the ultrasound system can coexist with Wi-Fi as the interfering network operating at maxmum throughput and maxmum transmit power when a separation distance of 1m is maintained.
- Wi-Fi function is not affected when the system is imposed with radiation interference complied with IEC 60601-1-2: 2020 standard.

For a better wireless LAN transmission effect, please take the following settings:

Operator's Manual B - 1

- SSID > 80% with stable WLAN network.
- Wireless router and the server are in the same network segment.
- Router setting:
 - Wireless standard IEEE 802.11 ac/a/b/g/n.
 - Maximum transmission speed 300 Mbps.
 - Number of the devices connected to the same router ≤5.
- Target server setting:
 - Network is stable and not under overloading state (e.g. high CPU/memory usage, fast HDD speed, limited HDD space).
 - Level other than the highest level of firewall is adopted.
 - Operating system is Windows 10 or higher versions and it supports a Gigabit Ethernet.

B.1 Use the Wireless Feature

Perform the following procedure:

- 1. Press <Cursor> to show the cursor, click in the bottom bar to open the wireless network manager.
- 2. Move the cursor to the target network and press <Set> to select it, then click [Connect] to connect to the network.
 - When connecting an encrypted network, enter the password in the box first. You can select to hide password characters or not.
- 3. The system tries to connect and the wireless manager icon turns into after successful connection.
- 4. Click [Refresh] to refresh the "Wireless Network Connection" list.

B.2 IP Configure

NOTE:

- When the system background is processing network task (DICOM sending for example),
 please do not enter network setting to change the IP, otherwise the background task may fail.
 You can check if there are tasks undergoing in the task manager.
- If the IP address displays as 0.0.0.0, this means that the network is abnormal. The reason for the failure may be disconnection or the system cannot obtain the IP address.

IP Config is used for setting local network parameters, which is also applied to DICOM connection. Perform the following procedure:

- 1. In Wireless network manager screen, click [IP Config] to open the configuration page.
 - If "DHCP" is selected, the IP address will be automatically obtained from the DNS server.
 - If "Static" is selected (using a static IP address), enter the IP address.

 IP address of the system should be in the same network segment with the server.

 The name of the device is saved under the service name by default. The system remembers the service name of the ultrasound system when sending the image, the report to DICOM server. Open the file (DCM Editor Tool, eZDicom.exe) to view the service name (iStation Name).

B - 2 Operator's Manual

2. Click [OK] to save current setting.

B.3 EAP Network

For setting EAP network, contact Mindray Customer Service Department or the sales representatives.

Operator's Manual B - 3

This page intentionally left blank.

C iScanHelper

By providing the referential information, such as, the ultrasonic image, the anatomic graphic, scanning pictures/other scanning tips or diagnosis comments, the system helps the doctors to operate the scanning by iScanHelper. Furthermore, it is a good platform for the self-learning and training of ultrasound scanning technique for doctors. The system also plays a role in the assistant software system in fulfilling training and education.

NOTE:

- THIS "iScanHelper" IS FOR REFERENCE OR TUTORIAL PURPOSES ONLY, AND THE MANUFACTURER WILL NOT BE LIABLE FOR DAMAGES AND/OR OTHER UNDESIRABLE CONSEQUENCE IN ANY KIND THAT MAY OCCUR TO THE PATIENT OR THE USERS BY USING THE SOFTWARE.
- iScanHelper feature is available under Abdomen, gynecological, urological, obstetrical, Small Parts and nerve block area.

C.1 Use iScanHelper for Reference

Perform the following procedure:

- 1. Perform ordinary scanning procedure.
- 2. Press the user-defined <iScanHelper> key to enter iScanHelper status.
- 3. Select the desired section.
- 4. Perform scanning according to information displayed on the help information area.
 - Tap to back to the section selection interface.

You can zoom in a single window in the help information area to see the window more clearly.

5. Press the user-defined <iScanHelper> key again to exit.

C.2 Use iScanHelper for Learning or Training

Perform the following procedure:

- 1. Switch to the exam modes that support iScanHelper.
- 2. Press the user-defined <iScanHelper> key to enter iScanHelper status.
- 3. Learn and practice views by system defaulted sequence according to the information displayed on help information area; or select unfamiliar views to practice.


Tap to back to the section selection interface.

You can zoom in a single window in the help information area to see the window more clearly.

4. Press the user-defined <iScanHelper> key again to exit.

Operator's Manual C - 1

C.3 Basic Screen and Operation

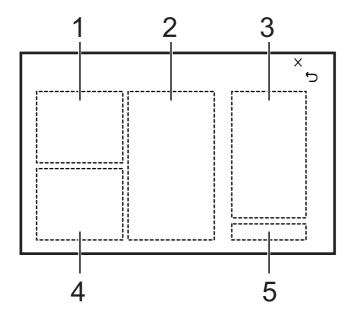

1.	Ultrasonic image	It is used to compare with images scanned by the operator.
2.	Anatomic graphic	Related anatomical tissue information are provided here.
3.	Scanning tips	You can read tissue related anatomical information and adjacent tissue information here.
4.	Scanning picture	Ordinary scanning tips can be observed here, including posture, probe mark, probe swing/sweep techniques.
5.	Button	After tapping the button, the system reads scanning tips. Tap to back to the section selection interface.

C.4 Single/quad-window Display

You can zoom in the anatomic graphic, ultrasonic image as well as scanning picture to view those information more conveniently.

Double-tap the anatomic graphic, ultrasonic image or scanning picture to enter the single-window display. Double-tap single window again to return to quad-window display.

C.5 Measurement, Comments, and Body Mark

Switching probe or exam, measurement, comments and the body mark are unavailable under iScanHelper status.

C - 2 Operator's Manual

D iVision

The iVision function is used to demonstrate the stored images. Image files are played one by one according to file names (including system-relevant and PC-compatible format images).

Perform the following procedure:

- 1. Press the user-defined <iVision> key to enter the iVision screen.
- 2. Add the contents to be played and select demo mode.
- 3. Select an item in the list and click [Start] to begin the demonstration.
- 4. Click [Exit] or press <ESC> to exit iVision status.

Demonstration Item

Demonstration items are image files in formats supported by the system. You can add exam data from the patient database or system-supported image files and folders to the demonstration list. For files and folders in the demonstration list, the images in the directory and subdirectory are played one by one, and the system will automatically skip files that cannot be opened.

Demonstration Catalog

There are two kinds of catalog: Demo Catalog and Customize Catalog.

Demo Catalog

The demo catalog is a folder on the hard disk where the factory DEMO is stored. The system plays the images in this folder when performing demonstrations.

The system supports importing, deleting or clearing the data in the demo catalog.

Click [Demo Manager] to operate:

- [>]: to import data into the demo catalog.
- [<]: to delete selected data.</p>
- [<<]: to delete all data.</p>
- Customize Catalog

The catalog of the displayed images is saved here. The system plays the images in the catalog when performing demonstrations.

Operate the catalog or the files using the buttons on the right:

- [Add Exam]: to add exam to iStation. Click [Add Exam], and select the desired exam in the pop-up menu, and click [Restore Exam] to add the selected exam to iStation.
- [Add File]: to add files to the file list.
- [Add Catalog]: to add a catalog of files to the list.
- [Delete]: to delete selected files or catalogs from the file list.
- [Clear]: to clear all the files or catalogs in the file list.
- [Export]: to export selected directories/files to external storage devices. Click [Export] to bring up the Browse dialog box, select the path and click [OK].

Copy the File

Transfer files between the mobile hard disk and the ultrasound system.

Perform the following procedure:

Operator's Manual D - 1

- 1. Plug the USB disk, and click [Copy File].
- 2. Select the path of the source file from the "Drive" and "File Name".
- 3. Click [Choose Catalog]. Select the path of the source file from the "Drive" and "File Name", and then click [OK].
- 4. Click [OK] again to complete the task.

Promotion Video

Click to play exhibition video.

Demonstration Mode

The system automatically plays all the image files in the list one by one.

The time interval between images played is same and can be changed.

Option of Demo

You can choose whether to repeat the demonstration or exit after a demonstration is completed.

D - 2 Operator's Manual

E Acoustic Output

This section of the operator's manual applies to the overall system including the main unit, probes, accessories and peripherals. This section contains important safety information for operators of the device, pertaining to acoustic output and how to control patient exposure through use of the ALARA (as low as reasonably achievable) principle. Also this section contains information regarding the acoustic output testing and the real-time output display.

Read this information carefully before using the system.

E.1 Concerns with Bioeffects

Diagnostic ultrasound is recognized as being safe. In fact, there have been no reports of injuries to patients caused by diagnostic ultrasound.

It cannot be stated categorically that ultrasound is 100% safe. Studies have revealed that ultrasound with extremely high intensity is harmful to body tissues.

Diagnostic ultrasound technology has made a great leap forward during the last several years. This rapid advance has generated concerns about the potential risk of bioeffects when new applications or diagnostic technologies become available.

E.2 Prudent Use Statement

Although there are no confirmed biological effects on patients caused by exposures from present diagnostic ultrasound instruments, the possibility exists that such biological effects may be identified in the future. Thus ultrasound should be used in a prudent manner to provide medical benefit to the patient. High exposure levels and long exposure times should be avoided while acquiring necessary clinical information.

E.3 ALARA Principle (As Low As Reasonably Achievable)

It is required to practice ALARA when using ultrasound energy. Practicing ALARA ensures that the total energy level is controlled below a low enough level at which bioeffects are not generated while diagnostic information is being accumulated. The total energy is controlled by output intensity and total radiation time. The output intensity necessary for examinations differs depending on the patient and the clinical case.

Not all examinations can be performed with an extremely low level of acoustic energy. Controlling the acoustic level at an extremely low level leads to low-quality images or insufficient Doppler signals, adversely affecting the reliability of the diagnosis. However, increasing the acoustic power more than necessary does not always contribute to an increase in quality of information required for diagnosis, rather increasing the risk of generating bioeffects.

Users must take responsibility for the safety of patients and utilize ultrasound deliberately. Deliberate use of ultrasound means that output power of ultrasound must be selected based on ALARA.

Operator's Manual E - 1

Additional information regarding the concept of ALARA and the possible bioeffects of Ultrasound is available in a document from the AIUM (American Institute of Ultrasound Medicine) title "Medical Ultrasound Safety".

E.4 MI/TI Explanation

E.4.1 Basic Knowledge of MI and TI

Mechanical Bioeffect and Thermal Bioeffect

The relationship of various ultrasound output parameters (frequency, acoustic pressure and intensity, etc.) to bioeffects is not fully understood presently. It is recognized that two fundamental mechanisms may induce bioeffects. One is a thermal bioeffect with tissue absorption of ultrasound, and another one is a mechanical bioeffect based on cavitations. Thermal Index (TI) gives the relative index of temperature increase by thermal bioeffect, and Mechanical Index (MI) gives the relative index of mechanical bioeffect. TI and MI indices reflect instantaneous output conditions, so they DO NOT consider the cumulative effects of the total examination time. TI and MI models contain practical simplifications to complex bioeffects interaction. Then the operator should be aware that the actual worst case temperature rise may be up to several times higher than the displayed TI value.

MI (Mechanical Index)

The mechanical bioeffects are the result of compression and decompression of insonated tissues with the formation of micro bubbles that may be referred to as cavitations.

MI is an index that shows the possibility of the cavitations generation based on acoustic pressure, and the value in which the peak-rarefactional acoustic pressure is divided by the square root of the frequency. Therefore MI value becomes smaller when the frequency is higher or the peak-rarefactional acoustic pressure is lower, it becomes difficult to generate the cavitations.

$$MI = \frac{P_{r, \alpha}}{\sqrt{f_{awf}} \times C_{MI}}$$

$$C_{MI} = 1 \text{ (MPa } / \sqrt{MHz} \text{)}$$

For the frequency 1 MHz and the peak rarefactional acoustic pressure 1 MPa, MI becomes 1. It is possible to think MI to be one threshold of the cavitations generation. Especially, it is important to keep MI value to be low when both gases and the soft tissues exist together, for such as lung exposure in cardiac scanning and bowel gas in Abdomen scanning.

TI (Thermal Index)

TI is determined by the ratio of the total acoustic power to the acoustic power required to raise the tissue temperature by 1 degree C. In addition, because the temperature rises is greatly different according to tissue structures, TI is divided three kinds: TIS (Soft-tissue Thermal Index), TIB (Bone Thermal Index) and TIC (Cranial-bone Thermal Index).

- TIS: Thermal index related to soft tissues, such as Abdomen and cardiac applications.
- TIB: Thermal index for applications, such as fetal (second and third trimester) or neonatal cephalic (through the fontanel), in which the ultrasound beam passes through soft tissue and a focal region is in the immediate vicinity of bone.
- TIC: Thermal index for applications, such as pediatric and adult cranial applications, in which the ultrasound beam passes through bone near the beam entrance into the body.

E - 2 Operator's Manual

Although the output power is automatically controlled for the selected applications, high TI values should be kept to a minimum or avoided in obstetric applications. WFUMB (World Federation for Ultrasound in Medicine and Biology) guidelines: state that temperature increase of 4 degree C for 5 min or more should be considered as potentially hazardous to embryonic and fetal tissue.

The smaller the MI/TI values, the lower the bioeffects.

E.4.2 MI/TI Display

TI and MI values are displayed in the upper part of the screen in real-time. The operator should monitor these index values during examinations and ensure that exposure time and output values are maintained at the minimum amounts needed for effective diagnosis.

NOTE:

If there is a value of MI or TI exceeds 1.0, you must be careful to practice the ALARA principle.

The display precision is 0.1.

Real-time Display accuracy: MI \leq 28.5%, TI \leq 38.7%

E.5 Acoustic Power Setting

Acoustic power adjustment

Use the <A.power> to adjust the acoustic power percentage, and its value is displayed on the corresponding item, as well as at the top of the screen. The greater the acoustic power percentage, the greater the current acoustic output. When the image is frozen, the system stops transmitting acoustic power.

Default setting of acoustic power

Selection of diagnostic applications is the most important factor for controlling ultrasound output. The permissible level of intensity of ultrasound differs depending on the region of interest. For fetal examinations, in particular, much care must be exercised.

In this system, imaging setups can be created using the ultrasound output set by you.

Once you perform preset settings, default setting values of the system may be changed and invalid. It is the user's responsibility for any change to the default settings.

Adjusting range

Initial power: 0.1% to 100%*

Definition of 100%: The maximum acoustic power of a probe determined by the increase in probe surface temperature in the selected mode and the acoustic power restrictions specified by the FDA.

Default settings of acoustic power value refer to the best image quality of the probe. The larger the acoustic power value, the better the image quality.

In this product, to obtain optimum images for applications under the requirements of safety and ALARA principle, we set acoustic power default values in factory to be maximum 93.33% in all exam modes for a better image quality. The user can make adjustments according to the imaging effect in practical use.

NOTE:

This system automatically returns to the settings whenever changes are made to the values (when you turn on the power, switch between probes, end the exam, or select OK or Cancel in the Setup menu). In the factory default settings, the Acoustic Output is limited below 100%.

Operator's Manual E - 3

Following the ALARA restriction, you are allowed to increase the acoustic power under FDA 510 (k) Guidance-Track 3 limits and to set it in the image preset screen.

The acoustic output of the system has been measured and calculated in accordance with IEC60601-2-37: 2015, FDA 510(K) GUIDANCE, IEC 62359: 2017, Ultrasonics-Field characterization-Test methods for the deter mination of thermal and mechanical indices related to medical diagnostic ultrasonic fields.

E.6 Acoustic Power Control

The qualified operator may use the system controls to limit the ultrasound output and to adjust the quality of the images. There are three categories of system controls relative to output. They are,

- Controls that have direct effect on the output
- Controls that indirectly control output
- Controls that are receiver controls

Direct controls

It is possible to control, if necessary, the acoustic output with the "A.power" item. In this case, the maximum value of the acoustic output never exceeds an MI of 1.9 and an I_{SPTA.3} of 720 mW/cm² in any mode of operation.

Indirect controls

The controls that indirectly affect output are the many imaging parameters. These are operating modes, frequency, focal point positions, overall depth, and PRF.

The operating mode determines whether the ultrasound beam is scanning or non-scanning. Thermal bioeffect is closely connected to M mode, Doppler and Color mode. Acoustic attenuation of tissue is directly related to probe frequency. The focal point is related to active aperture of probe and beam width. For the higher PRF (pulse repetition frequency), the more output pulses occur over a period of time.

Receiver controls

The receiver controls (for example, gain, dynamic range, and image post-processing, etc.) won't affect output. These controls should be used, when possible, to improve the image quality before using controls that directly or indirectly affect output.

E.7 Acoustic Output

E.7.1 Derated Ultrasonic Output Parameters

In order to determine the relevant Ultrasonic Output Parameters, a method is used which allows for the comparison of ultrasound systems which operate at different frequencies and are focused at different depths. This approach, called "derating" or "attenuating", adjusts the acoustic output as measured in a water tank to account for the effect of ultrasound propagation through tissue. By convention, a specific average intensity attenuation value is used, which corresponds to a loss of 0.3 dB/cm/MHz. That is, the intensity of ultrasound will be reduced by 0.3 dB/MHz for every centimeter of travel from the probe. This can be expressed by the following equation:

$$I_{atten} = I_{water} \times 10^{((-0.3)/10 \times f_c \times z)}$$

E - 4 Operator's Manual

Where I_{atten} is the attenuated intensity, I_{water} is the intensity measured in a water tank (at distance z), fc is the center frequency of the ultrasound wave (as measured in water), and z is the distance from the probe. The equation for attenuating pressure values is similar except that the attenuation coefficient is 0.15 dB/cm/MHz, or one-half the intensity coefficient. The intensity coefficient is double the pressure coefficient because intensity is proportional to the square of pressure.

Although the attenuation coefficient chosen, 0.3 dB/cm/MHz, is significantly lower than any specific solid tissue in the body, this value was chosen to account for fetal examinations. In early trimester ultrasound fetal examinations, there may be a significant fluid path between the probe and the fetus, and the attenuation of fluid is very small. Therefore the attenuation coefficient was lowered to account for this case.

E.7.2 Limits of Acoustic Output

In accordance with the FDA Track 3 requirements, the derating (or attenuated) approach was incorporated into the FDA Acoustic Output Limits, as listed below. The maximum acoustic output level from any probe in any operating mode is expected to fall below these limits.

FDA Maximum Acoustic Output Limits for Track 3 (Attenuated Values)

Application:	$I_{\text{spta.3}} (\text{mW/cm}^2) \le 720$	$I_{\text{sppa.3}} (\text{W/cm}^2) \le 190 \text{ or MI} \le 1.9$
Regions (except eyes)		

E.7.3 Differences between Actual and Displayed MI and TI

In operation, the system will display to the operator the Acoustic Output Parameters Thermal Index, TI, or Mechanical Index, MI (or sometimes both parameters simultaneously). These parameters were developed as general indicators of risk from either thermal or mechanical action of the ultrasound wave. They serve to indicate to the operator whether a particular setting of the system increases or decreases the possibility of Thermal or Mechanical effect. More specifically, they were designed to assist in the implementation of the ALARA principle. As an operator changes a given system control, the potential effect of the change in output will be indicated. However, the Thermal Index is not the same as temperature rise in the body, for several reasons. First of all, in order to provide a single display index to you, a number of simplifying assumptions had to be made. The biggest assumption was the use of the attenuating formula described above, which is much lower than the actual value for most tissues within the body. Scanning through muscle or organ tissue, for example, will produce much higher attenuation than 0.3 dB/cm/MHz. There were also significant simplifications made for the thermal properties of tissue. Therefore, scanning through highly perfused tissue, such as the heart or vasculature, will produce significantly less thermal effect than that suggested by the Thermal Index.

Similarly, the Mechanical Index was derived to indicate the relative possibility of mechanical (cavitation) effects. The MI is based on the derated peak-rarefactional pressure and the center frequency of the ultrasound wave. The actual peak-rarefactional pressure is affected by the actual attenuation caused by tissue in the path between the probe and the focal point. Again, all solid tissues within the body have higher attenuation than the prescribed 0.3 dB/cm/MHz value, and therefore, the actual peak-rarefactional pressure will be lower. Further, the actual peak-rarefactional pressure will change depending upon the region of the body being scanned.

For these reasons, the TI and MI displays should only be used to assist the operator in implementing ALARA at the time of the patient examination.

Operator's Manual E - 5

E.8 Measurement Uncertainty

The total estimated measurement uncertainty (where the total uncertainty includes the uncertainties in hydrophone response, measurement, calculation, and positioning) are:

Acoustic Quantities	Total Uncertainties (Standard)
Power	26.48% for non-scan modes; 6.03% for scan modes.
Frequency	0.22%
Pressure	13.01%
I _{ta}	26.48% for non-scan modes; 26.95% for scan modes.
I _{pa}	26.5%
Mechanical Index	13.01%
Total Uncertainty for TIS	Non-scan Modes: 26.48%; Scan-Modes: 6.03%
Total Uncertainty for TIB	Non-scan Modes: 26.48% or 18.72%; Scan-Modes: 6.03%
Total Uncertainty for TIC	Non-scan Modes: 26.48%; Scan-Modes: 6.03%

E.9 References for Acoustic Power and Safety

- "Bioeffects and Safety of Diagnostic Ultrasound" issued by AIUM in 1993
- "Medical Ultrasound Safety" issued by AIUM in 1994
- Marketing Clearance of Diagnostic Ultrasound Systems and Transducers, June 27, 2019.
 Center for Devices and Radiological Health.
- Medical electrical equipment-Part 2-37: Particular requirements for the basic safety and essential performance of ultrasonic medical diagnostic and monitoring equipment issued by IEC in 2015
- IEC 62359, Ultrasonics-Field characterization-Test methods for the determination of thermal and mechanical indices related to medical diagnostic ultrasonic fields, 2017.

E - 6 Operator's Manual

Electrical Safety Inspection

The following electrical safety tests are recommended as part of a comprehensive preventive maintenance program. They are a proven means of detecting abnormalities that, if undetected, could prove dangerous to either the patient or the operator. Additional tests may be required according to local regulations.

All tests can be performed using commercially-available safety analyzer test equipment. These procedures assume the use of a 601PROXL International Safety Analyzer or equivalent safety analyzer. Other popular testers which comply with IEC 60601-1 and are used in Europe, such as Fluke, Metron or Gerb, may require modifications to the procedure. Follow the analyzer manufacturer's instructions.

An electrical safety inspection should be periodically performed every two years. The safety analyzer is also an excellent troubleshooting tool for detecting abnormalities in line voltage and grounding, as well as total current loads.

NOTE:

Make sure the safety analyzer is authorized and complies with the requirements of IEC 61010-1. Follow the analyzer manufacturer's instructions.

F.1 Power Cord Plug

Test Item		Acceptance Criteria
The plug body The strain relief		No broken or bent pins. No discolored pins.
		No physical damage to the plug body.
		No physical damage to the strain relief. No plug warmth when device is in use.
	The power plug	No loose connections.
The power cord		No physical damage to the cord. No deterioration to the cord.
		For devices with detachable power cords, inspect the connection with the device.
		For devices with non-detachable power cords, inspect the strain relief at the device.

Operator's Manual F - 1

F.2 Device Enclosure and Accessories

F.2.1 Visual Inspection

Test Item	Acceptance Criteria	
The enclosure and accessories	No physical damage to the enclosure and accessories.	
	No physical damage to meters, switches, connectors, etc.	
	No residue of fluid spillage (e.g., water, coffee, chemicals, etc.).	
	No loose or missing parts (e.g., knobs, dials, terminals, etc.).	

F.2.2 Contextual Inspection

Test Item	Acceptance Criteria
The enclosure and accessories	No unusual noises (e.g., rattles inside the case).
	No unusual smells (e.g., burning or smoky smells, particularly from ventilation holes).
	No taped notes that may suggest device deficiencies or operator concerns.

F.3 Device Labeling

Check that the labels provided by the manufacturer or the healthcare facility are present and legible.

- Main unit label
- Integrated warning labels

F.4 Protective Earth Resistance

- 1. Plug the analyzer probes into the device's protective earth terminal and the protective earth terminal of the AC power cord.
- 2. Test the earth resistance with a current of 25 A.
- 3. Verify the resistance is less than the limits.

LIMITS

ALL COUNTRIES $R = 0.2 \Omega$ Maximum

F.5 Earth Leakage Test

Run an Earth Leakage test on the device being tested before performing any other leakage tests. The following outlet conditions apply when performing the Earth Leakage test.

- normal polarity (Normal Condition).
- reverse polarity (Normal Condition).

F - 2 Operator's Manual

- normal polarity with open neutral (Single Fault Condition).
- reverse polarity with open neutral (Single Fault Condition).

LIMITS

- For UL 60601-1:
 - 300 μA in Normal Condition.
 - 1000 μA in Single Fault Condition.
- For IEC 60601-1:
 - 500 μA in Normal Condition.
 - 1000 μA in Single Fault Condition.

F.6 Enclosure Leakage Test

The following outlet conditions apply when performing the Enclosure Leakage test.

- normal polarity (Normal Condition).
- reverse polarity (Normal Condition).
- normal polarity with open neutral (Single Fault Condition).
- reverse polarity with open neutral (Single Fault Condition).
- normal polarity with open earth (Single Fault Condition).
- reverse polarity with open earth (Single Fault Condition).

LIMITS

- For UL 60601-1
 - 100 μA in Normal Condition.
 - 300 μA in Single Fault Condition.
- For IEC 60601-1:
 - 100 μA in Normal Condition.
 - 500 μA in Single Fault Condition.

F.7 Patient Leakage Current

Patient leakage currents are measured between a selected applied part and mains earth. All measurements have a true RMS only.

The following outlet conditions apply when performing the Patient Leakage Current test.

- normal polarity (Normal Condition).
- reverse polarity (Normal Condition).
- normal polarity with open neutral (Single Fault Condition).
- reverse polarity with open neutral (Single Fault Condition).
- normal polarity with open earth (Single Fault Condition).
- reverse polarity with open earth (Single Fault Condition).

LIMITS

For BF applied parts:

- 100 μA in Normal Condition.
- 500 μA in Single Fault Condition.

Operator's Manual F - 3

F.8 Mains on Applied Part Leakage

The Mains on Applied Part test applies a test voltage, which is 110% of the mains voltage using a limiting resistance, to selected applied part terminals. Current measurements are then taken between the selected applied part and earth. Measurements are taken with the test voltage (110% of mains) on applied parts in the normal and reverse polarity conditions.

The following outlet conditions apply when performing the Mains on Applied Part test.

- · Normal Polarity;
- Reversed Polarity.

LIMITS

For BF applied parts: 5000 μA.

F.9 Patient Auxiliary Current

Patient Auxiliary currents are measured between any selected Applied Part connector and the remaining Applied Part connectors. All measurements may have a true RMS response.

The following outlet conditions apply when performing the Patient Auxiliary Current test.

- normal polarity (Normal Condition);
- reverse polarity (Normal Condition);
- normal polarity with open neutral (Single Fault Condition);
- reverse polarity with open neutral (Single Fault Condition);
- normal polarity with open earth (Single Fault Condition);
- reverse polarity with open earth (Single Fault Condition).

LIMITS

For BF applied parts:

- 100 μA in Normal Condition.
- 500 μA in Single Fault Condition.

F - 4 Operator's Manual

G EMC Guidance and Manufacturer's Declaration

Resona I8 series complies with the EMC standard IEC60601-1-2:2014+A1:2020.

Intended Environments: HOME HEALTHCARE ENVIRONMENT (except for near active HF SURGICAL EQUIPMENT and the RF shielded room of an ME SYSTEM for magnetic resonance imaging).

MARNING

- The use of unapproved accessories may diminish system performance.
- Use of components, accessories, probes, and cables other than those specified may result in increased emission or decreased immunity of system.
- Operation of system, in the case that the patient physiological signal is lower than the minimum amplitude or value specified in the product specifications, results may not be obtained (results can be obtained when the HR is in the range of 30-250 bmp or when the QRS wave amplitude is between 0.5-5 mV.)
- Use of this equipment adjacent to or stacked with other equipment should be avoided because it could result in improper operation. If such use is necessary, this equipment and the other equipment should be observed to verify that they are operating normally.
- Use of accessories, transducers and cables other than those specified or provided by the manufacturer of this equipment could result in increased electromagnetic emissions or decreased electromagnetic immunity of this equipment and result in improper operation.
- Portable RF communications equipment (including peripherals such as antenna cables and external antennas) should be used no closer than 30 cm (12 inches) to any part of Resona I8 series, including cables specified by the manufacturer. Otherwise, degradation of the performance of this equipment could result.
- Resona I8 series needs special precautions regarding EMC and needs to be installed and put into service according to the EMC information provided below.
- Other devices may interfere with this equipment even though they meet the requirements of CISPR.
- Preventing conducted RF immunity. Due to technological limitations, the conducted RF immunity level are limited to 3Vrms level, conducted RF interference above 3Vrms may cause wrong diagnosis and measurements.

Operator's Manual G - 1

We suggest that you position system further from sources of conducted RF noise.

- Portable and mobile RF communications equipment could affect system.
 See below tables.
- Resona I8 series should be away from RFID, MRI, diathermy, and electrocautery testing, wireless power transfer, 5G cellular and security equipment (such as electromagnetic anti-theft system and metal detector). If the devices are near and are interfered by the concealed and undiscovered RF transmitter (for example, scanning mode changes or image disturbances affecting diagnosis), the user should immediately take mitigation measures, such as redirecting, repositioning or shielding the RF transmitter.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If Resona I8 series is operated within the electromagnetic environment listed in Table G-3, Table G-4, Table G-5, Table G-6, and Table G-7, Resona I8 series will remain safe and will provide the following basic performances:

- Imaging;
- Doppler acoustic spectral displaying;
- Taking measurements;
- Patient information;

G - 2 Operator's Manual

• Date/time information.

Table G-1

GUIDANCE AND MINDRAY DECLARATION-ELECTROMAGNETIC EMISSIONS

Resona I8 series is intended for use in the electromagnetic environment specified below. The customer or the user of system should assure that it is used in such an environment.

EMISSIONS TEST	COMPLIANCE	ELECTROMAGNETIC ENVIROMENT – GUIDANCE
RF Emissions CISPR 11	Group 1	Resona I8 series uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF Emissions CISPR 11	Class B	Resona I8 series is suitable for use in all establishments including domestic establishments and those directly connected to the public low-
Harmonic Emissions IEC 61000-3-2	Class A	voltage power supply network that supplies buildings used for domestic purposes.
Voltage Fluctuations/ Flicker Emissions IEC 61000-3-3	Compliance	

Table G-2

GUIDANCE AND MINDRAY DECLARATION-ELECTROMAGNETIC EMISSIONS

The Probe C9-3Ts/7LT4s/P7-3Ts/P7-3TE/P7-3TU/P8-3Ts/P8-2Ts/LAP13-4Cs and Fusion imaging function which integrated in Resona I8 series is intended for use in the electromagnetic environment specified below. The customer or the user of system should assure that it is used in such an environment.

EMISSIONS TEST	COMPLIANCE	ELECTROMAGNETIC ENVIROMENT – GUIDANCE
RF Emissions CISPR 11	Group 1	Resona I8 series uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF Emissions CISPR 11	Class A	Resona I8 series is suitable for use in all establishments other than domestic and those directly
Harmonic Emissions IEC 61000-3-2	Class A	connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Voltage Fluctuations/ Flicker Emissions IEC 61000-3-3	Compliance	

Operator's Manual G - 3

Table G-3

GUIDANCE AND MINDRAY DECLARATION-ELECTROMAGNETIC IMMUNITY

Resona I8 series is intended for use in the electromagnetic environment specified below. The customer or the user of system should assure that it is used in such an environment.

IMMUNITY TEST	IEC 60601 TEST LEVEL	COMPLIANCE LEVEL	ELECTROMAGNETIC ENVIRONMENT- GUIDANCE	
Electrostatic Discharge (ESD) IEC 61000-4-2	±8 kV contact; ±2 kV, ±4 kV, ±8 kV, ±15 kV air	±8 kV contact; ±2 kV, ±4 kV, ±8 kV, ±15 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.	
Electrical fast Transient / burst IEC 61000-4-4	±2 kV for power supply lines; ±1 kV for input/output lines	±2 kV for power supply lines; ±1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment. Mains power quality should be that of a typical commercial or hospital environment.	
Surge IEC 61000-4-5	± 0.5 kV, ± 1 kV line(s) to line(s); ± 0.5 kV, ± 1 kV, ± 2 kV line(s) to earth	± 0.5 kV, ± 1 kV line(s) to line(s); ± 0.5 kV, ± 1 kV, ± 2 kV line(s) to earth		
Voltage dips, Short interruptions and voltage variation on power supply input voltage (IEC 61000-4-11) $0\% \ U_T; \ 0.5 \text{ cycle}$ At $0^\circ, 45^\circ, 90^\circ, 135^\circ, 180^\circ, 225^\circ, 270^\circ \text{ and}$ 315° $0\% \ U_T; \ 1 \text{ cycle}$ $70\% \ U_T \text{ for } 25/30 \text{ cycle at } 0^\circ$ $0\% \ U_T; \ 250/300 \text{ cycle}$		$0\% \ U_T$; 0,5 cycle At 0° , 45°, 90°, 135°, 180°, 225°, 270° and 315° $0\% \ U_T$; 1 cycle 70% U_T for 25/30 cycle at 0° $0\% \ U_T$; 250/300 cycle	Mains power quality should be that of a typical commercial or hospital environment. If you require continued operation during power mains interruptions, it is recommended that our product be powered from an uninterruptible power supply or a battery.	
Power frequency (50/60 HZ) magnetic field IEC 61000-4-8		HZ) tic field		

NOTE:

 U_T is the A.C. mains voltage prior to application of the test level.

G - 4 Operator's Manual

Table G-4

GUIDANCE AND MINDRAY DECLARATION-ELECTROMAGNETIC IMMUNITY

Resona I8 series is intended for use in the electromagnetic environment specified below. The customer or the user of system should assure that it is used in such an environment.

IMMUNITY	IEC 60601 TEST	COMPLIANCE	ELECTROMAGNETIC
TEST	LEVEL	LEVEL	ENVIRONMENT-GUIDANCE
Conduced RF IEC 61000-4-6	3 Vrms 0,15 MHz – 80 MHz 6 Vrms in ISM ^a and amateur radio bands between 0,15 MHz and 80 MHz	3 Vrms 0,15 MHz – 80 MHz 6 Vrms in ISM and amateur radio bands between 0,15 MHz and 80 MHz	Portable and mobile RF communications equipment should be used no closer to any part of system, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. Recommended separation distance $d = 1.2 \times \sqrt{P}$ $d = 2 \times \sqrt{P}$
Radiated RF	10 V/m	10 V/m	d = 1.2 ×√P 80 MHz to 800 MHz d = 2.3 ×√P 800 MHz to 2.7GHz Where, P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m). Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey ^b , should be less than the compliance level in each frequency range ^c . Interference may occur in the vicinity of equipment marked with the following symbol:
IEC 61000-4-3	80MHz - 2.7GHz	80MHz - 2.7GHz	

Note 1: At 80 MHz and 800 MHz, the higher frequency range applies.

Note 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

Operator's Manual G - 5

Table G-4

GUIDANCE AND MINDRAY DECLARATION-ELECTROMAGNETIC IMMUNITY

Resona I8 series is intended for use in the electromagnetic environment specified below. The customer or the user of system should assure that it is used in such an environment.

IMMUNITY	IEC 60601 TEST	COMPLIANCE	ELECTROMAGNETIC
TEST	LEVEL	LEVEL	ENVIRONMENT-GUIDANCE

a: The ISM (industrial, scientific, and medical) bands between 150 kHz and 80 MHz are 6,765 MHz to 6,795 MHz; 13,553 MHz to 13,567 MHz; 26,957 MHz to 27,283 MHz; and 40,66 MHz to 40,70 MHz. The amateur radio bands between 0,15 MHz and 80 MHz are 1,8 MHz to 2,0 MHz, 3,5 MHz to 4,0 MHz, 5,3 MHz to 5,4 MHz, 7 MHz to 7,3 MHz, 10,1 MHz to 10,15 MHz, 14 MHz to 14,2 MHz, 18,07 MHz to 18,17 MHz, 21,0 MHz to 21,4 MHz, 24,89 MHz to 24,99 MHz, 28,0 MHz to 29,7 MHz and 50,0 MHz to 54,0 MHz.

b: Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the device is used exceeds the applicable RF compliance level above, the device should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the device. c: Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.

Table G-5

GUIDANCE AND MINDRAY DECLARATION—ELECTROMAGNETIC IMMUNITY

Resona I8 series is intended for use in the electromagnetic environment specified below. The customer or the user of system should assure that it is used in such an environment.

IMMUNITY TEST	IEC 60601 TEST LEVEL	COMPLIANCE LEVEL	ELECTROMAGNET IC ENVIROMENT – GUIDANCE
Proximity magnetic fields	8 A/m	8 A/m	/
	30 kHz	30 kHz	
IEC 61000-4-39	CW	CW	
	65 A/m	65 A/m	
	134,2 kHz	134,2 kHz	
	Pulse modulation	Pulse modulation	
	2,1 kHz	2,1 kHz	
	7,5 A/m	7,5 A/m	
	13,56 MHz	13,56 MHz	
	Pulse modulation	Pulse modulation	
	50 kHz	50 kHz	

G - 6 Operator's Manual

Table G-6 Test specifications and minimum distances

Recommended separation distances between portable and mobile RF communications equipment and system

Resona I8 series is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of system can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and Resona I8 series as recommended below, according to the maximum output power of the communications equipment. Portable and mobile radio communications equipment (e.g. two-way radio, cellular/ cordless telephones and similar equipment) should be used no closer to any part of this system, including cables, than determined according to the following method:

Test frequency (MHz)	Band(MHz)	Service	Modulation	Maximum power (W)	Distance (m)	Immunity test level (V/m)
385	380 - 390	TETRA 400	Pulse modulation 18Hz	1.8	0.3	27
450	430 -470	GMRS 460 FRS 460	FM ±5 kHz deviation 1 kHz sine	2	0.3	28
710	704 - 787	LTE Band 13,17	Pulse	0.2	0.3	9
745			modulation 217 Hz			
780			21, 112			
810	800 - 960	GSM 800/900,	Pulse	2	0.3	28
870		tetra 800, iDEN 820,	modulation 18 Hz			
930		CDMA 850, LTE Band 5				
1720	1700 -1990 GSM 1800, Pulse		2	0.3	28	
1845		CDMA 1900,	modulation 217 Hz			
1970		GSM 1900, DECT, LTE Band 1, 3, 4, 25, UMTS	217 112			
2450	2400 -2570	Bluetooth, WLAN, 802.11 b/g/n, RFID 2450, LTE Band 7	Pulse modulation 217 Hz	2	0.3	28
5240	5100 -5800	WLAN,	Pulse	0.2	0.3	9
5500		802.11 a/n	modulation 217 Hz			
5785			21/112			

Operator's Manual G - 7

Table G-7

RECOMMENDED SEPARATION DISTANCES BETWEEN PORTABLE AND MOBILE RF COMMUNICATION DEVICE AND THE SYSTEM

Resona I8 series is intended for use in an electromagnetic environment in which radiated RF disturbance are controlled. The customer or the user of system can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communication equipment (transmitters) and system as recommended below, according to the maximum output power of the communication equipment.

Rated	Separation Distance According to Frequency of Transmi			
Maximum Output power of Transmitter (W)	150kHz -80MHz Out ISM and amateur radio bands d=1.2 √P	150kHz -80MHz in ISM and amateur radio bands d=2 √P	80MHz-800MHz d=1.2 \sqrt{P}	800MHz-2.7GHz d=2.3 \sqrt{P}
	•	•	·	•
0.01	0.12	0.2	0.12	0.23
0.1	0.38	0.64	0.38	0.73
1	1.2	2	1.2	2.3
10	3.8	6.4	3.8	7.3
100	12	20	12	23

For transmitters at a maximum output power not listed above, the recommended separation distanced in meters (m) can be determined using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

If system image distortion occurs, it may be necessary to position system further from sources of conducted RF noise or to install external power source filter to minimize RF noise to an acceptable level.

Note 1: At 80 MHz and 800 MHz, the higher frequency range applies.

Note 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

Table G-8 Cable sample

No.	Name	Cable length (m)	Shield or not	Remarks
1.	Power input	2.5m	Not shielded	/
2.	SIP/SOP	< 3.0m	Shielding	/
3.	ECG cable	2.9m	Shielding	/
4.	ECG Lead	1.0m	Shielding	/
5.	Probe Cable	< 3.0m	Shielding	/
6.	Footswitch Cable	2.9m	Shielding	/

G - 8 Operator's Manual

Radio Regulatory Compliance

RF parameter

Features	2.4GHz	5GHz
Frequency Rage	2412MHz - 2483.5MHz	5.15 - 5.25GHz 5.25 - 5.35GHz 5.47 - 5.725GHz 5.725 - 5.850GHz
Modulation	DSSS and OFDM	OFDM
Output Power	≤20dBm	

NOTE:

Keep a distance of at least 20cm away from the monitor when Wi-Fi function is in use.

Operator's Manual G - 9

This page intentionally left blank.

Н

List of Vocal Commands

The ultrasound system can automatically recognize some vocal commands. You can use a microphone device to input the vocal commands as shown in the following table. After the input command is recognized, the system automatically performs the corresponding operations.

Vocal command	Operation
Hello Mindray	Open Audio Control
Turn Off	Close Audio Control
B Mode	Back to B Mode
CDI Mode	Turn on/off CDI Mode
Power Mode	Turn on/off Power Mode
M Mode	Turn on/off M Mode
PW Mode	Turn on/off PW Mode
3D	Turn on/off 3D Mode
Freeze	Freeze Image
Unfreeze	Unfreeze Image
Clear	Clear
Dual	Enter Dual Windows Format
Quad	Enter Quad Windows Format
QSave	QSave
Update	Update
Full Image	Turn on/off Full Image Mode
Middle Line	Display/Hide Middle Line
iNeedle	Turn on/off iNeedle Mode
iTouch	Turn on iTouch Mode
Depth Increase	Depth Increase One
Depth Decrease	Depth Decrease One
Gain Increase	Gain Increase One
Gain Decrease	Gain Decrease One
Gain Auto Increase	Gain Auto Increase
Gain Auto Decrease	Gain Auto Decrease
Gain Stop	Gain Stop Auto Increase/Decrease
Zoom In	Zoom In Image
Zoom Out	Zoom Out Image

Operator's Manual H - 1

Vocal command	Operation
Turn on Smart Track Mode	Turn on Smart Track Mode
Turn off Smart Track Mode	Turn off Smart Track Mode
Sound Volume Up	Turn Sound Volume Up
Sound Volume Down	Turn Sound Volume Down
Angle More	Angle More One
Angle Less	Angle Less One
Left Steer	Left Steer the Color ROI or Linear Image
Right Steer	Right Steer the Color ROI or Linear Image
BaseLine Down	Decrease the Baseline Position
BaseLine Up	Increase the Baseline Position
Save Image	Save Image
Save Clip	Save Clip
Save Screen	Save Screen
Adult Abdomen	Switch Exam Mode to Adult Abdomen
Abdomen Difficult	Switch Exam Mode to Adult Abdomen Difficult
Pediatric Abdomen	Switch Exam Mode to Pediatric Abdomen
Bowel	Switch Exam Mode to Bowel
Abdomen Vascular	Switch Exam Mode to Abdomen Vascular
Neonatal Abdomen	Switch Exam Mode to Neonatal Abdomen
Adult Cardiac	Switch Exam Mode to Adult Cardiac
Cardiac Difficult	Switch Exam Mode to Adult Cardiac Difficult
Pediatric Cardiac	Switch Exam Mode to Ped-Cardiac
Left Ventricular Opacification	Switch Exam Mode to LVO
Pediatric Cardiac	Switch Exam Mode to Neonatal Cardiac
TEE Cardiac	Switch Exam Mode to TEE Cardiac
Gynecology	Switch Exam Mode to Gynecology
1st Trimester	Switch Exam Mode to 1st Trimester
Fetal Echo	Switch Exam Mode to Fetal Echo
Kidney	Switch Exam Mode to Kidney
Urology	Switch Exam Mode to Urology
Prostate	Switch Exam Mode to Prostate
Transcranial Imaging	Switch Exam Mode to Transcranial imaging
Carotid	Switch Exam Mode to Carotid
Upper External Artery	Switch Exam Mode to Upper Ext Artery
Lower External Artery	Switch Exam Mode to Lower Ext Artery
Upper External Vein	Switch Exam Mode to Upper Ext Vein

H - 2 Operator's Manual

Vocal command	Operation	
Lower External Vein	Switch Exam Mode to Lower Ext Vein	
Thyroid	Switch Exam Mode to Thyroid	
Breast	Switch Exam Mode to Breast	
Testicle	Switch Exam Mode to Testicle	
Musculoskeletal	Switch Exam Mode to Musculoskeletal	
Superficial	Switch Exam Mode to Superficial	
Shoulder	Switch Exam Mode to Shoulder	
Intraoperative	Switch Exam Mode to Intraoperative	
Nerve Block	Switch Exam Mode to Nerve Block	
Emergency Abdomen	Switch Exam Mode to Emergency Abdomen	
Emergency FAST	Switch Exam Mode to Emergency Focused Assessment with Sonography for Trauma	
Emergency Obstetrics	Switch Exam Mode to Emergency Obstetrics	
Emergency Vascular	Switch Exam Mode to Emergency Vascular	
Emergency Superficial	Switch Exam Mode to Emergency Superficial	
Lung	Switch Exam Mode to Lung	
Neonatal Head	Switch Exam Mode to Neonatal Head	
Orthopedic	Switch Exam Mode to Orthopedic	
Renal Artery	Switch Exam Mode to Renal Artery	
IVF	Switch Exam Mode to IVF	
NT	Switch Exam Mode to NT	
Pelvic Floor	Switch Exam Mode to Pelvic Floor	
Fetal Head	Switch Exam Mode to Fetal Head	
Rectal	Switch Exam Mode to Rectal	
OB2	Switch Exam Mode to OB2	
OB3	Switch Exam Mode to OB3	
HyCoSy	Switch Exam Mode to Hysterosalpingo contrast sonography	
Open Patient Info Dialog	Open Patient Info Dialog	
Close Patient Info Dialog	Close Patient Info Dialog	
Open Probe Dialog	Open Probe Dialog	
Close Patient Info Dialog	Close Probe Dialog	
Open Review Dialog	Open Review Dialog	
Open Review Dialog	Close Review Dialog	
Open Report Dialog	Open Report Dialog	
Close Report Dialog	Close Report Dialog	
Open Preset Dialog	Open Preset Dialog	
Close Preset Dialog	Close Preset Dialog	

Operator's Manual H - 3

Vocal command	Operation
Smart IVC	Smart IVC
Smart VTI	Smart VTI
Smart B-lines	Smart B-lines


H - 4 Operator's Manual

Ultrasound Gel Heater

NOTE:

Ultrasound gel heater is a system option used for heating the ultrasound gel.

I.1 Structure

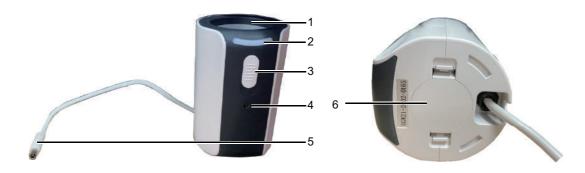

No.	Name	Description	
1.	Ultrasound gel box	Used for placing the gel.	
2.	Indicator	 The indicator is off when switching off the heater. Set the heater temperature to low; one indicator on the right becomes white. Set the heater temperature to med; two indicators on the right become white. Set the heater temperature to high; three indicators on the right become white. 	
3.	Warming control switch	Open the switch to get gel heater worked. Set the temperature of the heater.	
4.	Power supply indicator	The power supply indicator becomes green after the power supply accessing.	
5.	Power supply cable	Connect to the power socket under the control panel.	
6.	Bottom cover	/	

I.2 Specifications

Power supply

Voltage: 10-20V (±5%)

Power consumption: 12W±10%W

Operating conditions

Operator's Manual

Ambient temperature: 0°C~40°C

- Relative humidity: 20%~85% (no condensation)

Atmospheric pressure: 700hPa~1060hPa

Storage and transportation conditions

Ambient temperature: -20°C~55°C

Relative humidity: 20%~95% (no condensation)

- Atmospheric pressure: 700hPa~1060hPa

I.3 Function and Requirement

NOTE:

- When the ambient temperature is higher than the required temperature of the heater, the heater does not function.
- The heater can only heat one bottle of gel at a time.

The gel heater can make the gel reach 40°C. There are four levels for the temperature: 34°C, 37°C, 40°C and off.

When the gel is placed inside the heater, the time it takes to heat from an ambient temperature of 18°C to the desired temperature should be no more than 0.5 hours.

The ultrasound gel heater can work continuously over 12 hours.

I.4 Install the Heater

Perform the following procedure:

1. Push the gel heater into the gel heater bracket.



- 2. Plug the gel heater into the slot lying beneath the control panel.
- 3. Put the gel inside the heater, and press the power button of the gel heater.

I - 2 Operator's Manual

J Software and Hardware Specification

J.1 Operating Environment

Hardware Configuration

CPU: Intel X86, 3.7GHz

Hard disk: 128G SSD + 1T HDD

Monitor: 23.8 inch

Software Environment

Windows 10 64bit or Linux 64bit

Network Condition

Cable network: 10M/100M/1000M adaption

Wireless network:

• Protocol compatible with IEEE 802.11 ac/a/b/g/n standard

• Working frequency: 2.4G/5G

• Data security/Encryption mode: WPA, WPA2

NOTE:

The operating environment listed above is the minimum requirements for the system.

J.2 Off-the-Shelf Software

The OTS (off-the-shelf) Software of the ultrasound system are as follows:

For Windows System

Supplier	Component Name	Version	Description
Microsoft	windows 10	10.0.17763	Operation System
OpenSSL software foundation	OpenSSL	1.1.0k	Encryption Library
Mcafee	mcafee	8.0.2-125	Antivirus software
infradead	Openconnect	7.08	VPN Client
Sqlite	Sqlite	3.6.16	Database
The Qt Company	QT	5.15.8	QT Framework
apache.org	Xerces-C++	3.2.4	XML Parser

Operator's Manual J - 1

Supplier	Component Name	Version	Description
libpng	libpng	1.6.37	Image Coding&decoding
libtiff	libtiff	3.6.1	Image Coding&decoding
ffmpeg	Ffmpeg	5.1.2	Video Codec
Trillium Technology	Dicom Viewer	6.0.3.21	DICOM Viewer
7-zip	7-zip	16.02	Compress Tool
libjpeg	libjpeg	6b	Image Coding&decoding
ascension technology corporation	ATC3DG	36.0.19.8	Magnetic navigation driver

For Linux System

Supplier	Component Name	Version	Description
Linux Kernel Organization Inc.	Linux Kernel	5.15.86	Operation System
OpenSSL software foundation	OpenSSL	1.1.1s	Encryption Library
Clamav	Clamav	1.0.0	Antivirus software
infradead	Openconnect	9.01	VPN Client
Sqlite	Sqlite	3.6.16	Database
The Qt Company	QT	5.15.8	QT Framework
apache.org	Xerces-C++	3.2.4	XML Parser
OpenLDAP	OpenLDAP	2.4	LDAP Authentication
libpng	libpng	1.6.37	Image Coding&decoding
libtiff	libtiff	3.6.1	Image Coding&decoding
ffmpeg	Ffmpeg	5.1.2	Video Codec
Trillium Technology	Dicom Viewer	6.0.3.21	DICOM Viewer
7-zip	7-zip	17.04	Compress Tool
libjpeg	libjpeg	6b	Image Coding&decoding
ascension technology corporation	ATC3DG	36.0.19.8	Magnetic navigation driver

J.3 Electronic Interface

The technical descriptions of the ultrasound system, with a wireless or wired electronic interface, are as follows:

Electronic	Specification
VGA	D-sub interface, complied with RS343 level standards.

J - 2 Operator's Manual

Electronic	Specification
HDMI	Type A interface, complied with HDMI 2.1 standard.Clock synchronization.
Wi-Fi	 TCP/IP protocol bottom layer. DICOM/HL7 protocol application layer. Wireless network, complied with the IEEE 802.11 ac/a/b/g/n standard. NTP/SNTP Calibration protocol of TCP/IP. The intended information flow is from the ultrasound system in the client site to the workstation server.
USB	 Type A interface, complied with USB 3.0 standard. Fixed time synchronization pulse specified by the USB protocol.
Network port	 TCP/IP protocol bottom layer. DICOM/HL7 protocol application layer. RJ45 interface, supporting wired network 10 M/100 M/1000 M, and complied with IEEE802.3 technical standard. NTP/SNTP Calibration protocol of TCP/IP. The intended information flow is from the ultrasound system in the client site to the workstation server.
S-Video	4-core 2-component separate video interface.
ECG	 Mindray ECG interface, using USB communication, and complied with Mindray internal standard. The timestamp is defined by the data packet.
PCG	Mindray PCG interface, complied with Mindray internal standard.
MIC	3.5 mm interface, used for transmitting analog signal, and complied with CTIA international standard.

J.4 Wireless Specification

The wireless QoS (Quality of Service) related parameters are as follows:

No.	Item	Specifications
1.	Data rate	802.11a: up to 54 Mbps @ 5 GHz 802.11b: up to 11 Mbps @ 2.4 GHz
		802.11g: up to 54 Mbps @ 2.4 GHz 802.11n: up to 300 Mbps @ 2.4 GHz and 5 GHz
2.	Data security	WPA/WPA2

Operator's Manual J-3

No.	Item	Specifications
3.	Vision Distance Communications	 The ultrasound diagnostic system can be connected within 3 meters of the wireless network, and the system can perform the following operations and realize its intended use: Support DICOM transferring patient data through the wireless network (Wi-Fi). Support the remote network storage of patient data to the PC server (iStorage). Support MedSight, the interaction between the ultrasound system and mobile terminal, the ultrasound
		data management, and data query and browsing.
4.	Application-layer delay	≤10 seconds
5.	Application-layer reliability	If the connection fails, the user will be prompted by the Wi-Fi icon.
6.	System capacity	When the ultrasound system is used as the hotspot AP, no more than 1 access device is allowed.
7.	System anti-interference	It is allowed to coexist with multiple Wi-Fi devices.
8.	Network interruption alarm	 Wireless signal not connected Strong wireless signal Normal wireless signal Weak wireless signal If DICOM or other data transfer fails, a window will pop up for alarm and LOG recording.
9.	Coexist & EMC test process	Wi-Fi function is not affected when the system is imposed with radiation interference complied with AAMI TIR69:2017 &IEC60601-1-2:2014 standard.

J.5 Interoperability

External Interface	Purpose of interface	Type of data exchange	Standard s used	Electronic interface	Data transmissi on method	Interact/ Communic ation Content
Dicom/ HL7 Server	Communicat ion with Dicom /HL7 server	Transmit and Receive	Comply with the standard Dicom/HL7 protocol	Wired/ wireless	ТСР	Image data, patient data and Device Information
LDAP Server	Communicat ion with LDAP server	Transmit and Receive	Comply with the LDAP standard protocol	Wired/ wireless	TCP	Authenticati on Information

J - 4 Operator's Manual

External Interface	Purpose of interface	Type of data exchange	Standard s used	Electronic interface	Data transmissi on method	Interact/ Communic ation Content
UltraView	Communicat ion with UltraView software	Transmit	Mindray private protocol	Wired/ wireless	ТСР	Image data, patient data and Device Information
USB Interface	Medical image and patient personal information transmission. Data backup/restore. Software upgrade.	Transmit and Receive	USB protocol	USB interface	USB	Image data, patient data and Device Information
CD/DVD	Medical image and patient personal information transmission. Data backup/restore.	Transmit and Receive	USB protocol	USB interface	CD/DVD	Image data, patient data and Device Information

J.6 Security Policy

The device adopts a defense-in-depth strategy to protect the system. Below are protective measures and security tips

- It is recommended that the system administrator turns on the access control function and configures password policies based on security needs.
- For enhanced account security, it is recommended to change passwords regularly.
- Patient data is encrypted on the disk using the default password, and users can customize the password to encrypt patient data.
- It is recommended to regularly export patient data and preset data to external storage, the device supports data import to prevent accidental loss or damage.
- When the system administrator turns on the access control function, after multiple incorrect password inputs, the account will be locked for a period of time.
- Before sending the device for repair, to prevent patient data leakage, it is advisable to securely wipe patient data after performing data backups.
- After the end of the device's life process, it is advisable to securely wipe patient data.
- To protect patient privacy, the device offers the option to hide patient information during data sending and exporting. Sensitive patient information can also be hidden in the user interface (UI).
- It is recommended to enable the TLS preset option to encrypt data during network transmission, ensuring the security of the transmission channel.

Operator's Manual J - 5

- When the network transmission process is interrupted, timed out, or fails, the system will prompt the user.
- The device will record locally the detected events (not limited to security events) in the log, and user can't modify, and support exporting log data for viewing. The log format is Log4j, which is the standard log format in Java.
- The device is integrated with antivirus software, which can effectively prevent virus and malware attacks. Using a firewall to filter network traffic and effectively block unauthorized access.
- The devices are assessed for potential vulnerabilities using the latest commercial vulnerability scanning tools.
- The device implements system hardening on the operating system to enhance its availability, reliability, and security. Disabling unnecessary ports and services, as well as prohibiting automatic execution of USB drives.
- The software recovery process will perform integrity checks to prevent data from being tampered with or damaged.
- The device does not support patching by the customer. Any updates or patches applied to the
 system need to be evaluated thoroughly by Mindray. Software and hardware version updates
 are notified to users by Mindray service engineers or engineers authorized by Mindray only.
- The end of support and end of life of device cybersecurity will align with the device's lifecycle.
- For third-party components, Mindray will continue to monitor, evaluation and patch vulnerabilities in the post-market phase.
- To protect the entire healthcare system against hacking, the customer also should implement multiple layers of defense to protect the network from internal and external cyber-attack.

J - 6 Operator's Manual

K Indications For Use

N=new indication; P=previously cleared by FDA
Additional comments: Combined modesB+M, PW+B, Color + B, Power + B, PW +Color+ B, Power + PW
-В.
*Intraoperative includes abdominal, thoracic, and vascular.
**Small organ-breast, thyroid, testes.
***Other use includes Urology.
****For detection of fluid and pleural motion/sliding.
Note 1: Tissue Harmonic Imaging.
Note 2: Smart3D
Note 3:4D(Real-time 3D)
Note 4: iScape View
Note 5: TDI
Note 6: Color M
Note 7: Strain Elastography
Note 8: Contrast imaging (Contrast agent for LVO)
Note 9: V Flow
Note10: STE
Note11: STQ
Note12: Contrast imaging (Contrast agent for Liver)

K - 1 Operator's Manual

System:	Resona I8W, Resona I8, Resona I8 Exp, Resona I8S, Resona I8T, Resona IY, Nuewa I8W, Nuewa 8, Nuewa I8 Exp, Nuewa I8S, Nuewa I8T, Imagyn I8, Imagyn I8S, Imagyn I8T, Imagyn I8 Exp,											
	Nuewa IY, Resona I8 Ea	asi, E	Eagus I	8 Easi	Diagn	ostic Ult	rasound S	ystem				
Transducer:	/											
Intended Use:	Diagnostic ultrasound in	nagiı	ng or f	luid flo	w ana	lysis of t	he human	body as fe	ollows:			
Clinical App	lication	Mod	de of C	peration	on							
		В	M	Ī	CWD		Amplitud e Doppler	Combine d (specify)	Other (Specify)			
Ophthalmic	Ophthalmic							27				
	Fetal	N	N	N	N	N	N	N	Note 1, 2, 3,4, 5, 6			
	Abdominal	N	N	N	N	N	N	N	Note 1, 2,3, 4,6,10,11,12			
	Intra-operative (Specify*)	N	N	N		N	N	N	Note 1, 2, 4,6			
	Intra-operative (Neuro)	_		_								
	Laparoscopic	N	N	N				N	Note 1, 6, 12			
	Pediatric	N	N	N	N	N	N	N	Note1,2,4,6,			
	Small Organ (Specify**)	N	N	N	N	N	N	N	Note 1, 2, 4,6,7,10,11			
	Neonatal Cephalic	N	N	N	N	N	N	N	Note 1, 2, 4,6			
	Adult Cephalic	N	N	N	N		N	N	Note 1, 2, 4,6			
Fetal Imaging &	Trans-rectal	N	N	N		N	N	N	Note 1, 2,3, 4, 6, 7,10,11			
Other	Trans-vaginal	N	N	N		N	N	N	Note 1, 2,3, 4, 6, 7,10,11			
	Trans-urethral											
	Trans-esoph. (non- Card.)											
	Musculo-skeletal (Conventional)	N	N	N	N	N	N		Note 1, 2, 4,6,7,10,11			
	Musculo-skeletal (Superficial)	N	N	N	N	N	N		Note 1, 2, 4,6,7,10,11			
	Intravascular											
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1, 2, 4,6			
	Cardiac Adult	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6, 8			
	Cardiac Pediatric	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6			
Cardiac	Intravascular (Cardiac)											
	Trans-esoph. (Cardiac)	N	N	N	N	N	N	N	Note 1,5,6			
	Intra-cardiac											
Peripheral	Peripheral vessel	N	N	N	N	N	N		Note 1, 2, 4,6,7,9,10,11			
vessel	Other (Specify***)	N	N	N		N	N	N	Note 1, 2, 3, 4, 6, 7,10,11			

K - 2 Operator's Manual

Transducer:	SC6-1s										
Intended Use:	Diagnostic ultrasound imaging or fluid flow analysis of the human body as follows:										
Clinical App	lication Mode of Operation										
General (Track 1 Only)		В	M	PWD	CWD	Color Doppler	Amplitud e Doppler		Other (Specify)		
Ophthalmic	Ophthalmic										
	Fetal	N	N	N		N	N	N	Note 1, 2, 4, 5, 6		
	Abdominal	N	N	N		N	N	N	Note 1, 2, 4,6,10,11,12		
	Intra-operative (Specify*) Intra-operative (Neuro)										
	Laparoscopic										
	Pediatric										
	Small Organ (Specify**)	N	N	N		N	N	N	Note 1, 2, 4,6		
D . 1	Neonatal Cephalic										
Fetal	Adult Cephalic										
Imaging & Other	Trans-rectal										
Oulei	Trans-vaginal										
	Trans-urethral										
	Trans-esoph. (non- Card.)										
	Musculo-skeletal (Conventional)	N	N	N		N	N	N	Note 1, 2, 4,6		
	Musculo-skeletal (Superficial)										
	Intravascular										
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1, 2, 4,6		
	Cardiac Adult										
	Cardiac Pediatric										
Cardiac	Intravascular (Cardiac)										
	Trans-esoph. (Cardiac)										
	Intra-cardiac										
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1, 2, 4,6		
vessel	Other (Specify***)	N	N	N		N	N	N	Note 1, 2, 4,6		

Operator's Manual K - 3

Transducer:	SC6-1E											
Intended Use:	Diagnostic ultrasound in	Diagnostic ultrasound imaging or fluid flow analysis of the human body as follows:										
Clinical Appl	lication	Mode of Operation										
General (Track 1 Only)		В	M	PWD	CWD		Amplitud e Doppler	Combine d (specify)	Other (Specify)			
Ophthalmic	Ophthalmic											
	Fetal	N	N	N		N	N	N	Note 1, 2, 4, 5, 6			
	Abdominal	N	N	N		N	N	N	Note 1, 2, 4,6,10,11,12			
	Intra-operative (Specify*)											
	Intra-operative (Neuro)											
	Laparoscopic											
	Pediatric											
	Small Organ (Specify**)	N	N	N		N	N	N	Note 1, 2, 4,6			
L	Neonatal Cephalic											
Fetal	Adult Cephalic											
Imaging &	Trans-rectal											
Other	Trans-vaginal											
	Trans-urethral											
	Trans-esoph. (non- Card.)											
	Musculo-skeletal (Conventional)	N	N	N		N	N	N	Note 1, 2, 4,6			
	Musculo-skeletal (Superficial)											
	Intravascular											
	Thoracic/Pleural (Specify****)											
	Cardiac Adult											
	Cardiac Pediatric											
Cardiac	Intravascular (Cardiac)											
	Trans-esoph. (Cardiac)											
	Intra-cardiac											
Peripheral		N	N	N		N	N	N	Note 1, 2, 4,6			
vessel	Other (Specify***)	N	N	N		N	N	N	Note 1, 2, 4,6			

K - 4 Operator's Manual

Transducer:	SC5-1Ns										
Intended Use:	Diagnostic ultrasound imaging or fluid flow analysis of the human body as follows:										
Clinical App	ication Mode of Operation										
General (Track 1 Only)		В	M	PWD	CWD	Color Doppler	Amplitud e Doppler		Other (Specify)		
Ophthalmic	Ophthalmic										
	Fetal	N	N	N		N	N	N	Note 1, 2, 4, 5, 6		
	Abdominal	N	N	N		N	N	N	Note 1, 2, 4,6,10,11,12		
	Intra-operative (Specify*) Intra-operative (Neuro)										
	Laparoscopic										
	Pediatric										
	Small Organ (Specify**)	N	N	N		N	N	N	Note 1, 2, 4,6		
E . 1	Neonatal Cephalic										
Fetal	Adult Cephalic										
Imaging & Other	Trans-rectal										
Offici	Trans-vaginal										
	Trans-urethral										
	Trans-esoph. (non- Card.)										
	Musculo-skeletal (Conventional)	N	N	N		N	N	N	Note 1, 2, 4,6		
	Musculo-skeletal (Superficial)										
	Intravascular										
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1, 2, 4,6		
	Cardiac Adult										
	Cardiac Pediatric										
Cardiac	Intravascular (Cardiac)										
	Trans-esoph. (Cardiac)										
	Intra-cardiac										
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1, 2, 4,6		
vessel	Other (Specify***)	N	N	N		N	N	N	Note 1, 2, 4,6		

Operator's Manual K - 5

Transducer:	C6-2Gs										
Intended Use:	Diagnostic ultrasound imaging or fluid flow analysis of the human body as follows:										
Clinical App	lication Mode of Operation										
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD			Amplitud e Dopplei	Combine d (specify)	Other (Specify)		
Ophthalmic	Ophthalmic										
	Fetal	N	N	N		N	N	N	Note1,2,4,6		
	Abdominal	N	N	N		N	N	N	Note1,2,4,6,10,11,12		
	Intra-operative (Specify*)										
	Intra-operative (Neuro)										
	Laparoscopic										
	Pediatric	N	N	N		N	N	N	Note1,2,4,6		
	Small Organ (Specify**)										
	Neonatal Cephalic										
Fetal	Adult Cephalic										
Imaging &	Trans-rectal										
Other	Trans-vaginal										
	Trans-urethral										
	Trans-esoph. (non- Card.)										
	Musculo-skeletal (Conventional)										
	Musculo-skeletal (Superficial)										
	Intravascular										
	Thoracic/Pleural (Specify****)										
	Cardiac Adult										
	Cardiac Pediatric										
Cardiac	Intravascular (Cardiac)										
	Trans-esoph. (Cardiac)										
	Intra-cardiac										
Peripheral	Peripheral vessel										
vessel	Other (Specify***)	N	N	N		N	N	N	Note1,2,4,6		

K - 6 Operator's Manual

Transducer:	SC8-2s								
Intended Use:	Diagnostic ultrasound in	nagin	ıg or f	luid flo	w ana	lysis of	the human	body as f	ollows:
Clinical Appl	lication	Mod	le of (Operatio	on				
General		В	M	PWD	CWD	Color Dopplei	Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal	N	N	N		N	N	N	Note 1, 2, 4, 5, 6
	Abdominal	N	N	N		N	N	N	Note 1, 2, 4, 6,10,11, 12
	Intra-operative (Specify*) Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ (Specify**)								
L	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Γrans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric		1						
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)		1						
	Intra-cardiac		1						
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1, 2, 4, 6
vessel	Other (Specify***)	N	N	N		N	N	N	Note 1, 2, 4, 6

Transducer:	C11-3s								
Intended Use:	Diagnostic ultrasound in	nagir	ng or f	luid flov	v ana	lysis of	the human	body as f	ollows:
Clinical App	olication	Mod	de of (Operation	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	Color Dopplei	Amplitud e Doppler	d	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N		N	N	N	Note 1, 2, 4,6, 12
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N		N	N	N	Note 1, 2, 4,6
	Small Organ (Specify**)								
	Neonatal Cephalic	N	N	N		N	N	N	Note 1, 2, 4,6
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult	N	N	N		N	N	N	Note 1, 2, 4,6
	Cardiac Pediatric	N	N	N		N	N	N	Note 1, 2, 4,6
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)	1							
	Intra-cardiac	1							
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1, 2, 4,6
vessel	Other (Specify***)								

K - 8 Operator's Manual

Transducer:	C9-3Ts								
Intended Use:	Diagnostic ultrasound in	nagin	ıg or f	luid flo	w ana	lysis of t	he human	body as f	ollows:
Clinical Appl	lication	Mod	le of (Operatio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	Color Doppler	Amplitud e Dopplei	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal	N	N	N		N	N	N	Note 1, 2, 4, 6
	Abdominal	N	N	N		N	N	N	Note 1, 2, 4,6, 12
	Intra-operative (Specify*)	N	N	N		N	N	N	Note 1, 2, 4,6
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N		N	N	N	Note 1, 2, 4,6
	Small Organ (Specify**)	N	N	N		N	N	N	Note 1, 2, 4,6
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)	N	N	N		N	N	N	Note 1, 2, 4,6
	Musculo-skeletal (Superficial)	N	N	N		N	N	N	Note 1, 2, 4,6
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult						1	1	
	Cardiac Pediatric		1	1					
Cardiac	Intravascular (Cardiac)						1	1	
	Trans-esoph. (Cardiac)		1	1					
	Intra-cardiac		1	1					
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1, 2, 4,6
vessel	Other (Specify***)								

Transducer:	C4-1s								
Intended Use:	Diagnostic ultrasound in	nagir	ng or i	fluid flo	w ana	lysis of t	the human	body as fe	ollows:
Clinical App	lication	Mod	le of (Operatio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	Color Doppler	Amplitud e Dopplei		Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal	N	N	N		N	N	N	Note 1, 2, 4,6
	Abdominal	N	N	N		N	N	N	Note 1, 2, 4,6,10,11,12
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N		N	N	N	Note 1, 2, 4,6
	Small Organ (Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging & Other	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non-Card.)								
	Musculo-skeletal (Conventional)	N	N	N		N	N	N	Note 1, 2, 4,6
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1, 2, 4,6
	Cardiac Adult	N	N	N		N	N	N	Note 1, 2, 4,6
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1, 2, 4,6
vessel	Other (Specify***)	N	N	N		N	N	N	Note 1, 2, 4,6

K - 10 Operator's Manual

Transducer:	L9-3s								
Intended Use:	Diagnostic ultrasound in	nagir	ng or 1	luid flo	w ana	lysis of t	the human	body as f	ollows:
Clinical Appl	ication	Mod	le of (Operatio	on				
General(Trac k 1 Only)	Specific(Track 1 & 3)	В	M	PWD	CWD	Color Doppler	Amplitud e Doppler		Other (specify)
Ophthalmic	Ophthalmic								
	Fetal	N	N	N	N	N	N	N	Note 1,2, 4
	Abdominal	N	N	N	N	N	N	N	Note 1,2, 4,10,11,12
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N	N	N	N	N	Note 1,2, 4
	Small Organ (Specify**)	N	N	N	N	N	N	N	Note 1,2, 4,7,10,11
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)	N	N	N	N	N	N	N	Note 1,2, 4,7,10,11
	Musculo-skeletal (Superficial)	N	N	N	N	N	N	N	Note 1,2, 4,7,10,11
	Intravascular								
	Thoracic/Pleural								
	(Specify****)								
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel	N	N	N	N	N	N	N	Note 1,2, 4,7,9,10,11
vessel	Other (Specify***)								

Transducer:	L20-5s								
Intended Use:	Diagnostic ultrasound in	nagin	g or f	luid flo	w ana	lysis of t	the human	body as f	follows:
Clinical App	lication	Mod	e of C	peratio	on				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	Color Doppler	Amplitud e Doppler		Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N	N	N	N	N	Note 1, 2, 4
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ (Specify**)	N	N	N	N	N	N	N	Note 1, 2, 4,7,10,11
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)	N	N	N	N	N	N	N	Note 1, 2, 4, 7,10,11
	Musculo-skeletal (Superficial)	N	N	N	N	N	N	N	Note 1, 2, 4, 7,10,11
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel	N	N	N	N	N	N	N	Note 1, 2, 4,10,11
vessel	Other (Specify***)								

K - 12 Operator's Manual

	L14-3Ws								
Intended Use:	Diagnostic ultrasound in	nagir	ng or f	luid flo	w ana	lysis of t	he human	body as f	follows:
Clinical App	lication	Mod	le of (Operatio	on				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	Color Doppler	Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N		N	N	N	Note 1,2,4,12
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N		N	N	N	Note 1,2,4
	Small Organ (Specify**)	N	N	N		N	N	N	Note 1,2,4,7,10,11
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)	N	N	N		N	N	N	Note 1,2,4,7,10,11
	Musculo-skeletal (Superficial)	N	N	N		N	N	N	Note 1,2,4,7,10,11
	Intravascular								
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1,2,4
	Cardiac Adult			1					
	Cardiac Pediatric			1					
Cardiac	Intravascular (Cardiac)			1					
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1,2,4,7,9,10,11
vessel	Other (Specify***)								

Transducer:	L13-3Ns								
Intended Use:	Diagnostic ultrasound in	nagir	ng or f	luid flo	w ana	lysis of t	he human	body as f	follows:
Clinical App	lication	Mod	le of (Operatio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD			Amplitud e Dopplei	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N		N	N	N	Note 1,2,4,12
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N		N	N	N	Note 1,2,4
	Small Organ (Specify**)	N	N	N		N	N	N	Note 1,2,4,7,10,11
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)	N	N	N		N	N	N	Note 1,2,4,7,10,11
	Musculo-skeletal (Superficial)	N	N	N		N	N	N	Note 1,2,4,7,10,11
	Intravascular								
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1,2,4
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1,2,4,7,9,10,11
vessel	Other (Specify***)								

K - 14 Operator's Manual

Transducer:	7LT4s								
Intended Use:	Diagnostic ultrasound in	nagin	g or f	luid flo	w ana	lysis of t	he human	body as f	ollows:
Clinical App	lication	Mod	le of (Operatio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Dopplei		Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N		N	N	N	Note 1,2,4,12
	Intra-operative (Specify*)	N	N	N		N	N	N	Note 1,2,4
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N		N	N	N	Note 1,2,4
	Small Organ (Specify**)	N	N	N		N	N	N	Note 1,2,4,7
	Neonatal Cephalic	N	N	N		N	N	N	Note 1,2,4
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)	N	N	N		N	N	N	Note 1,2,4,7
	Musculo-skeletal (Superficial)	N	N	N		N	N	N	Note 1,2,4,7
	Intravascular								
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1,2,4
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1,2,4,7
vessel	Other (Specify***)								

Transducer:	L16-4Hs								
Intended Use:	Diagnostic ultrasound in	nagiı	ng or i	luid flov	v ana	lysis of t	he human	body as f	follows:
Clinical App	olication	Mod	de of (Operatio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	' ' \		Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N		N	N	N	Note 1,2,4
	Intra-operative (Specify*)	N	N	N		N	N	N	Note 1,2,4
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N		N	N	N	Note 1,2,4
	Small Organ (Specify**)	N	N	N			N	N	Note 1,2,4,7
	Neonatal Cephalic	N	N	N		N	N	N	Note 1,2,4
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)	N	N	N		N	N	N	Note 1,2,4,7
	Musculo-skeletal (Superficial)	N	N	N		N	N	N	Note 1,2,4,7
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1,2,4,7
vessel	Other (Specify***)								

K - 16 Operator's Manual

Transducer:	L12-3RCs								
Intended Use:	Diagnostic ultrasound in	nagin	ıg or f	luid flo	w ana	lysis of t	he human	body as f	follows:
Clinical App	lication	Mod	le of (Operatio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	Color Doppler	Amplitud e Dopplei	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N		N	N	N	Note 1,2,4
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N		N	N	N	Note 1,2,4
	Small Organ (Specify**)	N	N	N		N	N	N	Note 1,2,4,7
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)	N	N	N		N	N	N	Note 1,2,4
	Musculo-skeletal (Superficial)	N	N	N		N	N	N	Note 1,2,4
	Intravascular								
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1,2,4
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1,2,4
vessel	Other (Specify***)								

Transducer:	L12-3VNs								
Intended Use:	Diagnostic ultrasound in	nagiı	ng or i	luid flow	ana	lysis of t	he human	body as fe	follows:
Clinical App	lication	Mod	de of (Operation	ı				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWDC	`\\\/ 1		Amplitud e Dopplei	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N		N	N	N	Note 1,2,4
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N		N	N	N	Note 1,2,4
	Small Organ (Specify**)	N	N	N		N	N	N	Note 1,2,4,7
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)	N	N	N		N	N	N	Note 1,2,4
	Musculo-skeletal (Superficial)	N	N	N		N	N	N	Note 1,2,4
	Intravascular								
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1,2,4
	Cardiac Adult		1						
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel	N	N	N		N	N	N	Note 1,2,4
vessel	Other (Specify***)								

K - 18 Operator's Manual

Transducer:	SP5-1s								
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	luid flo	w ana	lysis of t	he human	body as f	ollows:
Clinical Appl	ication	Mod	e of C	peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	Color Doppler	Amplitud e Dopplei	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N	N	N	N	N	Note 1, 2, 4,6
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ (Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic	N	N	N	N	N	N	N	Note 1, 2, 4,6
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1, 2, 4,6
	Cardiac Adult	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6, 8
	Cardiac Pediatric	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

Transducer:	SP5-1E								
Intended Use:	Diagnostic ultrasound in	nagir	ng or f	luid flo	w ana	lysis of t	the human	body as f	ollows:
Clinical App	lication	Mod	le of (Operatio	on				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Doppler		Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N	N	N	N	N	Note 1, 2, 4,6
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ								
	(Specify**)	ļ	_	_					
	Neonatal Cephalic		4_						
Fetal	Adult Cephalic	N	N	N	N	N	N	N	Note 1, 2, 4,6
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1, 2, 4,6
	Cardiac Adult	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6,8
	Cardiac Pediatric	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

K - 20 Operator's Manual

Transducer:	SP5-1U								
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	uid flo	w ana	lysis of t	he human	body as fo	ollows:
Clinical Appl	ication	Mod	e of O	peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Dopplei	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N	N	N	N	N	Note 1, 2, 4,6
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ (Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic	N	N	N	N	N	N	N	Note 1, 2, 4,6
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1, 2, 4,6
	Cardiac Adult	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6, 8
	Cardiac Pediatric	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

Transducer:	SP5-1Ns								
Intended Use:	Diagnostic ultrasound in	nagir	ng or f	luid flo	w ana	lysis of t	the human	body as f	ollows:
Clinical App	lication	Mod	le of (Operatio	on				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Doppler		Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N	N	N	N	N	Note 1, 2, 4,6
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ (Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic	N	N	N	N	N	N	N	Note 1, 2, 4,6
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)	N	N	N		N	N	N	Note 1, 2, 4,6
	Cardiac Adult	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6, 8
	Cardiac Pediatric	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

K - 22 Operator's Manual

Transducer:	P10-4s								
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	luid flo	w ana	lysis of t	he human	body as f	ollows:
Clinical Appl	lication	Mod	e of C	peratio	on				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	Color Doppler	Amplitud e Dopplei	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N	N	N	N	N	Note 1, 2, 4, 6
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N	N	N	N	N	Note 1, 2, 4, 6
	Small Organ (Specify**)								
	Neonatal Cephalic	N	N	N	N	N	N	N	Note 1, 2, 4, 6
Fetal	Adult Cephalic	N	N	N	N	N	N	N	Note 1, 2, 4, 6
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6
	Cardiac Pediatric	N	N	N	N	N	N	N	Note 1, 2, 4, 5, 6
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

Transducer:	P8-2s								
Intended Use:	Diagnostic ultrasound in	nagiı	ng or f	luid flo	w ana	lysis of t	the human	body as f	ollows:
Clinical App	lication	Mod	de of (Operatio	on				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	1	Amplitud e Doppler		Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal	N	N	N	N	N	N	N	Note 1, 2,4,6
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric	N	N	N	N	N	N	N	Note 1, 2,4,6
	Small Organ (Specify**)								
	Neonatal Cephalic	N	N	N	N	N	N	N	Note 1, 2,4,6
Fetal	Adult Cephalic	N	N	N	N	N	N	N	Note 1, 2,4,6
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)	N	N	N	N	N	N	N	Note 1, 2,4,6
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult	N	N	N	N	N	N	N	Note 1, 2,4,5,6
	Cardiac Pediatric	N	N	N	N	N	N	N	Note 1, 2,4,5,6
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

K - 24 Operator's Manual

Transducer:	V11-3Hs								
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	uid flo	w ana	lysis of t	he human	body as f	ollows:
Clinical Appl	lication	Mod	e of C	peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	Color Doppler	Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal Abdominal	N	N	N		N	N	N	Note 1, 2, 4, 6
	Intra-operative (Specify*) Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric Pediatric		1						
	Small Organ (Specify**)								
	Neonatal Cephalic								
	Adult Cephalic								
Fetal Imaging &	Trans-rectal	N	N	N		N	N	N	Note 1, 2, 4, 6, 7,10,11
Other	Trans-vaginal	N	N	N		N	N	N	Note 1, 2, 4, 6, 7,10,11
	Trans-urethral Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular Thoracic/Pleural								
	(Specify****)								
	Cardiac Adult								
	Cardiac Pediatric		1						
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac		1						
Peripheral	Peripheral vessel		1						
vessel	Other (Specify***)	N	N	N		N	N	N	Note 1, 2, 4, 6, 7,10,11

Transducer:	V11-3HBs								
Intended Use:	Diagnostic ultrasound in	nagir	ng or f	luid flov	w ana	lysis of t	he human	body as f	ollows:
Clinical App	lication	Mod	le of C)peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	('\\\/ I\		Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal	N	N	N		N	N	N	Note 1, 2, 4, 6
	Abdominal								
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ (Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal	N	N	N		N	N	N	Note 1, 2, 4, 6, 7
Other	Trans-vaginal	N	N	N		N	N	N	Note 1, 2, 4, 6, 7
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult		1	1 1					
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)	N	N	N		N	N	N	Note 1, 2, 4, 6, 7

K - 26 Operator's Manual

	ELC13-4s										
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	uid flo	w ana	lysis of t	the human	body as f	ollows:		
Clinical Appl	ication	Mod	e of O	peratio	n						
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Doppler		Other (Specify)		
Ophthalmic	Ophthalmic										
	Fetal Abdominal Intra-operative										
	(Specify*)										
	Intra-operative (Neuro)										
	Laparoscopic Pediatric						<u> </u>				
	Small Organ (Specify**)										
	Neonatal Cephalic										
Fetal	Adult Cephalic										
Imaging &	Trans-rectal	N	N	N		N	N	N	Note 1,2,4,6,7,10,11		
Other	Trans-vaginal	N	N	N		N	N	N	Note 1,2,4,6,7,10,11		
	Trans-urethral										
	Trans-esoph. (non- Card.)										
	Musculo-skeletal (Conventional)										
	Musculo-skeletal (Superficial)										
	Intravascular										
	Thoracic/Pleural (Specify****)										
	Cardiac Adult										
	Cardiac Pediatric										
Cardiac	Intravascular (Cardiac)										
	Trans-esoph. (Cardiac)										
	Intra-cardiac										
Peripheral	Peripheral vessel										
vessel	Other (Specify***)	N	N	N		N	N	N	Note 1,2,4,6,7,10,11		

Transducer:	CB10-4s								
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	uid flo	w ana	lysis of t	he human	body as fo	ollows:
Clinical App	lication	Mod	e of O	peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD			Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal								
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ (Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal	N	N	N		N	N	N	Note 1,2,4,6,10,11
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)	N	N	N		N	N	N	Note 1,2,4,6,10,11

K - 28 Operator's Manual

	CW5s								
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	uid flo	w ana	lysis of t	he human	body as fe	ollows:
Clinical Appl	lication	Mode	e of O	peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	Color Doppler	Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal Abdominal Intra-operative								
	(Specify*) Intra-operative (Neuro)								
	Laparoscopic Pediatric				N				
	Small Organ (Specify**)				IN				
	Neonatal Cephalic								
Fetal	Adult Cephalic				N				
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel		1		N				
vessel	Other (Specify***)								

Transducer:	CW2s								
Intended Use:	Diagnostic ultrasound in	nagin	g or f	luid flo	w ana	lysis of t	he human	body as fo	ollows:
Clinical App	lication	Mod	le of C	peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal Abdominal Intra-operative								
	(Specify*) Intra-operative (Neuro) Laparoscopic								
	Pediatric Small Organ				N				
	(Specify**) Neonatal Cephalic								
Fetal	Adult Cephalic			-	N				
Imaging &	Trans-rectal		+	-					
Other	Trans-vaginal		-						
	Trans-urethral Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular Thoracic/Pleural (Specify****)								
	Cardiac Adult			1	N				
	Cardiac Pediatric				N				
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

K - 30 Operator's Manual

Transducer:	DE11-3Ws								
Intended Use:	Diagnostic ultrasound in	nagin	g or f	luid flo	w ana	lysis of t	the human	body as f	follows:
Clinical Appl	ication	Mod	e of C	peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD	Color Doppler	Amplitud e Dopplei	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal	N	N	N		N	N	N	Note 1, 3,4,6
	Abdominal								
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ (Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal	N	N	N		N	N	N	Note 1, 3,4,6,7,10,11
Other	Trans-vaginal	N	N	N		N	N	N	Note 1, 3,4,6,7,10,11
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric		1						
Cardiac	Intravascular (Cardiac)		1						
	Trans-esoph. (Cardiac)								
	Intra-cardiac		1	1					
Peripheral	Peripheral vessel		1	1					
vessel	Other (Specify***)	N	N	N		N	N	N	Note 1, 3,4,6,7,10,11

Transducer:	SD8-1s								
Intended Use:	Diagnostic ultrasound in	nagir	ng or f	luid flo	w ana	lysis of t	the human	body as f	ollows:
Clinical App	lication	Mod	le of (Operatio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD			Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal	N	N	N		N	N	N	Note 1, 3, 4, 6
	Abdominal	N	N	N		N	N	N	Note 1, 3, 4, 6, 12
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ (Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

K - 32 Operator's Manual

Transducer:	SD8-1E								
Intended Use:	Diagnostic ultrasound in	nagir	ng or 1	fluid flo	w ana	lysis of t	he human	body as f	ollows:
Clinical App	lication	Mod	le of (Operatio	on				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Dopplei		Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal	N	N	N		N	N	N	Note 1, 3, 4, 6
	Abdominal	N	N	N		N	N	N	Note 1, 3, 4, 6, 12
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ								
	(Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult						1	1	
	Cardiac Pediatric						1	1	
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)								
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

Transducer:	P7-3Ts								
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	uid flo	w ana	lysis of t	he human	body as fo	ollows:
Clinical App	lication	Mod	e of O	peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD		Color Doppler	Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal Abdominal								
	Intra-operative (Specify*) Intra-operative (Neuro)								
	Laparoscopic								
Fetal	Pediatric Small Organ (Specify**)								
	Neonatal Cephalic Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)	N	N	N	N	N	N	N	Note 1,5,6
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

K - 34 Operator's Manual

Transducer:	P7-3TE								
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	uid flo	w ana	lysis of t	the human	body as f	ollows:
Clinical App	lication	Mod	e of O	peratio	on				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal Abdominal Intra-operative								
	(Specify*) Intra-operative (Neuro)		-						
	Laparoscopic Pediatric								
	Small Organ (Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging & Other	Trans-rectal Trans-vaginal								
Other	Trans-urethral								
	Trans-esoph. (non-Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)	N	N	N	N	N	N	N	Note 1,5,6
	Intra-cardiac		1						
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

Transducer:	P7-3TU								
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	uid flo	w ana	lysis of t	he human	body as fo	ollows:
Clinical App	lication	Mode	e of O	peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Doppler		Other (Specify)
Ophthalmic	Ophthalmic								
•	Fetal								
	Abdominal								
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ								
Fetal	(Specify**)								
	Neonatal Cephalic								
	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)	N	N	N	N	N	N	N	Note 1,5,6
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

K - 36 Operator's Manual

Transducer:	P8-3Ts								
Intended Use:	Diagnostic ultrasound in	naginį	g or fl	uid flo	w ana	lysis of t	he human	body as fo	ollows:
Clinical Appl	ication	Mode	e of O	peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal Abdominal Intra-operative								
<u>(</u>	(Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic Pediatric								
	Small Organ (Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	` ` `	N	N	N	N	N	N	N	Note 1,5,6
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

Transducer:	P8-2Ts								
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	uid flo	w ana	lysis of 1	the human	body as fo	ollows:
Clinical App	lication	Mod	e of O	peratio	n				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal								
	Abdominal								
	Intra-operative (Specify*)								
	Intra-operative (Neuro)								
	Laparoscopic								
	Pediatric								
	Small Organ (Specify**)								
	Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral								
	Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric								
Cardiac	Intravascular (Cardiac)								
	Trans-esoph. (Cardiac)	N	N	N	N	N	N	N	Note 1,5,6
	Intra-cardiac								
Peripheral	Peripheral vessel								
vessel	Other (Specify***)								

K - 38 Operator's Manual

Transducer:	LAP13-4Cs								
Intended Use:	Diagnostic ultrasound in	nagin	g or f	luid flo	w ana	lysis of t	the human	body as f	follows:
Clinical App	lication	Mod	e of C	peratio	on				
General (Track 1 Only)	Specific (Track 1 & 3)	В	M	PWD	CWD		Amplitud e Doppler	Combine d (specify)	Other (Specify)
Ophthalmic	Ophthalmic								
	Fetal Abdominal Intra-operative								
	(Specify*) Intra-operative (Neuro) Laparoscopic	N	N	N		N	N	N	Note 1, 6,12
	Pediatric Small Organ	ı v	Į N	Į,		μ γ	14	μ ν	1, 0,12
	(Specify**) Neonatal Cephalic								
Fetal	Adult Cephalic								
Imaging &	Trans-rectal								
Other	Trans-vaginal								
	Trans-urethral Trans-esoph. (non- Card.)								
	Musculo-skeletal (Conventional)								
	Musculo-skeletal (Superficial)								
	Intravascular								
	Thoracic/Pleural (Specify****)								
	Cardiac Adult								
	Cardiac Pediatric			1					
Cardiac	Intravascular (Cardiac)			1					
	Trans-esoph. (Cardiac)								
	Intra-cardiac			1					
Peripheral	Peripheral vessel			1					
vessel	Other (Specify***)								

Transducer:	SC9-2s											
Intended Use:	Diagnostic ultrasound in	nagin	g or fl	uid flow	analysis of	the human	body as fe	ollows:				
Clinical		Mod	e of O	peration								
Application General	Specific (Track 1 & 3)	В	M	-	WDColor	lAmplitud	Combine	Other (Specify)				
(Track 1	Specime (Track T & 3)		111	1		re Dopplei		(Specify)				
Only)			specify)									
Ophthalmic	Ophthalmic											
	Fetal	N	N	N	N	N	N	Note 1				
	Abdominal	N	N	N	N	N	N	Note 1				
	Intra-operative (Specify*)											
	Intra-operative (Neuro)											
	Laparoscopic											
	Pediatric											
	Small Organ (Specify**)											
	Neonatal Cephalic											
Fetal	Adult Cephalic											
Imaging &	Trans-rectal											
Other	Trans-vaginal											
	Trans-urethral											
	Trans-esoph. (non-											
	Card.)											
	Musculo-skeletal											
	(Conventional) Musculo-skeletal											
	(Superficial) Intravascular											
		N	N	N	N	N	N	Note 1				
	Urology Thoracic/Pleural	IN	IN	IN	IN .	IN	IN	Note 1				
	(Specify***)											
	Cardiac Adult						-					
	Cardiac Pediatric			+ +			-					
Cardiac	Intravascular (Cardiac)			+ +			-					
Caraiac	Trans-esoph. (Cardiac)											
	Intra-cardiac											
Peripheral vessel	Peripheral vessel	N	N	N	N	N	N	Note 1				

K - 40 Operator's Manual